


# **Chevrolet**



# **Monte Carlo**

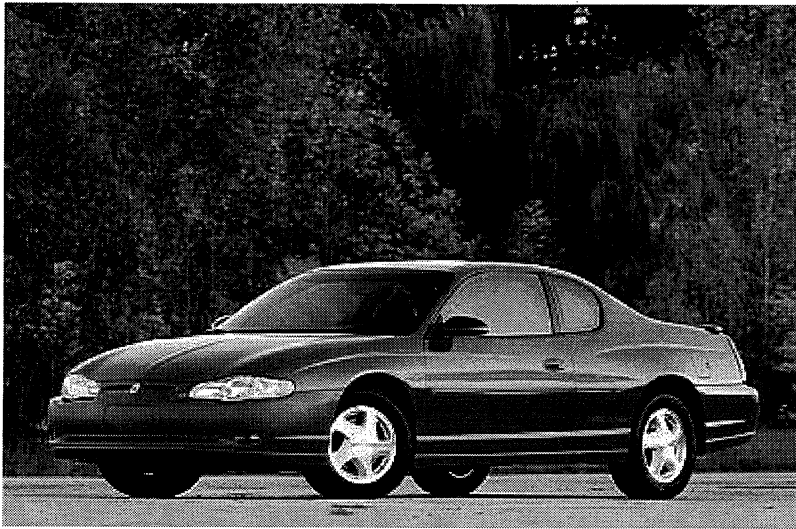

# **2001**



# Table of Contents

Product Information .....	1
Monte Carlo : Blends Past, Present And Future .....	1
Monte Carlo Model Lineup .....	1
Monte Carlo For 2001 .....	1
Monte Carlo Styling .....	1
The Heart And Soul Of A Champion .....	2
Monte Carlo Comfort, Convenience And Safety .....	2
Monte Carlo Safety & Security .....	2
Monte Carlo — Classy With A Wild Streak .....	3
What's New .....	3
Brand Identity .....	3
New for 2001 .....	3
Exterior .....	3
Interior .....	3
Functional .....	3
Safety and Security .....	3
Vehicle Overview .....	4
Monte Carlo History .....	4
Models .....	4
Customer Profile .....	4
Buyer Demographics: .....	4
Marketing target .....	4
Media target .....	4
Competition .....	4
Color and Trim .....	5
Exterior Colors .....	5
Interior Fabric and Colors .....	5
Engines .....	5
3400 and 3800 V6 engines .....	5
Technical Features of the 3400 V6 Engine: .....	5
Technical Features of the 3800 Series II V6 Engine: .....	6
Transmission .....	6
Technical Features of the 4-Speed Automatic Transmission: .....	6
Suspension .....	6
Steering .....	7
Brakes .....	7
Wheels and Tires .....	7
Wheels .....	7
Tires .....	7
Feature Availability .....	8
Interior Features .....	8
Sound Systems .....	9
Exterior Features .....	9
Functional Features .....	9
Specifications .....	11
Engine .....	11
Transmission Specifications .....	11
Steering Specifications .....	11
Brake Specifications .....	12

Dimensions .....	12
Exterior .....	12
Interior .....	12
Capacities and Weights .....	12
Trailer <sup>(1)</sup> .....	13
Vehicle Identification .....	14
Vehicle Identification Number (VIN) .....	14
VIN Derivative .....	15
Vehicle Certification Label .....	16
Service Parts Identification Label (SPID) .....	17
Tire Placard .....	18
Engine ID and VIN Derivative Location .....	19
3.8L Engine VIN Derivative Location(c) .....	19
3400 VIN E Engine .....	21
Engine and Transmission Usage .....	21
Transmission ID and VIN Derivative Location .....	22
Transmission ID and VIN Derivative Location 4T60-E/4T65-E(c) .....	22
Transmission VIN Location 4T65-E, M15/MN3/MN7(c) .....	23
Transaxle VIN Derivative Stamping(c) .....	23
Labeling - Anti-Theft .....	24
Notice .....	24
RPO Code List .....	25
Technical Information .....	28
Maintenance and Lubrication .....	28
Capacities - Approximate Fluid .....	28
Automatic Transmission .....	28
Engine Cooling System .....	28
Engine Oil .....	28
Fuel Tank .....	28
Power Steering .....	28
Maintenance Items .....	28
Tire Inflation Pressure Specifications .....	28
Fluid and Lubricant Recommendations .....	29
Descriptions and Operations .....	30
Power Steering System Description .....	30
Power Steering Pump Description .....	30
Power Steering Gear Description .....	30
Steering Wheel and Column - Standard Description and Operation .....	31
Vehicle Steering .....	31
Vehicle Security .....	31
Driver Convenience .....	31
Driver Safety .....	31
Suspension Description and Operation .....	31
Front Suspension .....	31
Rear Suspension .....	32
Wheels and Tires .....	33
General Description .....	33
Tread Wear Indicators Description .....	33
Metric Wheel Nuts and Bolts Description .....	34
Tire Inflation Description .....	34
P-Metric Sized Tires Description .....	35



Tire Inflation Monitoring System Operation .....	36
Driveline System Description and Operation.....	36
Wheel Drive Shafts .....	36
Boots (Seals) And Clamps .....	36
Front Wheel Drive Shaft Tri-pot Joint (Inner Joint) .....	37
Front Wheel Drive Shaft Constant Velocity Joint (Outer Joint).....	37
Braking System Description and Operation .....	38
Hydraulic Brake System Description and Operation .....	38
System Component Description.....	38
Hydraulic Brake Master Cylinder Fluid Reservoir.....	38
Hydraulic Brake Master Cylinder .....	38
Hydraulic Brake Pressure Balance Control System .....	38
Hydraulic Brake Pipes and Flexible Brake Hoses .....	38
Hydraulic Brake Wheel Apply Components .....	38
System Operation.....	38
Brake Assist System Description and Operation .....	38
System Component Description.....	38
Brake Pedal .....	38
Brake Pedal Pushrod.....	38
Vacuum Brake Booster.....	38
Vacuum Source .....	39
Vacuum Source Delivery System .....	39
System Operation.....	39
Disc Brake System Description and Operation.....	39
System Component Description.....	39
Disc Brake Pads .....	39
Disc Brake Rotors.....	39
Disc Brake Pad Hardware .....	39
Disc Brake Caliper Hardware .....	39
System Operation.....	39
Park Brake System Description and Operation .....	40
System Component Description.....	40
Park Brake Pedal Assembly .....	40
Park Brake Cables.....	40
Park Brake Cable Equalizer .....	40
Park Brake Apply Lever.....	40
Park Brake Actuator/Adjuster .....	40
Drum Brake Shoes .....	40
System Operation.....	40
ABS Description and Operation .....	40
Antilock Brake System .....	40
Engine Description and Operation.....	42
Engine Mechanical – 3.4L.....	42
Mechanical Specifications .....	42
General Data .....	42
Cylinder Bore .....	42
Piston.....	42
Crankshaft .....	42
Connecting Rod .....	43
Camshaft .....	43
Valve System .....	43
Valve Spring .....	43
Oil Pump .....	44
Fastener Tightening Specifications .....	44

Engine Component Description .....	46
Lubrication .....	47
Drive Belt System Description .....	48
Engine Mechanical – 3.8L .....	49
Mechanical Specifications .....	49
General Data .....	49
Lubrication System .....	49
Type of Lubrication .....	49
Cylinder Bore .....	49
Piston (VIN K) .....	49
Piston (VIN 1) .....	50
Crankshaft .....	50
Connecting Rod .....	51
Camshaft .....	51
Balance Shaft .....	51
Valve System .....	51
Valve Spring .....	52
Flywheel .....	52
Fastener Tightening Specifications .....	52
Engine Component Description .....	53
Engine Construction .....	53
Lubrication Description .....	54
Engine Cooling .....	56
Fastener Tightening Specifications .....	56
Cooling System Description and Operation .....	56
Coolant Heater .....	56
Cooling System .....	56
Cooling Cycle .....	56
Coolant .....	57
Radiator .....	57
Pressure Cap .....	57
Coolant Recovery System .....	57
Air Baffles and Seals .....	58
Water Pump .....	58
Thermostat .....	58
Engine Oil Cooler .....	58
Transmission Oil Cooler .....	59
Engine Electrical .....	59
Fastener Tightening Specifications .....	59
Battery Usage .....	59
Battery Temperature vs Minimum Voltage .....	60
Starter Motor Usage .....	60
Generator Usage .....	60
RPO K43 .....	60
RPO KG7 .....	60
Battery Description and Operation .....	61
Reserve Capacity .....	62
Cold Cranking Amperage .....	62
Circuit Description .....	62
Starting System Description and Operation .....	62
Charging System Description and Operation .....	63
Engine Controls .....	64
Engine Controls – 3.4L .....	64
Ignition System Specifications .....	64

Fastener Tightening Specifications .....	64
Fuel System Specifications .....	65
Fuels in Foreign Countries (Gasoline Engines) .....	65
Engine Controls – 3.8L .....	66
Ignition System Specifications .....	66
Fastener Tightening Specifications .....	66
Fuel System Specifications .....	67
Exhaust System .....	68
Fastener Tightening Specifications .....	68
Exhaust System Description .....	68
Resonator .....	68
Catalytic Converter .....	68
Muffler .....	69
Transmission/Transaxle Description and Operation .....	70
Automatic Transmission – 4T65E .....	70
Fastener Tightening Specifications .....	70
Transmission General Specifications .....	71
Fluid Capacity Specifications .....	71
Transmission Component and System Description .....	72
Transmission General Description .....	72
Mechanical Components .....	72
Adapt Function .....	73
Upshift Adapts (1-2, 2-3 and 3-4) .....	73
Steady State Adapts .....	73
Automatic Transmission Shift Lock Control Description .....	73
Abbreviations and Meanings .....	i
Conversion - English/Metric .....	i
Equivalents - Decimal and Metric .....	iii
Fasteners .....	i
Metric Fasteners .....	i
Fastener Strength Identification .....	i
Prevailing Torque Fasteners .....	ii
All Metal Prevailing Torque Fasteners .....	ii
Nylon Interface Prevailing Torque Fasteners .....	ii
Adhesive Coated Fasteners .....	ii
Metric Prevailing Torque Fastener Minimum Torque Development .....	iii
All Metal Prevailing Torque Fasteners .....	iii
Nylon Interface Prevailing Torque Fasteners .....	iii
English Prevailing Torque Fastener Minimum Torque Development .....	iv
All Metal Prevailing Torque Fasteners .....	iv
Nylon Interface Prevailing Torque Fasteners .....	iv

---

**This Page  
Intentionally Left  
Blank.**

## Product Information

### Monte Carlo : Blends Past, Present And Future

DETROIT — The Chevrolet Monte Carlo has had a dual personality ever since it was introduced in 1970. And for 2001, that continues, with character that is best described as "classy with a wild streak." "This is a car with an incredible 30-year heritage," says brand manager Don Parkinson. "So last year's challenge of developing an all-new Monte Carlo was very significant." The strength of Monte Carlo is reflected in the fact that it is the best-selling car in the midsize coupe market, and that Monte Carlo race cars have won more NASCAR Winston Cup races than any car in history.

### Monte Carlo Model Lineup

Two model choices are offered:

- Monte Carlo LS
- Monte Carlo SS.

### Monte Carlo For 2001

Even though Monte Carlo was just introduced in 2000, several significant changes for 2001 continue to build upon the brand's sporty heritage:

- The LS Model boasts a new Sport Appearance package option that includes 5-spoke sport aluminum wheels and a race-inspired rear spoiler. Available in four colors, the Sport Appearance package is designed for customers who want to escape from the ordinary.
- On the SS Model, a High Sport Appearance package is available with specific ground effects, unique wheels, a race-inspired rear spoiler and stainless steel exhaust tips (all different from items on the existing SS exterior). Available in four specific colors, the High Sport Appearance package has the bloodlines of a NASCAR dominator. (A black Monte Carlo SS with the High Sport Package will be the official pace car of the Brickyard 400 NASCAR race on August 5.)
- Traction control is now standard on the LS for improved acceleration on most slippery surfaces.
- A driver's side side-impact air bag is now standard on SS and available on the LS.
- The OnStar system is now standard on the SS and available on the LS for added safety, security and peace of mind.
- Three new paint colors: White, Light Sandrift Metallic and Dark Bronzemist Metallic are available.
- A neutral interior color is now available.

"The new Monte Carlo successfully captures the attributes that have made Monte Carlos such a hit for so many years," Parkinson says. "And it does that in a way that's right for today's customers. It's a great blend of past, present and future, and we're very proud of it."

### Monte Carlo Styling

Potential buyers have given the Monte Carlo's new styling a strong thumbs-up in customer clinics, and at the rate the new generation car has been selling since its introduction suggests that the designers have further strengthened the car's winning heritage. "Coupe buyers want a car that gets them noticed," says Parkinson. "We certainly took that into consideration when we were redesigning it." Monte Carlo designers borrowed a number of styling cues from past Monte Carlos, such as the long sloping hood, short rear deck, distinctive "C" pillars and athletic stance. The new Monte Carlo's aggressive body styling was also influenced by a need for aerodynamic efficiency, not just to get better fuel economy, but to reflect the body style that's used successfully in NASCAR competition.

## **The Heart And Soul Of A Champion**

The Chevrolet Monte Carlo's componentry delivers an impressive vehicle structure, excellent engine power, good fuel efficiency and fun-to-drive performance.

Monte Carlo has a chassis and body architecture that provides remarkable rigidity and stiffness. These two ingredients absolutely critical to build quality provide the elimination of noise and enhance ride and handling. A unique extruded aluminum engine cradle helps isolate engine noise and vibration, and a magnesium cross-car beam (MagBeam) spans the entire width of the instrument panel, ensuring vibration-free mounting points for heating, ventilation and audio systems. Power is provided by two proven engines: the 3400 V6 and the award-winning 3800 V6. The 3400 V6 is standard on LS models and provides the most standard horsepower and torque among its primary competition. The 3800 V6 is standard on Monte Carlo SS generating 200 hp and 225 lb-ft of torque. Two suspension systems provide sporting ride and handling characteristics in keeping with Monte Carlo's image. Both are 4-wheel independent systems with MacPherson struts and specially tuned deflected-disc shock absorber valving at all four corners. As an added enhancement for 2001, electronic traction control is now standard equipment on all Monte Carlo models. The Monte Carlo SS features the same basic components, but includes different stabilizer bars that are specifically calibrated to allow even more spirited driving, without giving up excellent ride quality. The SS is equipped with more aggressive P225/60R-16 Goodyear Eagle RSA Performance Tires for additional traction. Agility is a prerequisite for a midsize coupe, and Monte Carlo continues to deliver thanks to its power rack-and-pinion steering, largest-in-class 4-wheel disc brakes with antilock braking system, and standard 16-inch wheel and tire packages designed for each Monte Carlo model.

## **Monte Carlo Comfort, Convenience And Safety**

Even with the interior roominess and sophisticated appointments of a luxury vehicle, Monte Carlo owners get a race-car inspired feel. The cockpit-style dash and ergonomically designed seat surround the driver and achieve an elusive balance between excellent lateral support and long-term comfort. By designing the interior first, engineers gave Monte Carlo as much as seven more cubic feet of interior room than any non-GM competitor in its class. In addition to a wide array of convenience features, Monte Carlo also offers thoughtful items such as auxiliary lighting in the glove box and trunk, electric rear window defogger, delayed exit/entry lighting with theatre dimming, electric outside rear view mirrors, 60/40 split-folding rear seat and more. All Monte Carlos also include some "smart" car features such as a delayed headlamp-off feature to give customers time to get from their car to inside the house. Also, the door locking and unlocking functions can be programmed to unlock both doors, driver's door only or neither door as the customer chooses. The list of standard features for Monte Carlo SS gets even longer, including front fog lamps, rear spoiler, dual exhaust outlets, standard remote keyless entry, enhanced gauge package, leather-wrapped steering wheel with built-in radio controls and driver and front passenger climate controls.

## **Monte Carlo Safety & Security**

For enhanced safety and security, Monte Carlo offers a passive theft-deterrent system, a tire-inflation monitoring system, engine coolant and oil life and level monitors, battery rundown protection, and standard daytime running lamps. Monte Carlo also meets all 2003 government occupant protection standards two years ahead of time. It also offers standard features such as daytime running lamps (DRLs), ABS disc brakes and safety cage construction, contributing to Monte Carlo's accident avoidance and occupant protection measures. Optional on Monte Carlo LS and standard on the SS is a driver's side-impact air bag. A few other items are available as options on all Monte Carlos, like a Driver Information Center that provides a compass, outside temperature, a trip computer and Homelink™ system, and an electric sliding sunroof.

Both Monte Carlo engines include a "limp-home" mode, which allows the car to be driven to the nearest service station in the event of an unexpected loss of coolant.

Plus, all Monte Carlo SS models come equipped with the OnStar™ system. With one push of a button, drivers can connect with an OnStar™ advisor and take advantage of a wide variety of valuable services. With automatic air bag notification and emergency service that will pinpoint your location and send help if or when a customer needs it, Monte Carlo owners will feel secure with OnStar™.

### **Monte Carlo — Classy With A Wild Streak**

"The Monte Carlo provides coupe buyers with more than they might expect," says Parkinson. "For all of its amenities and segment-leading comfort and safety features, the 2001 Monte Carlo remains affordable to own and operate, and that's what really makes it a great value and a great Chevrolet." With the improvements for 2001 and its performance heritage Monte Carlo endures as "Classy with a Wild Streak."

## **What's New**

### **Brand Identity**

The Chevrolet Monte Carlo was born for the street and bred for the racetrack. A choice of two V6 engines, 4-wheel ABS disc brakes with tire pressure monitor and Traction Control help to ensure that Monte Carlo is ready for the road. The members of Team Monte Carlo strengthen the breed on the NASCAR tour of races.

### **New for 2001**

#### **Exterior**

- New colors include White, Sandrift Metallic and Medium Bronzemist Metallic
- An optional LS Sport Appearance Package including aluminum wheels and a pace car replica rear spoiler. The Sport Appearance Package is available in White, Black, Torch Red and Galaxy Silver.
- An optional High Sport Appearance Package is available on the SS and includes specific ground effects, High Sport 16-inch aluminum wheels, race-inspired rear spoiler, stainless-steel exhaust tips and instrument cluster identification. This package is available in Black, White, Torch Red and Galaxy Silver Metallic. Models in Black can be ordered with color-keyed ground effects or Galaxy Silver ground effects. Torch Red will feature Galaxy Silver ground effects. White and Galaxy Silver models will feature color-keyed ground effects only.

#### **Interior**

- A Neutral interior is available

#### **Functional**

- Traction Control is standard on LS

#### **Safety and Security**

- A seat-mounted driver-side air bag is standard on the SS\*
- OnStar system is factory-installed and now optional for LS and standard for SS†

\* Always use safety belts and proper child restraints, even with air bags. Children are safer when properly secured in a rear seat. Front-seat side-impact air bags help reduce the risk of certain injuries to front-seat occupants in side impacts. See the Owner's Manual for more safety information.

† One-year OnStar Safety and Security service contract included as standard on SS models. Call 1-800-ONSTAR-7 for system limitations and details.

## Vehicle Overview

### Monte Carlo History

Introduced in September 1969 as a 1970 model.

- 1970 — 454 cu. in., 360-hp SS 454 introduced.
- 1973 — Second-generation Monte Carlo design debuted; "S" and Landau packages added.
- 1976 — Restyled front end; 454 cu. in. V8 discontinued.
- 1978 — Third-generation Monte Carlo introduced; first V6 became available.
- 1980 — Turbocharged 3.8L, 170-hp V6 introduced.
- 1981 — New exterior design; Computer Command Control introduced.
- 1982 — Diesel V6 and V8 debut. Turbo V6 and Landau discontinued.
- 1983 — SS model debuted.
- 1986 — SS Aero Coupe and Luxury Sport models debuted.
- 1988 — Monte Carlo discontinued midyear.
- 1995 — Fourth-generation Monte Carlo introduced.
- 1996 — Driver and front-passenger temperature controls, 4-wheel disc brakes (Z34), extended-life coolant, platinum-tip spark plugs and extended-life automatic transmission fluid debuted.
- 1997 — Power sunroof, Daytime Running Lamps and Change Oil Soon indicator introduced.
- 1998 — 3800 Series II V6 replaces 3.4L on Z34 models; dealer-installed OnStar system optional.
- 2000 — Fifth-generation Monte Carlo introduced.

### Models

- Monte Carlo LS
- Monte Carlo SS

### Customer Profile

The Chevrolet Monte Carlo competes in the midsize coupe market and attracts young-minded, image-conscious, outer-directed individuals. Buyers enjoy spirited driving and a car that transforms driving into an uplifting experience.

### Buyer Demographics:

#### Marketing target

Median age (years):	Late 30s to mid-40s
Median household income:	\$57,000
Purchaser (male/female):	49%/51%
Principal driver (male/female):	38%/62%
Married:	59%
College graduates:	32%

#### Media target

Median age:	25—54 Years
Median household income:	\$60,000+
Purchaser (male/female):	45%/55%

### Competition

- Chrysler Sebring
- Dodge Avenger
- Honda Accord Coupe
- Toyota Camry Solara



## Color and Trim

### Exterior Colors

- White
- Sandrift Metallic
- Medium Bronzemist Metallic (interim availability)
- Galaxy Silver Metallic
- Dark Jade Green Metallic
- Dark Carmine Red Metallic
- Torch Red
- Black
- Navy Blue Metallic

### Interior Fabric and Colors

- Neutral Cloth
- Neutral Sport Cloth
- Medium Gray Cloth
- Medium Gray Sport Cloth
- Ebony Cloth
- Ebony Sport Cloth
- Neutral Leather seating surfaces
- Ebony Leather seating surfaces


## Engines

### 3400 and 3800 V6 engines

The 3400 V6 engine is standard on Monte Carlo LS. The 3800 V6 is standard on Monte Carlo SS.


#### Technical Features of the 3400 V6 Engine:

- Roller rocker arms
- Mass airflow sensor
- High-resolution ignition system
- Assembled camshaft design
- Die-cast aluminum structural oil pan cross-bolted to the main bearing caps
- Multec II fuel injectors
- Sequential Fuel Injection (SFI)
- Limp-home mode
- Torque axis engine mount system
- Platinum-tip spark plugs
- Oil life monitor
- Oil and coolant level sensors
- Change Oil Soon indicator
- Extended-life engine coolant\*

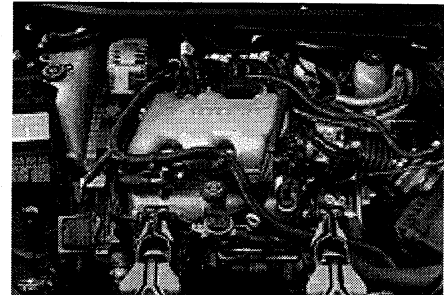

### Technical Features of the 3800 Series II V6 Engine:

- Broad torque band
- Overhead valve (OHV) design
- High performance pushrod valvetrain
- Symmetrical ports and combustion chambers
- Sequential Fuel Injection (SFI)
- Dual Electronic Spark Control (ESC)
- Tuned-for-performance throttle body
- Direct accessory mounting
- Glass-reinforced nylon composite intake manifold and air induction system
- Laminated oil pan with an integrated baffle, gasket and rear crankshaft seal carrier
- Oil life monitor
- Change Oil Soon indicator
- Extended-life engine coolant\*
- Quiet exhaust system
- Platinum-tip spark plugs
- Multec II fuel injectors
- Limp-home mode

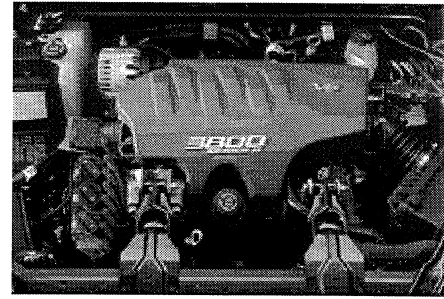

\* Maintenance needs vary with different uses and driving conditions. See the Owner's Manual for more information.

### Transmission

- 4T65-E 4-Speed Automatic Overdrive Transmission
- The 4T65-E transmission is standard on both the Monte Carlo LS and SS.

### Technical Features of the 4-Speed Automatic Transmission:

- Dual-phase sprocket that drives two half-width chains rotating 180 degrees out of phase, helping reduce the gear noise generated by each chain
- Family of electronic controls that help protect against over-revving the engine in low-range gears and monitor changes in driving conditions to adjust and maintain optimum shift quality
- Long-life transmission fluid which is designed to need replacing at up to 100,000 miles of normal service\*

\* Maintenance needs vary with different uses and driving conditions. See the Owner's Manual for more information.

### Suspension

Both Monte Carlo LS and SS models feature a 4-wheel independent suspension with specially tuned MacPherson struts at all four corners.

- MacPherson struts with specially tuned deflected disc shock absorber valving at all four corners
- Front strut tower-to-tower brace similar to NASCAR Winston Cup race cars
- Variable-rate coil springs
- Hollow 30mm front and 17.2mm rear stabilizer bars

For a more performance-oriented feel, Monte Carlo SS has a Sport Suspension Package designed to handle high performance driving characteristics with the 3800 Series II V6 engine. Its features include:

- Four-stage front strut valving that allows a finer degree of ride control over a wide range of suspension movement
- Spring rates increased to help provide enhanced control of body roll during cornering
- Hollow 30mm front and 17.2mm rear stabilizer bars

## Steering


- Power rack-and-pinion for both models

## Brakes


- Power-assisted, 4-wheel disc
- Standard ABS for Impala LS
- Compact brake booster
- Largest-in-class brake components

## Wheels and Tires


### Wheels

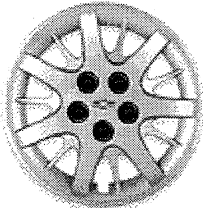


16-inch steel with deluxe bolt-on wheel cover - standard on Monte Carlo LS

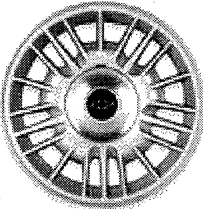


16-inch Custom aluminum wheel - optional on Monte Carlo LS

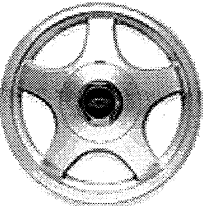

16-inch Sport 5-spoke aluminum wheel — optional on Monte Carlo LS with the LS Sport Appearance Package

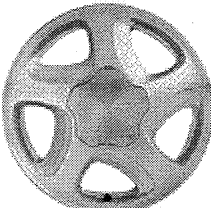

16-inch Sport aluminum wheel — standard on Monte Carlo SS

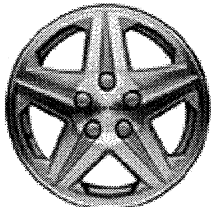

16-inch High Sport aluminum wheel — optional on Monte Carlo SS with the High Sport Appearance Package

### Tires

- P225/60R-16 Goodyear Eagle GA Touring — standard on Monte Carlo LS
- P225/60R-16N Goodyear Eagle RSA Performance — standard on Monte Carlo SS
- Compact spare tire for all models

## Feature Availability

	LS	SS
<b>Interior Features</b>		
Air bags — driver and front-passenger(1)	S	S
Air bag — driver-side side-impact(1)	O	S
Air conditioning — manual with CFC-refrigerant	S	NA
Auxiliary lighting — glove box and trunk	S	S
Cargo net — luggage-area	O(2)	S
Child safety seat — tether anchors	S	S
Climate controls — driver and front-passenger temperature controls	O	S
Center console — floor-mounted and overhead storage compartment	S	S
Cup holders		
— dual center console	S	S
— dual rear in center armrest	S	S
Cruise control with resume speed	O(2)	S
Defogger — electric, rear-window	S	S
Door locks — power with lockout protection	S	S
Driver Information Center — includes trip computer with outside temperature, compass, HomeLink and theft-alarm systems	O	O(2)
Filtration system — pollen air	NA	S
Floor mats — carpeted, front and rear	S	S
Instrumentation — tachometer, engine temperature, odometer and fuel gauge	S	S
— engine oil pressure and voltmeter	NA	S
Glass — Solar-Ray tinted windshield and rear	S	S
Lights, interior — delayed entry/exit with theatre dimming	S	S
Low engine coolant level monitor light	S	S
Low engine oil level and oil wear indicator monitors	S	S
Mirror — inside rearview, automatic dimming	O(3)	O(2)
Mirrors — illuminated visor vanity (LH and RH)	O(3)	S
OnStar system(4)	O(3)	S
PASSlock® theft-deterrent system	S	S
Safety trunk release — manual, inside	S	S
Seats — Custom Cloth, front buckets	S	NA
— Sport Cloth, front buckets	NA	S
— split-folding, rear	S	S
— leather accent seating surfaces, front buckets (requires 6-way power driver seat)	O	O
— 6-way power driver	O	O
— 6-way power passenger	O(5)	O(5)
— driver and front-passenger heated (requires leather accent seating surfaces and power driver and front-passenger seat)	O	O
Steering wheel radio controls — includes leather-wrapped steering wheel	O	S
Sunroof — electric, sliding	O	O
Steering column — Tilt-Wheel™	S	S
Trunk — power opener	S	S
Windows — power with driver's Express-Down feature	S	S

**Sound Systems**

NOTE: All sound systems feature an Electronically Tuned Receiver (ETR) and include a digital clock, TheftLock, seek-scan, auto tone control and Radio Data System (RDS).

AM/FM stereo with cassette player and extended range speakers	S	S
AM/FM stereo with compact disc player and 6-speaker premium sound system with auxiliary amplifier	O	O
AM/FM with compact disc and cassette players, and 6-speaker premium sound system with auxiliary amplifier	O	O
Remote CD wiring harness, includes premium 6-speaker system with auxiliary amplifier	O	O

**Exterior Features**

Daytime Running Lamps with Automatic Exterior Lamp Control	S	S
Front fascia cover — license plate depression	O	O
LS Sport Appearance Package — includes 5-spoke aluminum wheels and race-inspired rear spoiler	O	NA
Mirrors — black, dual, power	S	S
— heated	O	O(2)
Moldings — color-keyed, body-side	S	S
Spoiler — rear decklid	O(6)	S
SS High Sport Appearance Package — includes specific ground effects, race-inspired rear spoiler, instrument cluster identification, dual stainless-steel exhaust tips and unique 16-inch aluminum wheels	NA	O
Tires — P225/60R-16 Goodyear Eagle GA Touring	S	NA
— P225/60R-16N Goodyear Eagle RS-A Performance	NA	S
Wheels		
— 16-inch steel with deluxe bolt-on wheel cover	S	NA
— 16-inch styled-aluminum	O	NA
— 16-inch 5-spoke Sport aluminum	O(6)	NA
— 16-inch Sport aluminum	NA	S
— 16-inch High Sport aluminum (requires High Sport Appearance Package)	NA	O
Wipers — intermittent variable windshield	S	S

**Functional Features**

Battery-rundown protection	S	S
Brakes — 4-wheel disc with antilock (ABS)	S	S
Engine — 3400 V6 SFI	S	NA
— 3800 Series II V6 SFI	NA	S
Exhaust system — stainless-steel (dual outlet with SS)	S	S
Remote Keyless Entry	O(2)	S
Suspension — 4-wheel independent	S	S
— Ride and Handling	S	NA
— Sport	NA	S
Tire Inflation Monitor system	S	S
Traction Control — Electronic	S	S
Transmission — 4-speed electronically controlled automatic	S	S
Safety and Security Features	LS	SS
Air bags — driver and front-passenger <sup>1</sup>	S	S
Air bag — driver-side side-impact <sup>1</sup>	O	S
Battery-rundown protection	S	S
Brake system — 4-wheel disc antilock (ABS)	S	S
Brake/transmission shift interlock	S	S
Child safety seat — tether anchors	S	S

## 2001 Chevrolet Monte Carlo Restoration Kit

Daytime Running Lamps with Automatic Exterior Lamp Control	S	S
OnStar system(4)	O(3)	S
Remote Keyless Entry	O(2)	S
Safety trunk release — manual, inside	S	S
Tire Inflation Monitor system	S	S
Traction Control — Electronic	S	S

S Standard.

O Optional. (Some options may be available only as part of a Preferred Equipment Group.)

NA Not available.

(1) Always use safety belts and proper child restraints, even with air bags. Children are safer when properly secured in a rear seat. Front-seat side-impact air bags help reduce the risk of certain injuries to front-seat occupants in side impacts. See the Owner's Manual for more safety information.

(2) Requires optional PEG 1SB.

(3) Requires optional PEG 1SC.

(4) One-year OnStar Safety and Security service contract included as standard on Monte Carlo SS models. Call 1-800-ONSTAR-7 for system limitations and details.

(5) Requires power driver seat, leather seating surfaces, and driver and front-passenger heated seats.


(6) Requires LS Sport Appearance Package.

## Specifications

Engine		
	3400 V6 SFI	3800 V6
RPO	LA1	L36
Displacement (cu. in./liters)	205/3.4	231/3.8
Bore x stroke		
(in.)	3.62 x 3.31	3.80 x 3.40
(mm)	92.0 x 84.1	96.5 x 86.4
Compression ratio	9.5:1	9.4:1
Cylinder block material	cast-iron	cast-iron
Cylinder head material	cast-aluminum	cast-iron
Valvetrain configuration	OHV	OHV
Valves per cylinder	2	2
Induction system	SFI	SFI
Ignition system	direct	direct
Lifters	hydraulic roller	hydraulic roller
Cam drive	chain	chain
Coolant capacity (quarts/liters)	11.3/10.7	11.7/11.1
Oil capacity (quarts/liters)	4.5/4.3	4.3/4.1
Alternator rating (amps)	105	105
Battery (SAE capacity rating, cca)	600	690
Recommended unleaded fuel	87 octane	87 octane
Maximum engine speed (RPM)	6000	6000
Horsepower/kW @ engine RPM	180/134 @ 5200	200/149 @ 5200
Torque (lb.-ft./N-m @ engine RPM)	205/278 @ 4000	225/305 @ 4000
Transmission Specifications		
Type	4-speed automatic	
RPO	MX0 (4T65-E)	
Gear ratios		
First gear	2.92	
Second gear	1.57	
Third gear	1.00	
Fourth gear	0.71	
Reverse	2.39	
Final drive ratio (Sedan/LS)	2.86/3.05	
Fluid capacity (quarts/liters)	10.0/9.5	
Converter size (in./mm)	9.6/245	
Case material	cast-aluminum	
Steering Specifications		
Ratio (overall)	13.3:1	
Turns stop-to-stop	2.26	
Turning diameter curb-to-curb (ft./m)		
— LS	36.7/11.2	
— SS	38.0/11.59	

**Brake Specifications**

Front Brakes	U.S. Standard	Metric
— rotor size (diam. x thick.)	11.93 x 1.26 in.	303 x 32mm
— swept area	303.0 sq. in.	1955.0 sq. cm
Rear Brakes	U.S. Standard	Metric
— rotor size (diam. x thick.)	10.94 x .43 in.	277 x 11mm
— swept area	276.0 sq. in.	1781.0 sq. cm

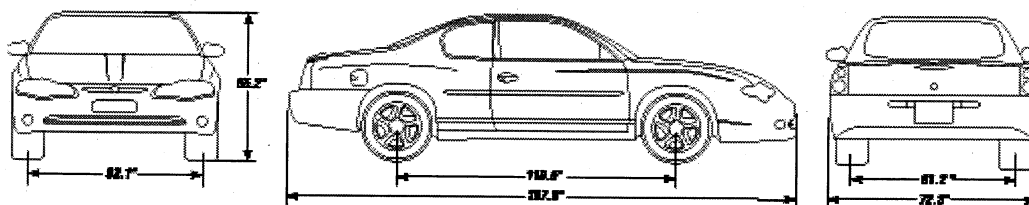**Dimensions**

NOTE: All dimensions shown are inches/millimeters unless otherwise noted.

<b>Exterior</b>	
Wheelbase	110.5/2807
Length	197.9/5026
Width	72.3/1836
Height	55.2/1403
Tread width	
— front	62.1/1576
— rear	61.2/1554
<b>Interior</b>	
Headroom	
— front	38.1/967
— rear	36.5/927
Legroom	
— front	42.4/1076
— rear	35.8/909
Shoulder room	
— front	58.3/1480
— rear	57.8/1468
Hip room	
— front	55.2/1402
— rear	55.5/1409
Passenger volume (cu. ft./liters)	98.2/2780.7
Cargo volume (cu. ft./liters)	15.8/447.4
Interior volume, EPA index (cu. ft./liters)	114.0/3228.1
<b>Capacities and Weights</b>	
Seating	5
Fuel tank (gal./lit. approx.)	17.0/64.4
Curb weight (lbs./kg, est.)	
— LS	3340/1515.0
— SS	3391/1538.2




## 2001 Chevrolet Monte Carlo Restoration Kit

<b>Trailer<sup>(1)</sup></b>	
Model	all models
Gross trailer weight (lbs./kg, up to)	1000/454
Max. tongue load (lbs./kg)	100/46

- (1) Properly equipped. Maximum trailer weight is calculated by assuming only the driver is in the tow vehicle. Optional equipment, passengers or cargo will reduce the trailer weight rating.

## Vehicle Identification

### Vehicle Identification Number (VIN)

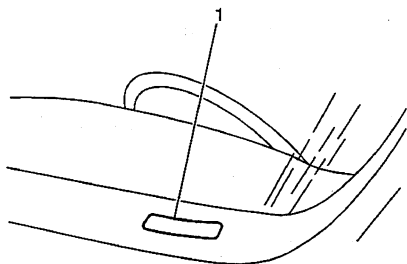

The vehicle identification number (VIN) plate is the legal identifier of the vehicle. The VIN plate is located on the upper LH corner of the Instrument Panel and can be seen through the windshield from the outside of the vehicle:

Position	Definition	Character	Description
1	Country of Origin	2	Canada
2	Manufacturer	G	General Motors
3	Make	1	Chevrolet
4	Car Line	W	Impala, Monte Carlo
5	Series	F H W X	Impala Impala LS Monte Carlo LS Monte Carlo SS
6	Body Style	1 5	2 Door Coupe (GM Style 27) 4 Door Sedan (GM Style 19)
7	Restraint System	2	Active (Manual) Belts with Driver and Passenger Supplemental Inflatable Restraint
8	Engine Type	E K	6 Cylinder MFI High Output 3400 (RPO Code LA1) 6 Cylinder MFI High Output 3800 (RPO Code L36)
9	Check Digit	--	--
10	Model Year	1	2001
11	Plant Location	1 9	Oshawa #2 Oshawa #1
12-17	Plant Sequence Number	--	--

## VIN Derivative


All engines and transmissions are stamped or laser etched with a partial vehicle identification number (VIN), which was derived from the complete VIN. A VIN derivative contains the following nine positions:

Position	Definition	Character	Description
1	GM Division Identifier	1	Chevrolet
2	Model Year	1	2001
3	Assembly Plant	1	Oshawa #2
		9	Oshawa #1
4-9	Plant Sequence Number	--	--

A VIN derivative can be used to determine if a vehicle contains the original engine or transmission, by matching the VIN derivative positions to their accompanying positions in the complete VIN:

VIN Derivative Position	Equivalent VIN Position
1	3
2	10
3	11
4-9	12-17

## Vehicle Certification Label

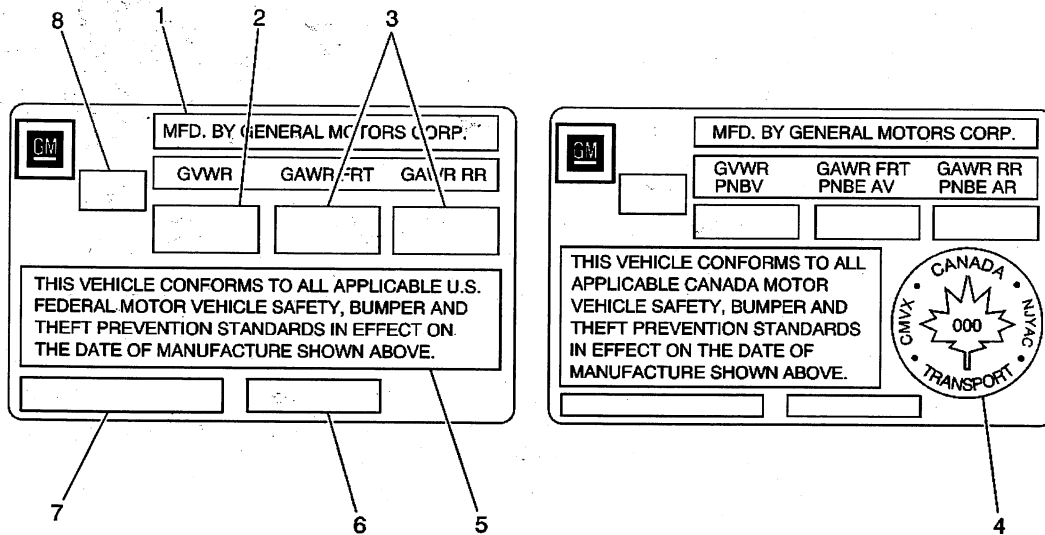

- (1) Name of Manufacturer
- (2) Gross Vehicle Weight-Rating
- (3) Gross Axle Weight-Rating, Front, Rear
- (4) Canadian Safety Mark (w/RPO Z49)
- (5) Certification Statement
- (6) Vehicle Class Type (Pass Car, etc.)
- (7) Vehicle Identification Number
- (8) Date of Manufacture (Mo/Yr)

The vehicle certification label is permanently located on the edge of the driver's door. Refer to this label in order to obtain the following information:

- The Gross Vehicle Weight Rating (GVWR)
- The Gross Axle Weight Rating (GAWR), front and rear

The Gross Vehicle Weight (GVW) must not exceed the Gross Vehicle Weight Rating (GVWR).


The GVW is the weight of the vehicle and everything the vehicle carries. Include the following items when figuring the GVW:

- The base vehicle weight (factory weight)
- The weight of any added vehicle accessories
- The weight of the driver and the passenger
- The weight of any cargo being carried

The front and rear Gross Axle Weights (GAW) must not exceed the Gross Axle Weight Ratings (GAWR), front and rear.

The GAW is the weight exerted on one of the axles (front or rear).

## Service Parts Identification Label (SPID)

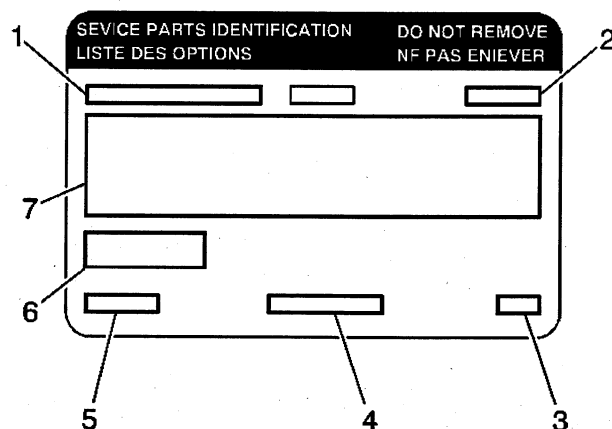

- (1) Vehicle Identification Number
- (2) Engineering Model Number (Vehicle Division, Vehicle Line and Body Style)
- (3) Interior Trim and Decor Level
- (4) Exterior (Paint Color) WA Number
- (5) Paint Technology
- (6) Special Order Paint Colors and Numbers
- (7) Vehicle Option Content

The service parts identification label is used to identify the original equipment options built into the specific vehicle being serviced. The option content of a vehicle is very important information to properly service the vehicle.

## Tire Placard

The diagram shows a rectangular Tire Placard with the following fields and callouts:

- 1** points to the 'FRT' (Front) position box under 'OCCUPANTS'.
- 2** points to the 'TOTAL' box under 'OCCUPANTS'.
- 3** points to the 'VEHICLE CAP WT.' (Vehicle Capacity Weight) box.
- 4** points to the 'COLD TIRE PRESSURE PSI/KPa' section.
- 5** points to the 'SPEED RTG.' (Speed Rating) section.
- 6** points to the 'TIRE SIZE' section.
- 7** points to the 'MODEL' section.
- 8** points to the 'FRT' (Front) position box under 'TIRE SIZE'.
- 9** points to the 'RR' (Rear) position box under 'TIRE SIZE'.

The placard itself contains the following text and boxes:

**TIRE-LOADING INFORMATION**

OCCUPANTS: FRT, C/R, RR, TOTAL

VEHICLE CAP WT.: LBS., KG

MAX. LOADING @ GVWR SAME AS VEHICLE CAPACITY WEIGHT

MODEL: [ ]

TIRE SIZE: [ ]

SPEED RTG.: [ ]

COLD TIRE PRESSURE PSI/KPa: [ ]

FRT, RR, SPA: [ ]

IF TIRES ARE HOT AND 4PSI/28KPa SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION

- (1) Specified Occupant Seating Positions
- (2) Total Occupant Seating
- (3) Maximum Vehicle Capacity Weight
- (4) Tire Pressures, Front, Rear, and Spare
- (5) Tire Speed Rating, Front, Rear, and Spare
- (6) Tire Label Code
- (7) Engineering Model Minus First Character
- (8) Tire Sizes, Front, Rear, and Spare
- (9) Vehicle Identification Number


The Tire Placard is permanently located on the edge of the driver's door. Refer to the placard to obtain:

- The maximum vehicle capacity weight
- The cold tire inflation pressures
- The tire sizes (original equipment tires)
- The tire speed ratings (original equipment tires)


## Engine ID and VIN Derivative Location

The eighth character in the Vehicle Identification Number (VIN) identifies the engine. Adhesive-backed labels attached to the engine, laser etching or stampings on the engine block indicate the engine unit number/date code. All engines are stamped with a VIN derivative. For more information on the VIN derivative, refer to VIN Derivative above.


### 3.8L Engine VIN Derivative Location(c)

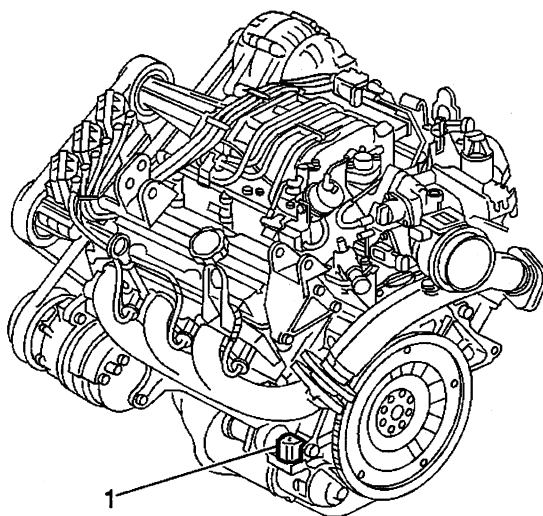

The primary location (1) of the VIN derivative for the 3800 L36 engine is on the engine block above the starter motor.

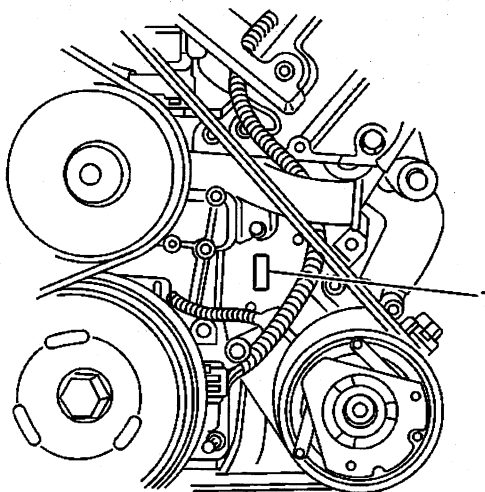


The secondary location (1) of the VIN derivative for the 3800 L36 engine is on the engine block below the water pump.

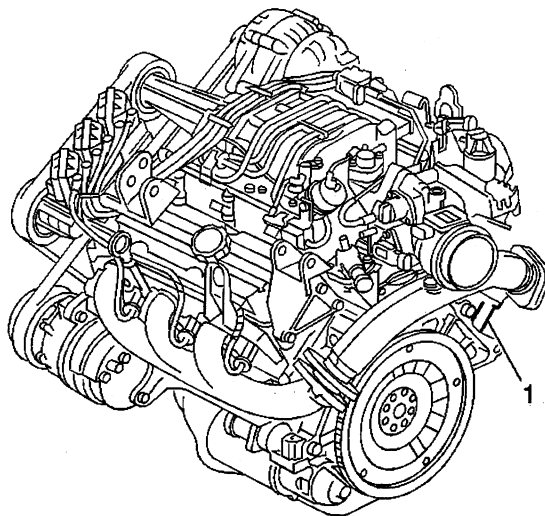


The primary location (1) of the Engine ID for the 3800 L36 engine is in the center of the LH rocker arm or LH side of the engine in the oil pan rail area of the engine.



## 3400 VIN E Engine

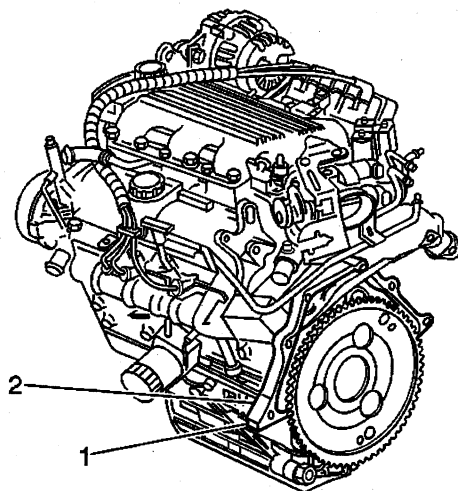

The primary (1) and optional (2) location of the VIN derivative for the 3400 LA1 engine is on the lower left front transaxle mounting surface.

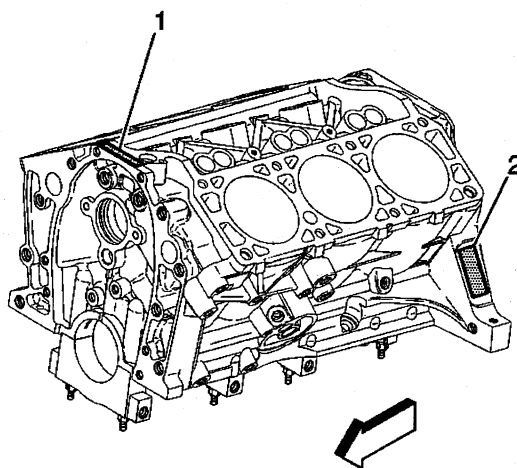

The eighth digit of the Vehicle Identification Number (VIN) identifies the engine. The adhesive-backed labels attached to the engine, laser etching or stampings on the engine block indicate the engine unit number/date code. All engines are stamped with a VIN derivative.


The primary location (1) of the Engine ID for the 3400 (LA1) engine is on top of the RH rocker arm cover or front of RH oil pan rail. The secondary location (2) of the VIN derivative for the 3400 (LA1) engine is above the starter motor on the engine block. For additional information, refer to VIN Derivative above.

## Engine and Transmission Usage

Body Type	Car Line (Division)	Engine	Fuel System	Engine Rpo	Transmis sion	Transmis sion Rpo
W	Monte Carlo LS	3.4L V6	MFI	LA1	4T65E	M15
W	Monte Carlo SS	3.8L V6	MFI	L36	4T65E	M15


## Transmission ID and VIN Derivative Location

### Transmission ID and VIN Derivative Location 4T60-E/4T65-E(c)

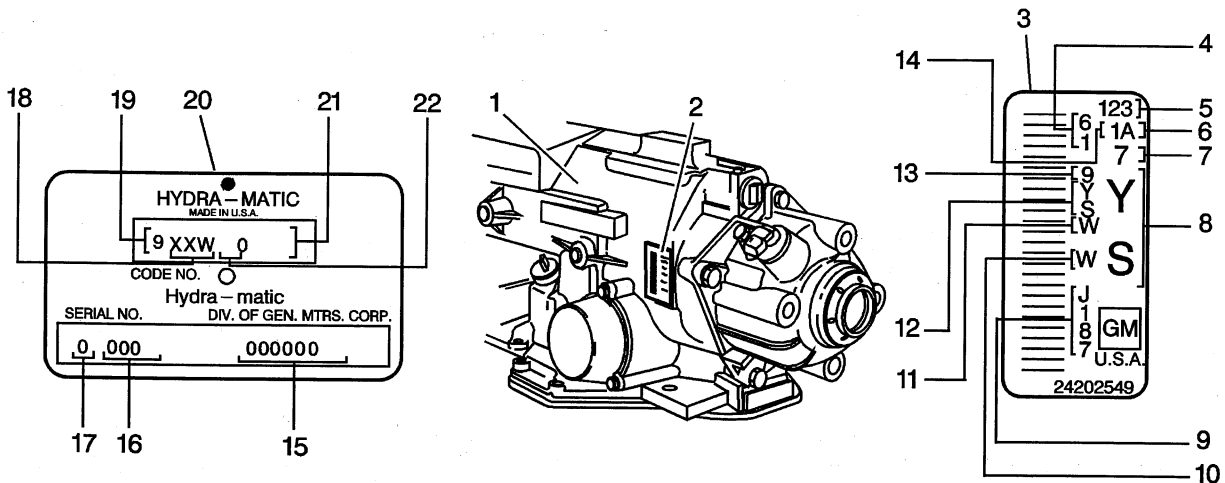


- (1) Goodwrench® Tag Location
  - (2) Year
  - (3) Not Used
  - (4) Remanufacturing Site Code
  - (5) Serial Number
  - (6) Julian Date
  - (7) Year Remanufactured
  - (8) Model
  - (9) Transmission Identification Plate Location
  - (10) Model Year
  - (11) Line Build
  - (12) GM Production Code
  - (13) Julian Date
  - (14) Shift
  - (15) Model
  - (16) Serial Number in Base Code 31
  - (17) W = Warren Assembly Plant
  - (18) 4T65-E
  - (19) Model
  - (20) Vehicle Identification Number (VIN) Derivative Stamping Location
- All automatic transmissions have a metal identification (ID) nameplate (9) attached to the case exterior.

### Transmission VIN Location 4T65-E, M15/MN3/MN7(c)

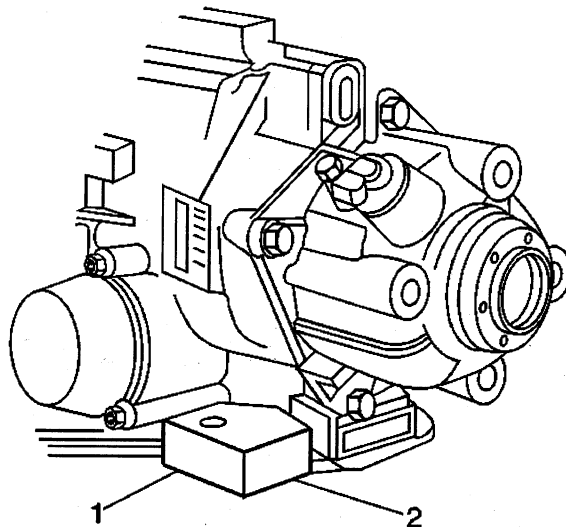

The primary (1) and secondary (2) Manual Tooling VIN Derivative Locations are on the casting of the transmission housing.

### Transaxle VIN Derivative Stamping(c)

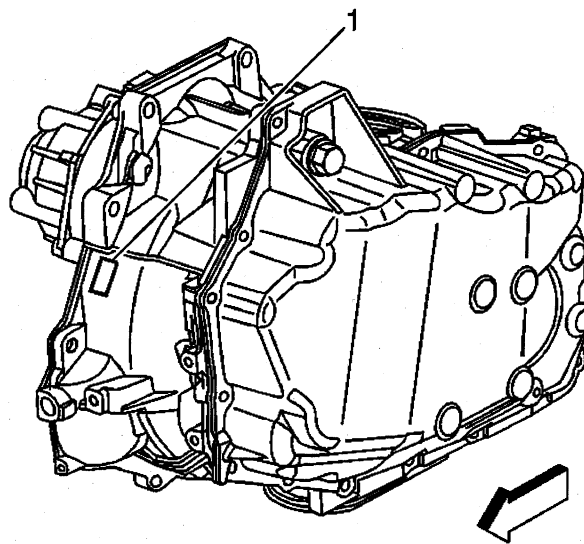

The location for the Semi-Automatic VIN derivative (1) is on the transmission housing.

## **Labeling - Anti-Theft**

### **Notice**

The anti-theft label found on some major body panels **MUST** be covered before performing any painting, rustproofing or undercoating procedures. The mask must also be removed following those procedures. Failure to follow these precautionary steps may result in liability for violation of the Federal Vehicle Theft Prevention Standard, and subject the vehicle owner to possible suspicion that the part was stolen.

Federal law requires General Motors (GM) to affix a label to certain parts on selected vehicles with the Vehicle Identification Number (VIN). The purpose of this law is to reduce the number of motor vehicle thefts by helping in the tracing and recovery of parts from stolen vehicles. The certification label on the driver's door qualifies as a theft deterrent label.

The theft deterrent label will be permanently affixed to an interior surface of the part and will contain the complete VIN. The label on replacement parts will contain the letter R, the manufacturer's logo, and the acronym for the Department of Transportation (DOT). **DO NOT** deface, or remove these labels.

## RPO Code List

The production/process codes provide the description of the Regular Production Options (RPOs) used on the vehicle. The RPO list is printed on the Service Parts Identification Label. The following is a list of the RPO abbreviations and the description of each:

RPO	Description
AG1	Adjuster, Driver Seat Power 6-Way
AG2	Adjuster, Passenger Seat Power 6-Way
AK5	Restraint System, Front Seat Inflatable Driver and Passenger
AM6	Seat, Front Split Bench
AM9	Split Folding Rear Seat
AP9	Convenience Net
AR9	Seat Front Bucket, Deluxe
AU0	Lock Control, Remote Entry
AW6	Restraint System Seat, Inflatable, Driver and Passenger Front, Inflatable Driver Side
A75	Seat Cushion Back Front, HD
A76	Seat Cushion Back Rear, HD
A90	Lock control rear Compartment Lid, Remoter Control Electric Release
A98	Lock control rear Compartment Lid, Remoter Control Electric Release, Ignition Powered
BAG	Parts Package Export
BF9	Covering Front Floor Mats--Delete
BYP	Sales Sport Equipment Package
B18	Ornamentation Interior, Deluxe
B34	Covering, Front Floor Mats, Carpeted Inserts
B35	Covering, Rear Floor Mats, Carpeted Inserts
B42	Covering Floor Mat, Luggage Compartment, Fitted
CD5	Wiper System Windshield, High Speed Antilift
CF5	Roof, Sun Glass, Sliding Electric
CJ3	HVAC System, Air Conditioner Front, Manual Temperature Control, Auxiliary Temperature Control
CKD	Vehicle Completely Knocked Down (CKD)
C60	HVAC System Air Conditioner, Front Manual Controls
C79	Interior Lamp, Roof Rail, Courtesy and Single Reading
DA1	Armrest, Rear Seat Storage
DD6	Mirror, Inside Rear View Light Sensitive, Dual Reading Lamps
DG7	Mirror Outside LH and RH, Remote Control, Electric, Color
DH6	Mirror, Inside Sunshade Illuminated LH and RH
DK5	Mirror Outside LH and RH, Remote Control, Electric, Heated, Color
DK6	Console Roof Interior
DL5	Decal, Roadside Service Information
D55	Console Front Compartment, Floor
D58	Spoiler Rear Delete
D81	Aero Wing Rear Spoiler
E28	Handle, Assist
FE1	Suspension System, Soft Ride
FE2	Suspension System, Ride, Handling
FE3	Suspension System, Sport
FQ3	Ratio, Transaxle Final Drive, 2.86
FR9	Ratio, Transaxle Final Drive, 3.29
F83	Ratio, Transaxle Final Drive, 3.05
JA9	Brake, Heavy Weight, Disc/Disc
JB9	Brake, Light Weight, Disc/Disc

## 2001 Chevrolet Monte Carlo Restoration Kit

JL9	Brake System, Power Front and Rear Disc, Antilock Front and Rear Wheel
J65	Brake System, Power Front and Rear Disc
KA1	Heater, Seat
KG7	Generator, 125 Amp
K05	Heater, Engine Block
K20	Module, Electronic Control
K29	Module, Powertrain Control
K34	Cruise Control, Automatic, Electronic
K43	Generator, 102-Amp
LA1	Engine Gas, 6 CYL, 3.4L, MFI, HO, GM
L36	Engine, Gas, 6 Cylinder, 3.8 Liter Multi-Port Fuel Injected High Output V6 (ERV6 Series)
MN3	Transmission Auto 4 Speed, 4T65-E
MN7	Transmission, Automatic 4-Speed 4T65-E Heavy Duty
MX0	Merchandised Transmission Automatic Provisions, O/D
M15	Transmission, Automatic 4-Speed 4T65-E, Enhanced Electronic
NC1	Emission System California LEV
NC8	Emission System California, ULEV
NF7	Emission System, Federal, NLEV
NK5	Steering Wheel, Standard
NP5	Steering Wheel, Leather-Wrapped
NW9	Electronic Traction Control
NX5	Wheel, 16 x 16.5, Aluminum, Sport
N05	Lock Control, Fuel Filler Cap
N81	Tire, Spare, Full Size
N92	Cover, Wheel, Bolt-on
N99	Wheel, Heavy Duty
OSH	Plant Code Oshawa 1, Ontario Canada
PY0	Wheel, 16 x 6.5 Aluminum
P01	Trim, Disc Wheel, Var 1
QB5	Wheel 16 x 6.5, Steel
QD1	Wheel 16 x 6.5, Aluminum, Styled
QNX	Tire, All P225/60R16/N BL R/PE ST TL AL2
QPX	Tire, All P225/60R16-97S BW R/PE ST TL ALS
QTI	Tire, All P225/60R16-97H BW R/PE ST TL AL3 (Police Usage)
QVG	Tire, All P225/60R16-97S BL R/PE ST TL AL3
T53	Lamp Package Emergency Vehicle Rear Compartment Lid
T62	Lamp System Daytime Running -- Delete
UA6	Theft Deterrent System
UB3	Cluster Instrument, Oil, Coolant, Temperature, Volts, Trip Odometer, Tachometer
UE1	Communication System Vehicle, G.P.S. 1
UE4	Communication System Vehicle, G.P.S. Delete
UG1	Garage Door Opener, Universal
UH8	Cluster, Instrument, Coolant Temperature, Trip Odometer, Tachometer
UJ6	Indicator, Low Tire Pressure
UK3	Control Steering Wheel, Accessory
UL0	Radio, AM/FM Stereo, Seek/Scan, Automatic Reverse Music Search Cassette, Automatic Tone, Clock, ETR
UL2	European Frequencies
UL5	Radio - Delete
UM7	Radio, AM/FM Stereo, Seek/Scan, Clock, ETR
UN0	Radio, AM/FM Stereo, Seek/Scan, CD, Auto Tone, Clock, ETR
UP0	Radio, AM/FM Stereo, Seek/Scan, Automatic Reverse Music Search Cassette, CD, Auto Tone, Clock ETR
UN9	Radio Equipment Suppression

## 2001 Chevrolet Monte Carlo Restoration Kit

UP0	Radio, AM/FM Stereo, Seek/Scan, Automatic Reverse Music Search Cassette, Compact Disc, Automatic Tone, Clock, ETR
UQ3	Speaker System, Performance-Enhanced Audio
UW6	Speaker System 6, Dual F/D Tweet and MWOof, Dual Ext Range Shelf
UX7	Speaker System 4, Dual Front door Mounted, DL Extended Range Package, Shelf
U11	Cluster Instrument, Police, Certified Speedo
U19	Speedometer, Instrument Cluster, Kilometer and Miles, Kilometer Odometer
U2E	Instrument Cluster, Coolant Temperature, Trip Odometer
U62	Speaker System 4, Dual Coax Front, Dual Coax Package Shelf
U68	Display Driver Information Center
U77	Antenna, Rear Window Radio
VG9	Protector Wax, Exterior Body
VH9	Envelope, Owner Information Manual
VK3	License Plate Mounting Package, Front
VR6	Hook Tie-Down Shipping
V08	Cooling System Heavy Duty
WU1	Switch Instrumentation Lighting Shutoff
WV2	Texas Edition Pace Car
WV3	Charlotte Edition Pace Car
WX7	Wiring Provisions
WX9	Wiring Provisions Remote CD
W86	Equipment, Misc Equipment for Venezuela (GMV Controlled)
W87	Parts, North American Parts Sourced in Venezuela (GMV Controlled)
W99	Equipment, Misc Equipment for Venezuela (GM Platform Controlled)
X44	Parts, North American Sourced and Shipped to Outside Supplier & Checked (GMCL Controlled)
Z49	English/French SIR Warning Label
6A3	Covering Flor Mats, Front and Rear, H.D.
6A4	Cylinder Unit Single Key System, No Specific Code
6B2	Handle Rear Door, Inoperative
6B7	Wiring Provisions, Roof Panel Access Hole Center
6C7	Lamp Dome Pass
6C8	Cable RG58 A/U Coax Radio Antenna
6E2	Cylinder Unit Single Key System, Coded DF81
6E8	Cylinder Unit Single Key System, Coded NU97
6F5	Wiring Provisions, Roof
6J1	Wiring Provisions, Ignition and Main Power Supply
6J3	Wiring Provisions, Headlamp Flasher, Grille Lamps & Speakers
6J4	Wiring Provisions, Horn/Siren Circuit
6J5	Wiring Provisions, Roof Panel Access Hole RH SI
6J6	Lamp Package Emergency Vehicle R/WDO Panel
7B3	Suspension System, Special Handling
7L9	Cooling System Steering, Oil
7X6	Spotlamp Left Pillar Mounted, Halogen
7X7	Spotlamp Left & Right Pillar Mounted, Halogen
7X8	Spotlamp Provisions, Left
7X9	Spotlamp Provisions, Left & Right
7Y6	Switch Dome Lamp, Door Jamb Inoperative
8X1	Vehicle Label, Fasten Seat Belts

## Technical Information

### Maintenance and Lubrication

#### Capacities - Approximate Fluid

Application	Specification	
	Metric	English
<b>Automatic Transmission</b>		
• Pan Removal	7.0 liters	7.4 quarts
• Complete Overhaul	9.5 liters	10.0 quarts
<b>Engine Cooling System</b>		
• 3.4L (LA1)	10.7 liters	11.3 quarts
• 3.8L (L36)	11.0 liters	11.7 quarts
<b>Engine Oil</b>		
• 3.4L (LA1)		
• with filter change	4.1 liters	4.3 quarts
• without filter change	3.75 liters	4.0 quarts
• 3.8L (L36)		
• with filter change	4.1 liters	4.3 quarts
• without filter change	3.75 liters	4.0 quarts
<b>Fuel Tank</b>	64.3 liters	17.0 gallons
<b>Power Steering</b>	0.70 liters	1.5 pints

#### Maintenance Items

Item	Type/Part Number
Passenger Compartment Air Filter	GM P/N 10406026
Engine Oil Filter	
• 3.4L (LA1)	AC Type PF47
• 3.8L (L36)	AC Type PF47
Spark Plugs and Gap	
• 3.4L (LA1)	AC Type 41-940; 1.52 mm (0.060 in) Gap
• 3.8L (L36)	AC Type 41-921; 1.52 mm (0.060 in) Gap
Windshield Wiper Blades	GM P/N 10418004 - Hook Type, 56.0 cm (22 in)

#### Tire Inflation Pressure Specifications

Application	Specification	
	Metric	English
Front and rear tires	210 kPa	30 psi
Compact spare	420 kPa	60 psi
Police Vehicle	240 kPa	35 psi



**Fluid and Lubricant Recommendations**

Usage	Fluid/Lubricant
Automatic Transaxle	DEXRON®-III Automatic Transaxle Fluid
Engine Oil	Engine oil with the American Petroleum Institute Certified For Gasoline Engines Starburst symbol of the proper viscosity.
Engine Oil (Export)	In areas of the world other than North America, it may be difficult to find oils that display the API STARBURST, look for oils that meet the API Service SJ and ACEA requirements.
Engine Coolant	50/50 mixture of clean, drinkable water and GM Goodwrench® DEX-COOL® or Havoline® DEX-COOL® (silicate-free) coolant
Hood and Door Hinges	Multi-Purpose Lubricant, Superlube® (GM P/N 12346241 or equivalent)
Hood Latch Assembly, Secondary Latch, Pivots, Spring Anchor and Release Pawl	Lubriplate® Lubricant Aerosol (GM P/N 12346293 or equivalent) or lubricant meeting requirements of NLGI #2 Category LB or GC-LB
Hydraulic Brake System	Delco Supreme 11® Brake Fluid (GM P/N 12377967 or equivalent DOT-3 brake fluid)
Key Lock Cylinders	Multi-Purpose Lubricant, Superlube® (GM P/N 12346241 or equivalent)
Power Steering System	GM Power Steering Fluid (GM P/N 1052884 - 1 pint or 1050017 - 1 quart, or equivalent)
Weatherstrip Conditioning	Dielectric Silicone Grease (GM P/N 12345579 or equivalent)
Windshield Washer Solvent	GM Optikleen ® Washer Solvent (GM Part No. 1051515) or equivalent.

## **Descriptions and Operations**

### **Power Steering System Description**

#### **Power Steering Pump Description**

The power steering pump is a vane-type pump which provides hydraulic pressure for the system. The power steering system consists of the following components:

- The driveshaft
- The pump housing
- The pump ring
- The pressure plate
- The thrust plate
- The flow control valve
- The rotor
- The vanes

The opening at the rear of the pump housing contains the following components:

- The pump ring
- The pressure plate
- The thrust plate
- The rotor
- The vanes
- The end plate

The small opening on the side of the housing contains the following components:

- The pressure line fitting
- The flow control valve
- The spring

The flow control orifice is a component of the pressure line fitting. A pressure relief valve inside the flow control valve limits the pump pressure.

#### **Power Steering Gear Description**

The movement of the steering wheel has the following results:

1. The movement of the steering wheel transfers to the pinion.
2. The movement of the pinion transfers through the pinion teeth.
3. The pinion teeth mesh with the teeth on the rack.
4. This action causes the rack to move.

The power rack and pinion steering system has a rotary control valve. The rotary control valve directs the hydraulic fluid that flows from the hydraulic pump to either side of the rack piston.

The integral rack piston attaches to the rack.

The integral rack piston has the following effects:

1. The rack piston converts hydraulic pressure to linear force.
2. The linear force moves the rack left or right.
3. The linear force transmits to the inner and outer tie rods to the steering knuckles.
4. The steering knuckles turn the wheels.

The system will require more steering effort if hydraulic assist is not available. If hydraulic assist is not available, the system will maintain manual control.

## **Steering Wheel and Column - Standard Description and Operation**

The steering wheel and column has 4 primary functions:

- Vehicle steering
- Vehicle security
- Driver convenience
- Driver safety

### **Vehicle Steering**

The steering wheel is the first link between the driver and the vehicle. The steering wheel is fastened to a steering shaft within the column. At the lower end of the column, the intermediate shaft connects the column to the steering gear.

### **Vehicle Security**

Theft deterrent components are mounted and designed into the steering column. The following components allow the column to be locked in order to minimize theft:

- The ignition switch
- The steering column lock
- The ignition cylinder

### **Driver Convenience**

The steering wheel and column may also have driver controls attached for convenience and comfort. The following controls may be mounted on or near the steering wheel or column.

- The turn signal switch
- The hazard switch
- The headlamp dimmer switch
- The wiper/washer switch
- The horn pad/cruise control switch
- The redundant radio/entertainment system controls
- The tilt or tilt/telescoping functions
- The HVAC controls

### **Driver Safety**

The energy-absorbing steering column compresses in the event of a front-end collision, which reduces the chance of injury to the driver. The mounting capsules break away from the mounting bracket in the event of an accident.

## **Suspension Description and Operation**

### **Front Suspension**

The front suspension has 2 primary purposes:

- Isolate the driver from irregularities in the road surface.
- Define the ride and handling characteristics of the vehicle.

The front suspension allows each wheel to compensate for changes in the road surface without affecting the opposite wheel. Each wheel independently connects to the frame with a steering knuckle, ball joint assemblies, and upper and lower control arms.

The control specifically allow the steering knuckles to move in a three-dimensional arc. Two tie rods connect to steering arms on the knuckles and an intermediate rod. These operate the front wheels.

The rear wheel drive vehicles have coil chassis springs. These springs are mounted between the spring housings on the frame and the lower control arms. Shock absorbers are mounted inside the coil springs. The coil springs attach to the lower control arms with bolts and nuts.

The upper part of each shock absorber extends through the upper control arm frame bracket, and the shock absorber secures with two grommets, two retainers, and a nut.

A spring stabilizer shaft controls the side roll of the front suspension. This shaft is mounted in rubber insulators that are held by brackets to the frame side rails. The ends of the stabilizer shaft connect to the lower control arms with link bolts. Rubber insulators isolate these link bolts.


A ball joint assembly is riveted and bolted to the outer end of the upper control arm. A castellated nut and a cotter pin join the steering knuckle to the upper ball joint.

The inner ends of the lower control arm have pressed-in bushings. The bolts pass through the bushings and join the arm to the frame. The lower ball joint assembly is a press fit in the lower control arm and attaches to the steering knuckle with a castellated nut and a cotter pin.

Ball socket assemblies have rubber grease seals. These seals prevent entry of moisture and dirt, and these seals prevent damage to the bearing surfaces.

## Rear Suspension

The rear suspension utilizes coil springs over struts and lightweight aluminum knuckles. Each wheel is mounted to a tri-link independent suspension system. The three links are identified as the inverted U channel trailing arm and the tubular front and rear rods.

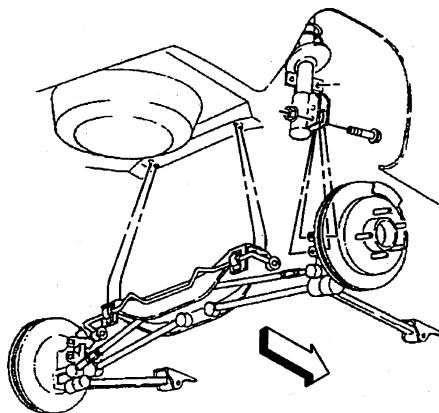

Parallel links allow the rear wheels to reflect upward when the rear wheels hit a road hazard, without moving the toe angle in a positive direction. An advantage of this suspension system is the reduction of unsprung and overall weight. Handling is improved with the independent action of each rear wheel. The rods control the lateral wheel deflection.

Several techniques are employed to achieve this independent wheel movement. The tri-link design may be compared to a right angle. The wheel is located at the right angle formed by the rods and the trailing arm. The ends of the tri-links hinge in order to provide vertical wheel travel. The solid links force the wheel to travel through a controlled arc whose fore-aft position is determined by the trailing arm, and whose lateral position is determined by the rods.

Aside from maintaining geometric wheel location, each portion of the suspension has additional functions. The knuckle supports the brake caliper. All brake torque and braking forces are transmitted through the tri-links and the strut. The final duty of the rods is to maintain the camber angle of the wheel throughout the wheel's travel, and to allow for setting the toe. The overall result of this rear suspension geometry is to maintain the rear wheels in a near vertical position at all times.

The stabilizer shaft attaches to the stabilizer bar drop link and extends rearward, where the stabilizer connects to the rear suspension support by two rubber bushings and mounting brackets.

A non-serviceable unit hub and bearing bolts to the knuckle. This hub and bearing is a sealed, maintenance-free unit.

Check the suspension system periodically for the following conditions:

- Shock absorbency
- Bushing durability
- Tightness of attaching bolts
- Visible damage
- Misalignment
- Excessive wear

## Wheels and Tires

### General Description

The factory installed tires are designed to operate satisfactorily with loads up to and including the full rated load capacity when these tires are inflated to the recommended pressures.


The following factors have an important influence on tire life:

- Correct tire pressures
- Correct wheel alignment
- Proper driving techniques
- Tire rotation

The following factors increase tire wear:

- Heavy cornering
- Excessively rapid acceleration
- Heavy braking

### Tread Wear Indicators Description

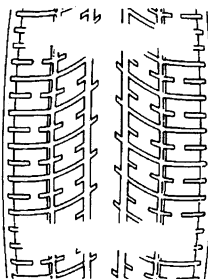

The original equipment tires have tread wear indicators that show when you should replace the tires.

The location of these indicators are at 72 degree intervals around the outer diameter of the tire. The indicators appear as a 6 mm (0.25 in) wide band when the tire tread depth becomes 1.6 mm (2/32 in).

## Metric Wheel Nuts and Bolts Description

Metric wheel/nuts and bolts are identified in the following way:

- The wheel/nut has the word Metric stamped on the face.
- The letter M is stamped on the end of the wheel bolt.

The thread sizes of metric wheel/nuts and the bolts are indicated by the following example: M12 x 1.5.

- M = Metric
- 12 = Diameter in millimeters
- 1.5 = Millimeters gap per thread

## Tire Inflation Description

When you inflate the tires to the recommended inflation pressures, the factory-installed wheels and tires are designed in order to handle loads to the tire's rated load capacity. Incorrect tire pressures, or under-inflated tires, can cause the following conditions:

- Vehicle handling concerns
- Poor fuel economy
- Shortened tire life
- Tire overloading

Inspect the tire pressure when the following conditions apply:

- The vehicle has been sitting at least 3 hours.
- The vehicle has not been driven for more than 1.6 km (1 mi).
- The tires are cool.

Inspect the tires monthly or before any extended trip. Adjust the tire pressure to the specifications on the tire label. Install the valve caps or the extensions on the valves. The caps or the extensions keep out dust and water.

The kilopascal (kPa) is the metric term for pressure. The tire pressure may be printed in both kilopascal (kPa) and psi. One psi equals 6.9 kPa.

## Inflation Pressure Conversion (Kilopascals to PSI)

kPa	psi	kPa	psi
140	20	215	31
145	21	220	32
155	22	230	33
160	23	235	34
165	24	240	35
170	25	250	36
180	26	275	40
185	27	310	45
190	28	345	50
200	29	380	55
205	30	415	60
Conversion: 6.9 kPa = 1 psi			

Tires with a higher than recommended pressure can cause the following conditions:

- A hard ride
- Tire bruising
- Rapid tread wear at the center of the tire


Tires with a lower than recommended pressure can cause the following conditions:

- A tire squeal on turns
- Hard steering
- Rapid wear and uneven wear on the edge of the tread
- Tire rim bruises and tire rim rupture
- Tire cord breakage
- High tire temperatures
- Reduced vehicle handling
- High fuel consumption
- Soft riding

Unequal pressure on the same axle can cause the following conditions:

- Uneven braking
- Steering lead
- Reduced vehicle handling

### P-Metric Sized Tires Description

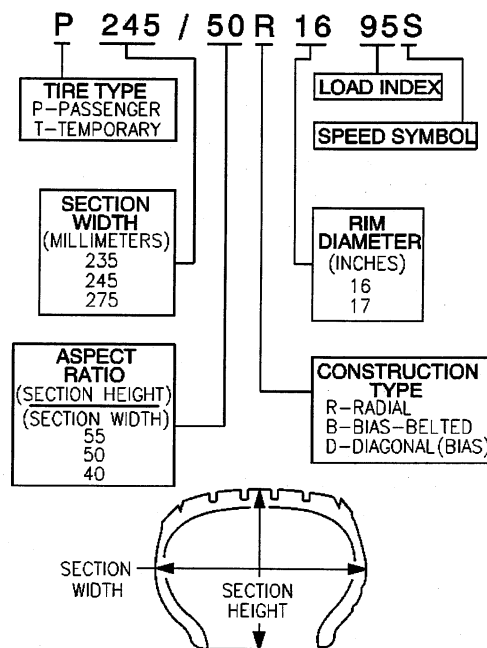

Most P-metric tire sizes do not have exact corresponding alphanumeric tire sizes. Replacement tires should be of the same tire performance criteria (TPC) specification number including the same size, the same load range, and the same construction as those originally installed on the vehicle. Consult a tire dealer if you must replace the P-metric tire with other sizes. Tire companies can best recommend the closest match of alphanumeric to P-metric sizes within their own tire lines.

## **Tire Inflation Monitoring System Operation**

The tire pressure monitor (TPM) system alerts the driver when the pressure changes in one of the tires. The system only detects a low pressure condition while the vehicle is being driven. Once a low tire pressure condition is detected, the system informs the driver whenever the ignition is ON.

The LOW TIRE PRESSURE indicator illuminates if the tire pressure in one or more tires become at least 82 kPa (12 psi) lower or higher than the other tires. The message does not appear if the system is not calibrated properly. The system does not inform the driver which tire is low. To clear this message, set the tire pressures in all four tires to the proper pressures and perform the system reset procedure.

The Tire Pressure Monitor software requires approximately one half hour of straight line driving to complete the TPM autolearn. There are several speed ranges that the EBCM needs to learn the tire inflation configuration in order to have the full capability of detecting a low tire condition. The speed detection ranges are the following:

- 24-64 km/h (15-40 mph)
- 64-113 km/h (40-70 mph)
- 113-145 km/h (70-90 mph)

Each speed range has 2 modes of low tire detection.

- Monitor Mode 1
- Monitor Mode 2

The EBCM learns the tire inflation configuration for each speed range independently. In Monitor Mode 1, the EBCM has only partially learned the tire inflation configuration for the speed range and has limited detection capability for a low tire condition. In Monitor Mode 2, the EBCM has fully learned the tire inflation configuration for the speed range and has full detection capability for a low tire condition. If the EBCM is not in Monitor Mode 1 or Monitor Mode 2, a low tire condition cannot be detected because the EBCM has not learned the tire inflation configuration of the vehicle.

## **Driveline System Description and Operation**

### **Wheel Drive Shafts**

Front wheel drive axles are flexible assemblies.

Front wheel drive axles consist of the following components:

- A front wheel drive shaft tri-pot joint (inner joint)
- A front wheel drive shaft constant velocity joint (outer joint)
- A front wheel drive shaft The front wheel drive shaft connects the front wheel drive shaft tri-pot joint and the front wheel drive shaft constant velocity joint.

The front wheel drive shaft tri-pot joint is completely flexible. The front wheel drive shaft tri-pot joint can move in and out.

The front wheel drive shaft constant velocity joint is flexible, but the front wheel drive shaft constant velocity joint cannot move in and out.

### **Boots (Seals) And Clamps**

The front wheel drive shaft constant velocity joint and the front wheel drive shaft tri-pot joint boots (seals) in the front wheel drive axle are made of a thermoplastic material.

The clamps in front wheel drive axle are made of stainless steel.



The boot (seal) provides the following functions:

- Protection of the internal parts of the front wheel drive shaft constant velocity joint and the front wheel drive shaft tri-pot joint. The boot (seal) protects the grease from the following sources of damage:
  - Harmful atmospheric conditions (such as extreme temperatures or ozone gas)
  - Foreign material (such as dirt or water)
- Allows angular movement and the axial movement of the front wheel drive shaft tri-pot joint.
- Allows angular movement of the front wheel drive shaft constant velocity joint.

### **Important**

Protect the boots (seals) from sharp tools and from the sharp edges of the surrounding components.

Any damage to the boots (seals) or the clamps will result in leakage. Leakage will allow water to leak into the front wheel drive shaft tri-pot joint and the front wheel drive shaft constant velocity joints. Leakage will also allow grease to leak out of the front wheel drive shaft tri-pot joints and the front wheel drive shaft constant velocity joints.

Leakage may cause noisy front wheel drive axle operation and eventual failure of the internal components.

The clamps provide a leak proof connection for the front wheel drive shaft tri-pot joint and the front wheel drive shaft constant velocity joint at the following locations:

- The housing
- The front wheel drive shaft

The thermoplastic material performs well under normal conditions and normal operation. However, the material is not strong enough to withstand the following conditions:

- Abusive handling
- Damage from sharp objects (such as sharp tools or any sharp edges of the surrounding components in the vehicle).

### **Front Wheel Drive Shaft Tri-pot Joint (Inner Joint)**

The front wheel drive shaft tri-pot joint is made with the tri-pot design without an over-extension limitation retainer.

The joint is constructed as follows for vehicles that are equipped with an automatic transmission:

- The left front wheel drive axle has a female spline. The female spline installs over a stub shaft that protrudes from the transaxle.
- The right front wheel drive axle has a male spline. The right front wheel drive axle uses barrel type snap rings in order to interlock with the transaxle gears.

### **Front Wheel Drive Shaft Constant Velocity Joint (Outer Joint)**

The front wheel drive shaft constant velocity joint is made with the Rzeppa joint design.

The shaft end (which mates with the knuckle/hub) has a helical spline. The helical spline ensures a tight, press-type fit.

This design prevents end play between the hub bearing and the front wheel drive axle.

## **Braking System Description and Operation**

### **Hydraulic Brake System Description and Operation**

#### **System Component Description**

The hydraulic brake system consists of the following:

##### **Hydraulic Brake Master Cylinder Fluid Reservoir**

Contains supply of brake fluid for the hydraulic brake system.

##### **Hydraulic Brake Master Cylinder**

Converts mechanical input force into hydraulic output pressure.

Hydraulic output pressure is distributed from the master cylinder through two hydraulic circuits, supplying diagonally-opposed wheel apply circuits.

##### **Hydraulic Brake Pressure Balance Control System**

Regulates brake fluid pressure delivered to hydraulic brake wheel circuits, in order to control the distribution of braking force.

Pressure balance control is achieved through dynamic rear proportioning (DRP), which is a function of the ABS modulator.

##### **Hydraulic Brake Pipes and Flexible Brake Hoses**

Carries brake fluid to and from hydraulic brake system components.

##### **Hydraulic Brake Wheel Apply Components**

Converts hydraulic input pressure into mechanical output force.

#### **System Operation**

Mechanical force is converted into hydraulic pressure by the master cylinder, regulated to meet braking system demands by the pressure balance control system, and delivered to the hydraulic brake wheel circuits by the pipes and flexible hoses. The wheel apply components then convert the hydraulic pressure back into mechanical force which presses linings against rotating brake system components.

## **Brake Assist System Description and Operation**

#### **System Component Description**

The brake assist system consists of the following:

##### **Brake Pedal**

Receives, multiplies and transfers brake system input force from driver.

##### **Brake Pedal Pushrod**

Transfers multiplied input force received from brake pedal to brake booster.

##### **Vacuum Brake Booster**

Uses source vacuum to decrease effort required by driver when applying brake system input force.

When brake system input force is applied, air at atmospheric pressure is admitted to the rear of both vacuum diaphragms, providing a decrease in brake pedal effort required. When input force is removed, vacuum replaces atmospheric pressure within the booster.

### **Vacuum Source**

Supplies force used by vacuum brake booster to decrease brake pedal effort.

### **Vacuum Source Delivery System**

Enables delivery and retention of source vacuum for vacuum brake booster.

### **System Operation**

Brake system input force is multiplied by the brake pedal and transferred by the pedal pushrod to the hydraulic brake master cylinder. Effort required to apply the brake system is reduced by the vacuum brake booster.

## **Disc Brake System Description and Operation**

### **System Component Description**

The disc brake system consists of the following components:

#### **Disc Brake Pads**

Applies mechanical output force from the hydraulic brake calipers to friction surfaces of brake rotors.

#### **Disc Brake Rotors**

Uses mechanical output force applied to friction surfaces from the disc brake pads to slow speed of tire and wheel assembly rotation.

#### **Disc Brake Pad Hardware**

Secures disc brake pads firmly in proper relationship to the hydraulic brake calipers. Enables a sliding motion of brake pads when mechanical output force is applied.

#### **Disc Brake Caliper Hardware**

Provides mounting for hydraulic brake caliper and secures the caliper firmly in proper relationship to caliper bracket. Enables a sliding motion of the brake caliper to the brake pads when mechanical output force is applied.

### **System Operation**

Mechanical output force is applied from the hydraulic brake caliper pistons to the inner brake pads. As the pistons press the inner brake pads outward, the caliper housings draw the outer brake pads inward. This allows the output force to be equally distributed. The brake pads apply the output force to the friction surfaces on both sides of the brake rotors, which slows the rotation of the tire and wheel assemblies. The correct function of both the brake pad and brake caliper hardware is essential for even distribution of braking force.

## **Park Brake System Description and Operation**

### **System Component Description**

The park brake system consists of the following:

#### **Park Brake Pedal Assembly**

Receives, multiplies, and transfers park brake system apply input force from operator to park brake cable system.

Releases applied park brake system when lever is returned to at-rest, lowered, position.

#### **Park Brake Cables**

Transfers input force received from park brake lever, through park brake cable equalizer, to park brake apply levers.

#### **Park Brake Cable Equalizer**

Evenly distributes input force to both the left and right park brake units.

#### **Park Brake Apply Lever**

Multiplies and transfers input force to park brake actuator/adjuster.

#### **Park Brake Actuator/Adjuster**

Uses multiplied input force from apply lever to expand drum brake shoes toward the friction surface of the brake drum.

Threaded park brake actuators/adjusters are also used to control clearance between the drum brake shoes and the friction surface of the brake drum.

#### **Drum Brake Shoes**

Applies mechanical output force from park brake actuator/adjuster to friction surface of the brake drum.

### **System Operation**

Park brake apply input force is received by the park brake lever assembly being applied. The input force is multiplied by the lever assembly, transferred, and evenly distributed, through the park brake cables and the park brake cable equalizer, to the left and right park brake apply levers. The park brake apply levers multiply and transfer the apply input force to the park brake actuators/adjusters which expand the drum brake shoes toward the friction surface of the brake drum in order to prevent the rotation of the rear tire and wheel assemblies. The park brake lever assembly releases an applied park brake system when it is returned to the at-rest, lowered, position.

## **ABS Description and Operation**

### **Antilock Brake System**

When wheel slip is detected during a brake application, the ABS enters antilock mode. During antilock braking, hydraulic pressure in the individual wheel circuits is controlled to prevent any wheel from slipping. A separate hydraulic line and specific solenoid valves are provided for each wheel. The ABS can decrease, hold, or increase hydraulic pressure to each wheel brake. The ABS cannot, however, increase hydraulic pressure above the amount which is transmitted by the master cylinder during braking.

During antilock braking, a series of rapid pulsations is felt in the brake pedal. These pulsations are caused by the rapid changes in position of the individual solenoid valves as the EBCM responds to wheel speed sensor inputs and attempts to prevent wheel slip. These pedal pulsations are present only during antilock braking and stop when normal braking is resumed or when the vehicle comes to a stop. A ticking or popping noise may also be heard as the solenoid valves cycle rapidly. During antilock braking on dry pavement, intermittent chirping noises may be heard as the tires approach slipping. These noises and pedal pulsations are considered normal during antilock operation.

Vehicles equipped with ABS may be stopped by applying normal force to the brake pedal. Brake pedal operation during normal braking is no different than that of previous non-ABS systems. Maintaining a constant force on the brake pedal provides the shortest stopping distance while maintaining vehicle stability.

## Engine Description and Operation

### Engine Mechanical – 3.4L

#### Mechanical Specifications

Application	Specification	
	Metric	English
<b>General Data</b>		
• Engine Type	60° V-6	
• Displacement	3.4L	204 cu in
• RPO (VIN Code)	LA1 (E)	
• Bore	92 mm	3.62 in
• Stroke	84 mm	3.31 in
• Compression Ratio	9.6:1	
• Firing Order	1-2-3-4-5-6	
• Oil Pressure - Warm	103 kPa	15 psi @ 1100 RPM
<b>Cylinder Bore</b>		
• Diameter	92.019-92.037 mm	3.6228-3.6235 in
• Out Of Round Maximum	0.007 mm	0.0003 in
• Taper -- Thrust Side Maximum	0.010 mm	0.0004 in
<b>Piston</b>		
• Diameter-Gaged on the skirt 13 mm (0.51 in) below the centerline of the piston pin bore	91.970-91.988 mm	3.6209-3.6216 in
• Clearance	0.032-0.068 mm	0.0013-0.0027 in
• Pin Bore	23.006-23.013 mm	0.9057-0.9060 in
<b>Piston Ring</b>		
• Top Groove Side Clearance	0.04-0.075 mm	0.002-0.0033 in
• Second Groove Side Clearance	0.04-0.09 mm	0.002-0.0035 in
• Top Ring Gap	0.15-0.36 mm	0.006-0.014 in
• Second Ring Gap	0.48-0.74 mm	0.0197-0.0280 in
• Oil Ring Groove Clearance	0.48-0.20 mm	0.008 in
• Gap with segment at 92.0 mm (3.62 in)	0.25-0.75 mm	0.0098-0.05 in
<b>Piston Pin</b>		
• Diameter	22.9915-22.9964 mm	0.9052-0.9054 in
• Clearance In Piston	0.0096-0.0215 mm	0.0004-0.0008 in
• Fit In Rod	(-)0.0469-(-)0.017 mm press fit	0.0006-0.0018 in
<b>Crankshaft</b>		
• Main Journal Diameter	67.239-67.257 mm	2.6473-2.6483 in
• Main Journal Taper	0.005 mm	0.0002 in
• Out Of Round - Max	0.005 mm	0.0002 in

# 2001 Chevrolet Monte Carlo Restoration Kit

• Flange Runout - Max	0.04 mm	0.0016 in
• Cylinder Block Main Bearing Bore Diameter	72.155-72.168 mm	2.8407-2.8412 in
• Crankshaft Main Bearing Inside Diameter	67.289-67.316 mm	2.6492-2.6502 in
• Main Bearing Clearance	0.019-0.064 mm	0.0008-0.0025 in
• Main Thrust Bearing Clearance	0.032-0.077 mm	0.0012-0.0030 in
• Crankshaft End Play	0.060-0.210 mm	0.0024-0.0083 in
• Crankshaft Flange Runout - Max	0.04 mm	0.0016 in
<b>Connecting Rod</b>		
• Rod Bearing Journal Diameter	50.768-50.784 mm	1.9987-1.9994 in
• Rod Bearing Journal Taper - Max	0.005 mm	0.0002 in
• Rod Bearing Journal Out Of Round - Max	0.005 mm	0.0002 in
• Rod Bearing Bore Diameter	53.962-53.984 mm	2.124-2.125 in
• Rod Inside Bearing Diameter	50.812-50.850 mm	2.000-2.002 in
• Rod Bearing Journal Clearance	0.018-0.062 mm	0.0007-0.0024 in
• Rod Side Clearance	0.18-0.44 mm	0.007-0.017 in
<b>Camshaft</b>		
• Lobe Lift (Intake and Exhaust)	6.9263 mm	0.2727 in
• Journal Diameter	47.45-47.48 mm	1.868-1.869 in
• Camshaft Bearing Bore Diameter-Front and Rear	51.03-51.08 mm	2.009-2.011 in
• Camshaft Bearing Bore Diameter-Middle #2 and #3	50.77-50.82 mm	1.999-2.001 in
• Camshaft Bearing Inside Diameter	47.523-47.549 mm	1.871-1.872 in
• Journal Clearance	0.026-0.101 mm	0.001-0.0039 in
• Journal Runout - Max	0.025 mm	0.001 in
<b>Valve System</b>		
• Roller Lifter	Hydraulic	
• Rocker Arm Ratio	1.60:1	
• Valve Face Angle	45°	
• Seat Angle	46°	
• Valve Seat Runout	0.050 mm	0.002 in
• Seat Width-Intake	1.55-1.80 mm	0.061-0.071 in
• Seat Width-Exhaust	1.70-2.0 mm	0.067-0.079 in
• Valve Margin - Minimum Intake	2.10 mm	0.083 in
• Valve Margin - Minimum Exhaust	2.70 mm	0.106 in
• Valve Stem Clearance	0.026-0.068 mm	0.0010-0.0027 in
<b>Valve Spring</b>		
• Valve Springs Free Length	48.5 mm	1.89 in
• Valve Springs Load (Closed)	320 N @ 43.2 mm	75 lb @ 1.701 in
• Valve Springs Load (Open)	1036 N @ 32 mm	230 lb @ 1.260 in
• Installed Height Intake-Exhaust	43.2 mm	1.701 in
• Approx. # or coils	6.55	

<b>Oil Pump</b>		
• Gear Lash	0.094-0.195 mm	0.0037-0.0077 in
• Gear Pocket Depth	30.52-30.58 mm	1.202-1.204 in
• Gear Pocket Diameter	38.176-38.226 mm	1.503-1.505 in
<b>Oil Pump Gear</b>		
• Length	30.45-30.48 mm	1.199-1.200 in
• Diameter	38.05-38.10 mm	1.498-1.500 in
• Side Clearance	0.038-0.088 mm	0.001-0.003 in
• End Clearance	0.040-0.125 mm	0.002-0.005 in
• Valve to Bore Clearance	0.038-0.089 mm	0.0015-0.0035 in

**Fastener Tightening Specifications**

<b>Application</b>	<b>Specifications</b>	
	<b>Metric</b>	<b>English</b>
Accelerator Control Cable Bracket Bolt/Nut	10 N·m	89 lb in
Camshaft Position Sensor Bolt	10 N·m	89 lb in
Camshaft Sprocket Bolt	140 N·m	103 lb ft
Camshaft Thrust Plate Screw	10 N·m	89 lb in
Connecting Rod Bearing Bolt		
• First Pass	25 N·m	18 lb ft
• Final Pass	100 degrees	
Coolant Drain Plug	19 N·m	14 lb ft
Coolant Temperature Sensor	23 N·m	17 lb ft
Crankshaft Balancer Bolt	103 N·m	76 lb ft
Crankshaft Main Bearing Cap Bolt/Stud		
• First Pass	50 N·m	37 lb ft
• Final Pass	77 degrees	
Crankshaft Oil Deflector Nut	25 N·m	18 lb ft
Crankshaft Position Sensor Bolt - Front Cover	10 N·m	89 lb in
Crankshaft Position Sensor Bolt - Side of Engine Block	11 N·m	98 lb in
Crankshaft Position Sensor Wiring Bracket Bolt	50 N·m	37 lb ft
Crankshaft Position Sensor Shield Bolt	11 N·m	98 lb in
Cylinder Head Bolt		
• First Pass	60 N·m	44 lb ft
• Final Pass	95 degrees	
Drive Belt Idler Pulley Bolt	50 N·m	37 lb ft
Drive Belt Shield Bolt	10 N·m	89 lb in
Drive Belt Tensioner Bolt	50 N·m	37 lb ft
EGR Valve to EGR Valve Pipe Bolt	30 N·m	22 lb ft
EGR Valve Adapter Pipe to Exhaust Manifold Nut	25 N·m	18 lb ft
Engine Flywheel Bolt	71 N·m	52 lb ft
Engine Front Cover Bolt - Large	55 N·m	41 lb ft
Engine Front Cover Bolt - Medium	55 N·m	41 lb ft
Engine Front Cover Bolt - Small	27 N·m	20 lb ft
Engine Mount Bracket Bolt	58 N·m	43 lb ft
Engine Mount Lower Nut	43 N·m	32 lb ft
Engine Mount Strut and Lift Bracket Bolt - Engine Left Rear	70 N·m	52 lb ft
Engine Mount Strut Bolt/Nut	48 N·m	35 lb ft
Engine Mount Strut Bracket Bolt - Upper Radiator Support	28 N·m	21 lb ft
Engine Mount Strut Bracket Bolt - Vehicle Right Side	50 N·m	37 lb ft



## 2001 Chevrolet Monte Carlo Restoration Kit

Engine Mount Upper Nut	47 N·m	35 lb ft
Engine Oil Pressure Indicator Switch	16 N·m	12 lb ft
Engine Wiring Harness Bracket Bolt	13 N·m	115 lb in
Exhaust Crossover Pipe Heat Shield Bolt	10 N·m	89 lb in
Exhaust Crossover Pipe Nut/Stud	25 N·m	18 lb ft
Exhaust Manifold Heat Shield Bolt	10 N·m	89 lb in
Exhaust Manifold Nut	16 N·m	12 lb ft
Exhaust Manifold Stud	18 N·m	13 lb ft
Fuel Feed Pipe to Fuel Injector Rail Nut	17 N·m	13 lb ft
Fuel Injector Rail Bolt	10 N·m	89 lb in
Fuel Pipe Bracket Bolt/Stud	50 N·m	37 lb ft
Fuel Pipe Clip Bolt	8 N·m	71 lb in
Fuel Return Pipe to Fuel Injector Rail Nut	17 N·m	13 lb ft
Generator Bracket and Front Engine Lift Hook Bolt	50 N·m	37 lb ft
Heated Oxygen Sensor	42 N·m	31 lb ft
Heater Inlet Pipe Nut	25 N·m	18 lb ft
Ignition Coil Bracket Bolt/Nut/Stud	25 N·m	18 lb ft
Intake Manifold Coolant Pipe Bolt	10 N·m	89 lb in
Knock Sensor	19 N·m	14 lb ft
Lower Intake Manifold Bolt		
• First Pass	7 N·m	62 lb in
• Final Pass - 4 Middle Bolts	13 N·m	115 lb in
• Final Pass - 4 Outside Bolts	25 N·m	18 lb ft
MAP Sensor Bolt	5 N·m	44 lb in
MAP Sensor Bracket Bolt	25 N·m	18 lb ft
Oil Cooler Pipe Bracket Bolt	10 N·m	89 lb in
Oil Filter	13 N·m	115 lb in
Oil Filter Bypass Hole Plug	19 N·m	14 lb ft
Oil Filter Fitting	39 N·m	29 lb ft
Oil Gallery Plug - 1/4 inch	19 N·m	14 lb ft
Oil Gallery Plug - 3/8 inch	33 N·m	24 lb ft
Oil Level Indicator Tube Stud	25 N·m	18 lb ft
Oil Level Sensor Bolt	10 N·m	89 lb in
Oil Pan Bolt	25 N·m	18 lb ft
Oil Pan Drain Plug	25 N·m	18 lb ft
Oil Pan Side Bolt	50 N·m	37 lb ft
Oil Pump Drive Clamp Bolt	36 N·m	27 lb ft
Oil Pump Mounting Bolt	41 N·m	30 lb ft
Spark Plug	27 N·m	20 lb ft
Thermostat Bypass Pipe to Cylinder Head Nut	25 N·m	18 lb ft
Thermostat Bypass Pipe to Engine Front Cover Bolt	12 N·m	106 lb in
Thermostat Bypass Pipe to Throttle Body Nut	25 N·m	18 lb ft
Throttle Body Bolt/Stud	25 N·m	18 lb ft
Timing Chain Dampener Bolt	21 N·m	15 lb ft
Upper Intake Manifold Bolt/Stud	25 N·m	18 lb ft
Valve Lifter Guide Bolt	10 N·m	89 lb in
Valve Rocker Arm Bolt		
• First Pass	19 N·m	14 lb ft
• Final Pass	30 degrees	
Valve Rocker Arm Cover Bolt	10 N·m	89 lb in
Water Outlet Bolt	25 N·m	18 lb ft
Water Pump Bolt	10 N·m	89 lb in
Water Pump Pulley Bolt	25 N·m	18 lb ft

## Engine Component Description

The cylinder block is made of cast alloy iron. The cylinder block has 6 cylinders that are arranged in a V shape. There are 3 cylinders in each bank. The cylinder banks are set at a 60 degree angle from each other.

Starting from the front of the engine, the left bank cylinders are 1, 3, 5. The right bank cylinders are 2, 4, 6.

Four main bearings support the crankshaft. The crankshaft is retained by the bearing caps. The bearing caps are machined with the block for proper alignment and clearances. The main bearing caps are drilled and tapped for the structural oil pan side bolts.

The aluminum cylinder heads have individual intake and exhaust ports for each cylinder. The valve guides are pressed in. The roller rocker arms are located on a pedestal in a slot in the cylinder head. The roller rocker arms are retained on individual threaded bolts.

The crankshaft is cast nodular iron with deep rolled fillets on all 6 crankpins and all 4 main journals. Four steel-backed aluminum bearings are used. The #3 bearing is the end-thrust bearing.

The camshaft is made from a new metal composite design. The camshaft profile is a hydraulic roller design. The camshaft is supported by 4 journals. The camshaft includes an oil pump drive gear.

The pistons are cast aluminum using 2 compression rings and 1 oil control ring. The piston pin is offset 0.8 mm (0.031 in) towards the major thrust side. This placement allows for a gradual change in thrust pressure against the cylinder wall as the piston travels its path. The pins are chromium steel. The pins have a floating fit in the pistons. The pins are retained in the connecting rods by a press fit.


The connecting rods are made of forged steel. Full pressure lubrication is directed to the connecting rods by drilled oil passages from the adjacent main bearing journal.

A roller rocker type valve train is used. Motion is transmitted from the camshaft through the hydraulic roller lifter and from the pushrod to the roller rocker arm. The rocker arm pivots on the needle roller bearings. The rocker arm transmits the camshaft motion to the valve. The rocker arm pedestal is located in a slot in the cylinder head. The rocker arm is retained in the cylinder head by a bolt. The pushrod is located by the rocker arm.

The intake manifold is a 2-piece cast aluminum unit. The intake manifold centrally supports a fuel rail with 6 fuel injectors.

The exhaust manifolds are cast nodular iron.

## Lubrication

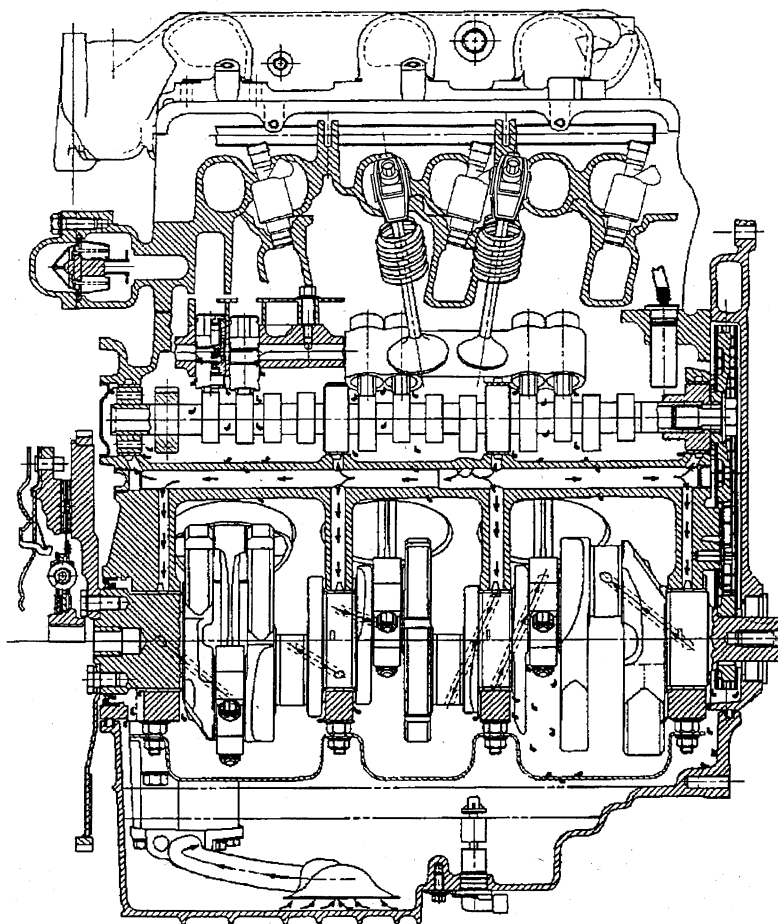

Full pressure lubrication, through a full flow oil filter, is furnished by a gear type oil pump. The oil is drawn up through the pickup screen and the tube. The oil passes through the pump to the oil filter.

The oil filter is a full flow paper element unit. An oil filter bypass is used in order to ensure oil supply during the following conditions:

- On a cold start
- If the filter is plugged
- If the filter develops excessive pressure drop

The bypass is designed to open at 69-83 kPa (10-12 psi).

A new priority oil delivery system supplies oil first to the crankshaft journals. The oil from the crankshaft main bearings is supplied to the connecting rod bearings by intersecting the passages drilled in the crankshaft. The passages supply the oil to the crankshaft main bearings and the camshaft bearings through the intersecting vertical drilled holes. The oil passages from the camshaft journals supply oil to the hydraulic lifters.

The hydraulic lifters pump oil up through the pushrods to the rocker arms. The cast dams in the crankcase casting direct the oil that drains back from the rocker arms in order to supply the camshaft lobes. The camshaft chain drive is lubricated by indirect oil splash.

## Drive Belt System Description

The drive belt system consists of the following components:

- The drive belt
- The drive belt tensioner
- The drive belt idler pulley
- The crankshaft balancer pulley
- The accessory drive component mounting brackets
- The accessory drive components
  - The power steering pump, if belt driven
  - The generator
  - The A/C compressor, if equipped
  - The engine cooling fan, if belt driven
  - The water pump, if belt driven
  - The vacuum pump, if equipped
  - The air compressor, if equipped

The drive belt system may use one belt or two belts. The drive belt is thin so that it can bend backwards and has several ribs to match the grooves in the pulleys. There also may be a V-belt style belt used to drive certain accessory drive components. The drive belts are made of different types of rubbers (chloroprene or EPDM) and have different layers or plys containing either fiber cloth or cords for reinforcement.

Both sides of the drive belt may be used to drive the different accessory drive components. When the back side of the drive belt is used to drive a pulley, the pulley is smooth.

The drive belt is pulled by the crankshaft balancer pulley across the accessory drive component pulleys. The spring loaded drive belt tensioner keeps constant tension on the drive belt to prevent the drive belt from slipping. The drive belt tensioner arm will move when loads are applied to the drive belt by the accessory drive components and the crankshaft.

The drive belt system may have an idler pulley, which is used to add wrap to the adjacent pulleys. Some systems use an idler pulley in place of an accessory drive component when the vehicle is not equipped with the accessory.

**Engine Mechanical – 3.8L****Mechanical Specifications**

Application	Specification	
	Metric	English
General Data		
• Engine Type	90° V-6	
• Displacement	231 cu in	
• Liter (VIN)	3.8L (K), (1)	
• RPO	L36, L67	
• Bore	96.52 mm	3.8 in
• Stroke	86.36 mm	3.4 in
• Compression Ratio (VIN K)	9.4:1	
• Compression Ratio (VIN 1)	8.5:1	
• Firing Order	1-6-5-4-3-2	
Lubrication System		
• Oil Capacity with Oil Filter Change	4.25 L	4.5 qt
• Oil Capacity without Oil Filter Change	3.75 L	4 qt
• Oil Pressure @ Operating Temperature (1850 RPM) Using 10W-30 Oil	414 kPa	60 psi min
• Oil Filter Type	Throw Away Element and Can	
• Gear Pocket Depth	11.71-11.75 mm	0.461-0.4625 in
• Gear Pocket Diameter	89.10-89.20 mm	3.508-3.512 in
• Inner Gear Tip Clearance	0.152 mm	0.006 in
• Outer Gear Diameter Clearance	0.203-0.381 mm	0.008-0.015 in
• End Clearance	0.025-0.089 mm	0.001-0.0035 in
• Valve-to-Bore Clearance	0.038-0.076 mm	0.0015-0.003 in
Type of Lubrication		
• Main Bearings	Pressure	
• Connecting Rods	Pressure	
• Piston Pins	Splash	
• Balance Shaft Bearing - Front	Splash	
• Balance Shaft Bushing - Rear	Pressure	
• Camshaft Bearings	Pressure	
• Timing Chain	Splash	
• Cylinder Walls	Splash	
• Oil Pump Type	Gerotor	
• Oil Pressure Sending Unit	Electrical	
• Oil Intake	Stationary	
• Oil Filter System	Full Flow	
Cylinder Bore		
• Diameter	96.5 mm	3.8 in
• Out-Of-Round Maximum	0.0254 mm	0.001 in
• Taper	0.0254 mm	0.001 in
Piston (VIN K)		
• Used Piston Clearance (41 mm from Top of Piston)	0.050-0.091 mm	0.0020-0.0036 in
• New Piston Clearance (41 mm from Top of Piston)	0.010-0.051 mm	0.0004-0.0020 in

<b>Piston (VIN 1)</b>		
• Used Piston Clearance (41 mm from Top of Piston)	0.0193-0.0997 mm	0.0008-0.0039 in
• New Piston Clearance (41 mm from Top of Piston)	0.0207-0.0437 mm	0.0008-0.0017 in
<b>Piston Ring Groove Depth</b>		
• Top Compression	4.019-4.146 mm	0.158-0.163 in
• 2nd Compression	4.214-4.341 mm	0.0166-0.171 in
• Oil Control	3.814-3.941 mm	0.150-0.155 in
<b>Piston Ring End Gap</b>		
• Top Compression	0.25-0.46 mm	0.010-0.018 in
• 2nd Compression	0.58-0.84 mm	0.023-0.033 in
• Oil Control	0.254-0.762 mm	0.010-0.030 in
<b>Piston Ring Side Clearance</b>		
• Top Compression	0.033-0.079 mm	0.0013-0.0031 in
• 2nd Compression	0.033-0.079 mm	0.0013-0.0031 in
• Oil Control	0.023-0.201 mm	0.0009-0.0079 in
<b>Piston Ring Width</b>		
• Top Compression	1.176-1.197 mm	0.0463-0.0471 in
• 2nd Compression	1.476-1.497 mm	0.0581-0.0589 in
• Oil Control	1.854-2.007 mm	0.073-0.079 in
<b>Piston Pin (VIN K)</b>		
• Diameter	21.9950-22.0000 mm	0.8659-0.8661 in
• Clearance in Piston	0.0020-0.0130 mm	0.00008-0.00051 in
• Fit-In-Rod (Clearance)	0.0066-0.0217 mm	0.0003-0.0009 in
<b>Piston Pin (VIN 1)</b>		
• Diameter	22.995-23.0000 mm	0.90531-0.90551 in
• Clearance in Piston	0.0065-0.0155 mm	0.00061-0.00026 in
• Fit-In-Rod (Clearance)	0.0073-0.0225 mm	0.00029-0.00089 in
<b>Crankshaft</b>		
• Main Journal Diameter-All	63.470-63.495 mm	2.4988-2.4998 in
• Rod Journal Diameter-All	57.1170-57.1475 mm	2.2487-2.2499 in
• Main Journal Taper-Maximum	0.00889 mm	0.00035 in
• Rod Journal Taper-Maximum	0.00889 mm	0.00035 in
• Main Journal Out-of-Round-Maximum	0.00635 mm	0.00025 in
• Rod Journal Out-of-Round-Maximum	0.00508 mm	0.00020 in
• Main Bearing to Journal Clearance 1	0.0178-0.0406 mm	0.0007-0.0016 in

# 2001 Chevrolet Monte Carlo Restoration Kit

• Main Bearing to Journal Clearance 2, 3 and 4	0.0229-0.0457 mm	0.0009-0.0018 in
• Rod Bearing Clearance	0.0127-0.0660 mm	0.0005-0.0026 in
• Crankshaft End Play	0.076-0.276 mm	0.003-0.011 in
<b>Connecting Rod</b>		
• Rod Side Clearance	0.102-0.508 mm	0.004-0.0200 in
• Connecting Rod Large End Bore ID	60.295-60.312 mm	2.37378-2.3745 in
<b>Camshaft</b>		
• Journal Diameter	47.655-46.858 mm	1.8462-1.8448 in
• Bearing Inside Diameter 1 and 4	46.970-46.934 mm	1.8428-1.8492 in
• Bearing Inside Diameter 2 and 3	46.977-46.942 mm	1.8481-1.8495 in
• Bearing-to-Journal Clearance	0.041-0.119 mm	0.0016-0.0047 in
• Intake Maximum Lobe Lift	6.56 mm	0.258 in
• Exhaust Maximum Lobe Lift	6.56 mm	0.258 in
<b>Balance Shaft</b>		
• End Play	0.0-0.171 mm	0.0-0.0067 in
• Rear Journal Diameter	38.085-38.105 mm	1.4994-1.5002 in
• Radial Play-Front, Bearing Clearance	0.0-0.026 mm	0.0-0.0010 in
• Rear Bearing to Journal Clearance	0.012-0.109 mm	0.0005-0.0043 in
• Drive Gear Lash	0.050-0.125 mm	0.002-0.0049 in
• Bearing Bore Diameter-Front	51.973-51.999 mm	2.0462-2.0472 in
• Bearing Bore Diameter-Rear, In Block	47.584-47.612 mm	1.8735-1.8745 in
• Bearing Inside Diameter-Rear	38.118-38.194 mm	1.5007-1.5037 in
<b>Valve System</b>		
• Lifter	Hydraulic Roller	
• Rocker Arm Ratio	1.66:1	
• Face Angle	46 degrees	
• Seat Angle	45 degrees	
• Minimum Margin	0.635 mm	0.025 in
• Seat Runout-Maximum	0.050 mm	0.002 in
• Seat Width-Intake	1.53-2.03 mm	0.060-0.080 in
• Seat Width-Exhaust	2.29-2.79 mm	0.090-0.110 in
• Stem Height-All	49.15-50.17 mm	1.93-1.975 in
• Stem Clearance-Intake	0.031-0.071 mm	0.0012-0.0028 in
• Stem Clearance-Exhaust	0.036-0.074 mm	0.0014-0.0029 in

Valve Spring		
• Free Length	49.78 mm	1.960 in
• Load-Closed	334 N @ 43.69 mm	75 lb @ 1.72 in
• Load-Open	1014 N @ 32.4 mm	228 lb @ 1.277 in
• Installed Height	42.93-44.45 mm	1.690-1.750 in
• Approximate Number of Active Coils	4.48	
• Approximate Number of Total Coils	6.60	
Flywheel		
• Runout-Maximum	0.38 mm	0.015 in

**Fastener Tightening Specifications**

Application	Specifications	
	Metric	English
A/C Compressor Bracket Bolt	50 N·m	37 lb ft
A/C Compressor Nut	30 N·m	22 lb ft
Balance Shaft Gear Bolt	22 N·m + 70°	16 lb ft + 70°
Camshaft Position Sensor Bolt	10 N·m	89 lb in
Camshaft Sprocket Bolt	100 N·m + 90°	74 lb ft + 90°
Camshaft Thrust Plate Bolt	15 N·m	11 lb ft
Connecting Rod Bearing Cap Nut	27 N·m + 50°	20 lb ft + 50°
Crankshaft Balancer Bolt	150 N·m + 76°	111 lb ft + 76°
Crankshaft Position Sensor Stud	30 N·m	22 lb ft
Crankshaft Rear Oil Seal Housing Bolt	15 N·m + 50°	11 lb ft + 50°
Cylinder Head Bolt	50 N·m + 120°	37 lb ft + 120°
Cylinder Head Bolt (Center)	50 N·m + 120°	37 lb ft + 120°
Drive Belt Tensioner Bolt	50 N·m	37 lb ft
EGR Valve Adapter Bolt	50 N·m	37 lb ft
EGR Valve Nut	29 N·m	21 lb ft
EGR Valve Outlet Pipe Bolt/Nut	29 N·m	21 lb ft
EGR Valve Wiring Harness Heat Shield Bolt/Nut	10 N·m	89 lb in
Engine Block Coolant Drain Plug (Knock Sensors)	18 N·m	13 lb ft
Engine Coolant Temperature Sensor	25 N·m	18 lb ft
Engine Flywheel Bolt	15 N·m + 50°	11 lb ft + 50°
Engine Front Cover Bolt/Stud	20 N·m + 40°	15 lb ft + 40°
Engine Ground Nut	35 N·m	26 lb ft
Engine Lift Bracket Bolt/Nut/Stud	30 N·m	22 lb ft
Engine Mount Bracket Bolt	102 N·m	75 lb ft
Engine Mount Nut (Lower)	78 N·m	58 lb ft
Engine Mount Nut (Upper)	78 N·m	58 lb ft
Engine Mount Strut Bolt	48 N·m	35 lb ft
Engine Mount Strut Bracket Bolt	50 N·m	37 lb ft
Engine Mount Strut Bracket Bolt (Upper Radiator Support)	28 N·m	21 lb ft
Engine Mount Strut Bracket nut (Lower)	30 N·m	22 lb ft
Engine Mount Strut Nut	48 N·m	35 lb ft
Engine Oil Pressure Sensor	16 N·m	12 lb ft
Engine to Transaxle Bolt	75 N·m	55 lb ft
Engine Wiring Harness Bolt	10 N·m	89 lb in
Fuel Injector Sight Shield Bracket Nut	30 N·m	22 lb ft
Generator Brace Bracket Bolt	50 N·m	37 lb ft
Lower Intake Manifold Bolt	15 N·m	11 lb ft



Oil Filter Adapter Bolt	15 N·m + 50°	11 lb ft + 50°
Oil Level Sensor	20 N·m	15 lb ft
Oil Level Indicator Tube Nut	19 N·m	14 lb ft
Oil Pan Bolt	14 N·m	10 lb ft
Oil Pan Drain Plug	30 N·m	22 lb ft
Oil Pump Cover Screw	11 N·m	98 lb in
Oil Pump, Pipe and Screen Bolt	15 N·m	11 lb ft
Positive Battery Terminal Nut	15 N·m	11 lb ft
Power Steering Bolt	34 N·m	25 lb ft
Throttle Body Support Bolt	10 N·m	89 lb in
Timing Chain Dampener Bolt	22 N·m	16 lb ft
Upper Intake Manifold Bolt	10 N·m	89 lb in
Valve Lifter Guide Bolt	30 N·m	22 lb ft
Valve Rocker Arm Bolt	15 N·m + 90°	11 lb ft + 90°
Valve Rocker Arm Cover Bolt	10 N·m	89 lb in
Water Outlet Housing Bolt	27 N·m	20 lb ft
Water Pump Bolt	15 N·m + 80°	11 lb ft + 80°
Water Pump Pulley Bolt	13 N·m	116 lb in

## Engine Component Description

### Engine Construction


Starting at the front of the engine, the cylinders of the left bank are numbered 1-3-5 and the cylinders of the right bank are numbered 2-4-6. The crankshaft is supported in the engine block by four bearings. The crankshaft is counterbalanced by the flywheel, the crankshaft balancer, and the weights cast into the crankshaft. Additional counterbalancing is obtained from the balance shaft which rides in the engine block above the camshaft and is driven by the camshaft. All 3800 engines are even-firing, the cylinders fire at equal 120 degree intervals of crankshaft rotation. The location of the crankshaft journals has been offset by 30 degrees to fire the cylinders at 120 degree intervals of crankshaft rotation. The camshaft lobes and timing also reflect the 120 degree intervals. The even firing crankshaft provides an equal interval of 120 degrees between ignition of each of the cylinders throughout the firing order. The firing order is 1-6-5-4-3-2. The aluminum alloy pistons have slipper skirts and are cam turned. Four drilled holes or casted slots in the oil ring grooves permit drain back of the oil collected by the oil ring. The camshaft is supported by four bearings in the engine block and is driven by the crankshaft through sprockets and a timing chain. The cylinder heads are cast iron and incorporate integral valve stem guides. Right and left cylinder heads are identical and are interchangeable, but it is good practice to reinstall the cylinder heads on the side from which they are removed. The intake manifold is bolted to the inner faces of both cylinder heads so it connects with all inlet ports.

Each exhaust and intake valve has a valve spring to insure positive seating throughout the operating speed range. The valve rocker arms for each bank of the cylinders pivot on pedestals bolted to the cylinder head. Hydraulic roller valve lifters and tubular push rods are used to operate overhead rocker arms and valves of both banks of the cylinders from a single camshaft. This system requires no lash adjustment at the time of assembly or service.

In addition to its normal function of a cam follower, each valve lifter also serves as an automatic adjuster which maintains zero lash in the valve train under all operating conditions. By eliminating all lash in the valve train and also providing a cushion of oil to absorb operating shocks, the valve lifter promotes quiet valve operation. It also eliminates the need for periodic valve adjustment to compensate for wear of parts. Oil is supplied to the valve lifter through a hole in the side of the valve lifter body which indexes with a groove and a hole in the valve lifter plunger. Oil is then metered past the oil metering valve in the valve lifter, through the push rods to the valve rocker arms. When the valve lifter begins to move up the camshaft lobe, the check ball is held against its seat in the plunger by the check ball spring which traps the oil in the base of the valve lifter body below the plunger.

The plunger and the valve lifter body then raise as a unit, pushing up the push rod to open the valve. The force of the valve spring which is exerted on the plunger through the valve rocker arm and push rod, causes a slight amount of leakage between the plunger and the valve lifter body. This leakage allows a slow escape of trapped oil in the base of the valve lifter body. As the valve lifter rolls down the other side of the camshaft lobe and reaches the base circle or valve closed position, the plunger spring quickly moves the plunger back (up) to its original position. This movement causes the check ball to open against the ball spring, and any oil inside the plunger is drawn into the base of the valve lifter. This restores the valve lifter to the zero lash.

### Lubrication Description

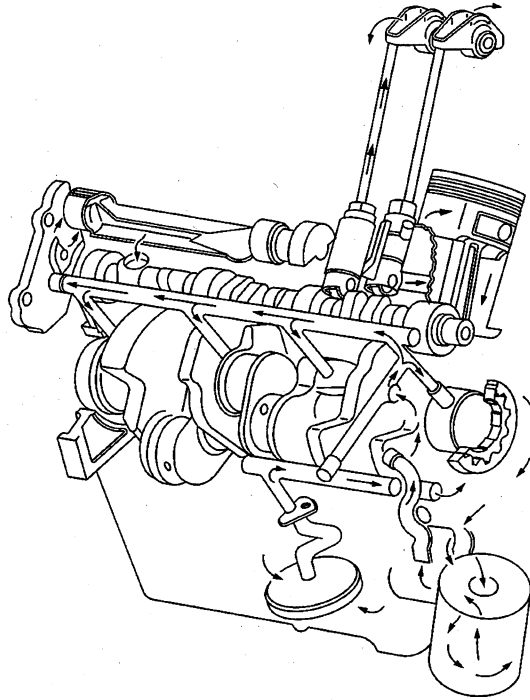

The engine lubrication system is of the force-feed type. The oil is supplied under full pressure to the crankshaft, connecting rods, valve lifters, camshaft, and rear balance shaft bearing. A controlled volume of oil is supplied to the valve rocker arms and push rods. All other moving parts are lubricated by gravity flow or splash. The engine oil is stored in the lower crankcase (oil pan) which is filled through a filler opening in the valve rocker arm cover. A removable oil level indicator, on the left side of the engine block, is provided to check the oil level. The oil pump is located in the engine front cover and is driven by the crankshaft. It is a gerotor-style pump which is a combination of a gear and a rotor pump. It is connected by a passage in the cylinder block to an oil screen and pipe assembly. The screen is submerged in the oil supply and has ample volume for all operating conditions. If the screen becomes clogged, oil may be drawn into the system through the oil pressure relief valve in the oil filter adapter. Oil is drawn into the pump through the screen and pipe assembly, and a passage in the crankcase, connecting to the passages in the engine front cover. Oil is discharged from the oil pump to the oil filter adapter. The oil filter adapter consists of an oil filter bypass valve and a nipple for installation of an oil filter. The spring-loaded oil pressure relief valve, located in the engine front cover, limits the oil pressure. The oil filter bypass valve opens when the oil filter is restricted to approximately 68.95 kPa (10 psi) of pressure difference between the oil filter inlet and discharge. The oil will then bypass the oil filter and channel unfiltered oil directly to the main oil galleries of the engine. A full-flow oil filter is externally mounted to the oil filter adapter on the lower right front side of the engine. If the filter element becomes restricted, not allowing engine oil to pass through, a spring-loaded bypass valve opens. The main oil galleries run the full length of the engine block and cut into the valve lifter guide holes to supply oil at full pressure to the

valve lifters. Holes, drilled from the crankshaft bearings to the main oil gallery, intersect the camshaft bearing bores to supply oil to the cam bearings.

Oil is transferred from the crankshaft bearings to the connecting rod bearings through holes drilled in the crankshaft. Pistons, piston pins, and cylinder walls are lubricated by oil splash from the crankshaft and connecting rods.

Each valve rocker arm and valve is supplied with oil through the tubular push rod. The oil comes from the inside of the valve lifter passing around the metering valve and through a hole in the push rod seat. Oil from the push rod passes through a hole in the push rod seat, and emerges on top of the push rod seat boss.

## Engine Cooling

### Fastener Tightening Specifications

Application	Specification	
	Metric	English
Coolant Recovery Reservoir Mounting Nut	3.3 N·m	29 lb in
Cooling Fan Shroud Bolt	10 N·m	89 lb in
Coolant Heater Bolt	2 N·m	18 lb in
Engine Block Coolant Drain Plug	19 N·m	14 lb ft
Engine Block Heater Screw	2 N·m	18 lb in
Knock Sensor (3.8L)	19 N·m	14 lb ft
Radiator Bracket Mounting Bolt	10 N·m	18 lb in
Radiator Lower Air Deflector	20 N·m	15 lb ft
Thermostat Bypass Pipe Bolt	11 N·m	98 lb in
Thermostat Bypass Pipe Nut	25 N·m	18 lb ft
Water Outlet Housing Bolt (3.4L)	25 N·m	18 lb ft
Water Outlet Housing Bolt/Stud (3.8L)	27 N·m	20 lb ft
Water Pump Bolt (3.4L)	10 N·m	89 lb in
Water Pump Bolt (Long) (3.8L)	20 N·m + 40 degrees	15 lb ft + 40 degrees
Water Pump Bolt (Short) (3.8L)	15 N·m + 80 degrees	11 lb ft + 80 degrees
Water Pump Pulley Bolt (3.4L)	25 N·m	18 lb ft
Water Pump Pulley Bolt (3.8L)	13 N·m	115 lb in

### Cooling System Description and Operation

#### Coolant Heater

The optional engine coolant heater (RPO K05) operates using 110-volt AC external power and is designed to warm the coolant in the engine block area for improved starting in very cold weather (-29°C (-20°F)). The coolant heater helps reduce fuel consumption when a cold engine is warming up. The unit is equipped with a detachable AC power cord. A weather shield on the cord is provided to protect the plug when not in use.

#### Cooling System

The cooling system's function is to maintain an efficient engine operating temperature during all engine speeds and operating conditions. The cooling system is designed to remove approximately one-third of the heat produced by the burning of the air-fuel mixture. When the engine is cold, the coolant does not flow to the radiator until the thermostat opens. This allows the engine to warm quickly.

#### Cooling Cycle

Coolant flows from the radiator outlet and into the water pump inlet. Some coolant flows from the water pump, to the heater core, then back to the water pump. This provides the passenger compartment with heat and defrost capability as the coolant warms up.

Coolant also flows from the water pump outlet and into the engine block. In the engine block, the coolant circulates through the water jackets surrounding the cylinders where it absorbs heat.

The coolant then flows through the cylinder head gasket openings and into the cylinder heads. In the cylinder heads, the coolant flows through the water jackets surrounding the combustion chambers and valve seats, where it absorbs additional heat.

From the cylinder heads, the coolant flows to the thermostat. The flow of coolant will either be stopped at the thermostat until the engine reaches normal operating temperature, or it will flow through the thermostat and into the radiator where it is cooled. At this point, the coolant flow cycle is completed.

Efficient operation of the cooling system requires proper functioning of all cooling system components. The cooling system consists of the following components:

### **Coolant**

The engine coolant is a solution made up of a 50-50 mixture of DEX-COOL and suitable drinking water. The coolant solution carries excess heat away from the engine to the radiator, where the heat is dissipated to the atmosphere.

### **Radiator**

The radiator is a heat exchanger. It consists of a core and two tanks. The aluminum core is a tube and fin crossflow design that extends from the inlet tank to the outlet tank. Fins are placed around the outside of the tubes to improve heat transfer to the atmosphere.

The inlet and outlet tanks are a molded, high temperature, nylon reinforced plastic material. A high temperature rubber gasket seals the tank flange edge to the aluminum core. The tanks are clamped to the core with clinch tabs. The tabs are part of the aluminum header at each end of the core.

The radiator also has a drain cock located in the bottom of the left hand tank. The drain cock unit includes the drain cock and drain cock seal.

The radiator removes heat from the coolant passing through it. The fins on the core transfer heat from the coolant passing through the tubes. As air passes between the fins, it absorbs heat and cools the coolant.

### **Pressure Cap**

The pressure cap seals the cooling system. It contains a blow off or pressure valve and a vacuum or atmospheric valve. The pressure valve is held against its seat by a spring, which protects the radiator from excessive cooling system pressure. The vacuum valve is held against its seat by a spring, which permits opening of the valve to relieve vacuum created in the cooling system as it cools off. The vacuum, if not relieved, might cause the radiator and/or coolant hoses to collapse.

The pressure cap allows cooling system pressure to build up as the temperature increases. As the pressure builds, the boiling point of the coolant increases. Engine coolant can be safely run at a temperature much higher than the boiling point of the coolant at atmospheric pressure. The hotter the coolant is, the faster the heat transfers from the radiator to the cooler, passing air.

The pressure in the cooling system can get too high. When the cooling system pressure exceeds the rating of the pressure cap, it raises the pressure valve, venting the excess pressure.

As the engine cools down, the temperature of the coolant drops and a vacuum is created in the cooling system. This vacuum causes the vacuum valve to open, allowing outside air into the surge tank. This equalizes the pressure in the cooling system with atmospheric pressure, preventing the radiator and coolant hoses from collapsing.

### **Coolant Recovery System**

The coolant recovery system consists of a plastic coolant recovery reservoir and overflow tube. The recovery reservoir is also called a recovery tank or expansion tank. It is partially filled with coolant and is connected to the radiator fill neck with the overflow tube. Coolant can flow back and forth between the radiator and the reservoir.

In effect, a cooling system with a coolant recovery reservoir is a closed system. When the pressure in the cooling system gets too high, it will open the pressure valve in the pressure cap. This allows the coolant,

which has expanded due to being heated, is allowed to flow through the overflow tube and into the recovery reservoir. As the engine cools down, the temperature of the coolant drops and a vacuum is created in the cooling system. This vacuum opens the vacuum valve in the pressure cap, allowing some of the coolant in the reservoir to be siphoned back into the radiator. Under normal operating conditions, no coolant is lost. Although the coolant level in the recovery reservoir goes up and down, the radiator and cooling system are kept full. An advantage to using a coolant recovery reservoir is that it eliminates almost all air bubbles from the cooling system. Coolant without bubbles absorbs heat much better than coolant with bubbles.

### **Air Baffles and Seals**

The cooling system uses deflectors, air baffles and air seals to increase cooling system capability. Deflectors are installed under the vehicle to redirect airflow beneath the vehicle and through the radiator to increase engine cooling. Air baffles are also used to direct airflow through the radiator and increase cooling capability. Air seals prevent air from bypassing the radiator and A/C condenser, and prevent recirculation of hot air for better hot weather cooling and A/C condenser performance.

### **Water Pump**

The water pump is a centrifugal vane impeller type pump. The pump consists of a housing with coolant inlet and outlet passages and an impeller. The impeller is mounted on the pump shaft and consists of a series of flat or curved blades or vanes on a flat plate. When the impeller rotates, the coolant between the vanes is thrown outward by centrifugal force.

The impeller shaft is supported by one or more sealed bearings. The sealed bearings never need to be lubricated. Grease cannot leak out, dirt and water cannot get in as long as the seal is not damaged or worn.

The purpose of the water pump is to circulate coolant throughout the cooling system. The water pump is driven by the crankshaft via the drive belt.

### **Thermostat**

The thermostat is a coolant flow control component. Its purpose is to help regulate the operating temperature of the engine. It utilizes a temperature sensitive wax-pellet element. The element connects to a valve through a small piston. When the element is heated, it expands and exerts pressure against the small piston. This pressure forces the valve to open. As the element is cooled, it contracts. This contraction allows a spring to push the valve closed.

When the coolant temperature is below the rated thermostat opening temperature, the thermostat valve remains closed. This prevents circulation of the coolant to the radiator and allows the engine to warm up. After the coolant temperature reaches the rated thermostat opening temperature, the thermostat valve will open. The coolant is then allowed to circulate through the thermostat to the radiator where the engine heat is dissipated to the atmosphere. The thermostat also provides a restriction in the cooling system, after it has opened. This restriction creates a pressure difference which prevents cavitation at the water pump and forces coolant to circulate through the engine block.

### **Engine Oil Cooler**

The engine oil cooler is a heat exchanger. It is located inside the left side end tank of the radiator. The engine oil temperature is controlled by the temperature of the engine coolant that surrounds the oil cooler in the radiator.

The engine oil pump, pumps the oil through the engine oil cooler line to the oil cooler. The oil then flows through the cooler where the engine coolant absorbs heat from the oil. The oil is then pumped through the oil cooler return line, to the oil filter, to the engine block oil system.

## Transmission Oil Cooler

The transmission oil cooler is a heat exchanger. It is located inside the right side end tank of the radiator. The transmission fluid temperature is regulated by the temperature of the engine coolant in the radiator.

The transmission oil pump, pumps the fluid through the transmission oil cooler line to the transmission oil cooler. The fluid then flows through the cooler where the engine coolant absorbs heat from the fluid. The fluid is then pumped through the transmission oil cooler return line, to the transmission.

## Engine Electrical

### Fastener Tightening Specifications

Application	Specification	
	Metric	English
Battery Hold Down Bolt	18 N·m	13 lb ft
Battery Negative Cable Bolt to Frame Rail	8 N·m	71 lb in
Battery Negative Terminal Bolt	15 N·m	11 lb ft
Battery Positive Cable Junction Block Lead Nut	15 N·m	11 lb ft
Battery Positive Terminal Bolt	15 N·m	11 lb ft
Battery Tray Bolts	5 N·m	44 lb in
Generator Bolt (3.4L)	50 N·m	37 lb ft
Generator Bolt (3.8L)	50 N·m	37 lb ft
Generator Bracket Bolt	50 N·m	37 lb ft
Generator Output BAT Terminal Nut (3.4L)	20 N·m	15 lb ft
Generator Output BAT Terminal Nut (3.8L)	20 N·m	15 lb ft
Generator Pivot Bolt (3.4L)	50 N·m	37 lb ft
Generator Pivot Bolt (3.8L)	50 N·m	37 lb ft
Generator Rear Brace Bolt/Nut (3.4L)	25 N·m	18 lb ft
Generator Rear Brace Bolt/Nut (3.8L)	50 N·m	37 lb ft
Generator Stud (3.8L)	50 N·m	37 lb ft
Starter Bolt	43 N·m	32 lb ft
Starter Solenoid BAT Terminal Nut	10 N·m	89 lb in
Starter Solenoid S Terminal Nut	2.3 N·m	20.5 lb in
Underhood Accessory Wiring Junction Block Nuts	2 N·m	18 lb in
Transaxle Stud Nut	25 N·m	18 lb ft

### Battery Usage

Application	Specification
<b>LA1</b>	
GM Part Number	19001810
Cold Cranking Amperage (CCA)	600 A
Reserve Capacity	115 Minutes
Replacement Model Number	78-6YR
<b>L36</b>	
Catalog Number	19001812
Cold Cranking Amperage (CCA)	790 A
Reserve Capacity	115 Minutes
Replacement Model Number	78-7YR

## Battery Temperature vs Minimum Voltage

Estimated Temperature °F	Estimated Temperature °C	Minimum Voltage
70 or above	21 or above	9.6
50	10	9.4
32	0	9.1
15	-10	8.8
0	-18	8.5
Below 0	Below -18	8.0

## Starter Motor Usage

Application	Model
LA1	PG260 D
L36	PG260 F2

## Generator Usage

RPO K43	
Application	Specification
Generator Model	Delphi CS 130D
Rated Output	102 A
Load Test Output	70 A
RPO KG7	
Application	Specification
Generator Model	Bosch NCB1
Rated Output	125 A
Load Test Output	87.5 A




## Battery Description and Operation

### Caution

Batteries produce explosive gases, contain corrosive acid, and supply levels of electrical current high enough to cause burns. Therefore, to reduce the risk of personal injury when working near a battery:

- Always shield your eyes and avoid leaning over the battery whenever possible.
- Do not expose the battery to open flames or sparks.
- Do not allow the battery electrolyte to contact the eyes or the skin. Flush immediately and thoroughly any contacted areas with water and get medical help.
- Follow each step of the jump starting procedure in order.
- Treat both the booster and the discharged batteries carefully when using the jumper cables.

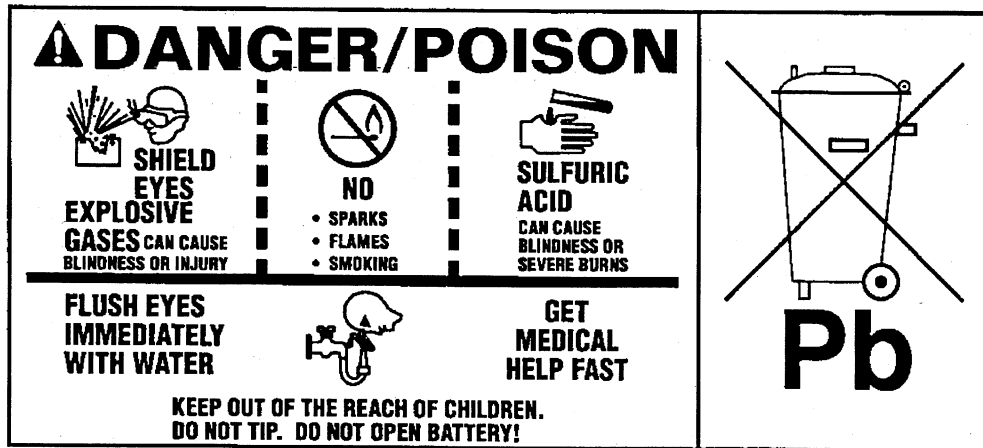

The maintenance free battery is standard. There are no vent plugs in the cover. The battery is completely sealed except for two small vent holes in the side. These vent holes allow the small amount of gas that is produced in the battery to escape.

The battery has three functions as a major source of energy:

- Engine cranking
- Voltage stabilizer
- Alternate source of energy with generator overload.

The battery specification label (example below) contains information about the following:

- The test ratings
- The original equipment catalog number
- The recommended replacement model number

CATALOG NO.

1819

CCA 770	LOAD TEST 380
REPLACEMENT MODEL 100 – 6YR	

A battery has 2 ratings:

- Reserve capacity
- Cold cranking amperage

When a battery is replaced use a battery with similar ratings. Refer to the battery specification label on the original battery or refer to Battery Usage .

### Reserve Capacity

Reserve capacity is the amount of time in minutes it takes a fully charged battery, being discharged at a constant rate of 25 amperes and a constant temperature of 27°C (80°F) to reach a terminal voltage of 10.5 V. Refer to Battery Usage for the reserve capacity rating of the original equipment battery.

### Cold Cranking Amperage

The cold cranking amperage is an indication of the ability of the battery to crank the engine at cold temperatures. The cold cranking amperage rating is the minimum amperage the battery must maintain for 30 seconds at -18°C (0°F) while maintaining at least 7.2 volts. Refer to Battery Usage for the cold cranking amperage rating for this vehicle.

### Circuit Description

The battery positive terminal supplies Battery Positive voltage to the under hood fuse block and the rear fuse block. The under hood fuse block provides a cable connection for the generator and a cable connection for the starter.

The battery negative terminal is connected to chassis ground G305 and supplies ground for the AD converter in the DIM.

### Starting System Description and Operation

This vehicle has two starter motor applications. The 3400 LA1 (VIN E) uses the PG260 D starter motor. The 3800 L36 (VIN K) uses the PG260 F2 starter motor.

These starter motors have pieces that are arranged around the armature. The solenoid windings are energized when the ignition switch is turned to START. The resulting plunger and shift lever movement

causes the pinion to engage the flywheel ring gear and the solenoid main contact switch to close. When the engine starts, the pinion overrun protects the armature from excessive speed until the switch is opened. Once the solenoid windings are de-energized, the return spring causes the pinion to disengage.

### **Charging System Description and Operation**

A Delphi CS130D 105 ampere generator is standard equipment on this vehicle. A Bosch NCB1 125 ampere generator is used for the police (9C1) and the taxi (9C6) options. The components of these generators include the following:

The generator provides voltage to operate the vehicle's electrical system and to charge the battery. A magnetic field is created when current flows through the rotor. This field rotates as the rotor is driven by the engine, creating an AC voltage in the stator windings. The AC voltage is converted to DC by the rectifier bridge and is supplied to the electrical system at the battery terminal.

The generator's digital regulator uses digital techniques to supply the rotor current and thereby control the output voltage. The rotor current is proportional to the width of the electrical pulses supplied by the digital regulator. When the ignition switch is ON, voltage is supplied to terminal L from the Powertrain Control Module (PCM), turning on the digital regulator. Narrow width pulses are supplied to the digital rotor, creating a weak magnetic field. When the engine is started, the digital regulator senses generator rotation by detecting AC voltage at the stator through an internal wire. Once the engine is running, the digital regulator varies the field current by controlling the pulse width. This regulates the generator output voltage for proper battery charging and electrical system operation.

## Engine Controls

### Engine Controls – 3.4L

#### Ignition System Specifications

Application	Specification	
	Metric	English
Firing Order	1-2-3-4-5-6	
Spark Plug Gap	1.52 mm	0.060 in
Spark Plug Torque	15 N·m	11 lb ft
Spark Plug Type	41-940 [AC plug type]	
Spark Plug Wire Resistance	3000 ohms per ft	

#### Fastener Tightening Specifications

Application	Specification	
	Metric	English
Accelerator Cable Bracket Retaining Bolts	13 N·m	115 lb in
Accelerator Cable Bracket Retaining Nut	10 N·m	89 lb in
Accelerator Pedal Retaining Bolt	5 N·m	44 lb in
Air Cleaner Duct Clamp	2 N·m	18 lb in
Camshaft Position (CMP) Sensor Retaining Bolt	10 N·m	89 lb in
Crankshaft Position 7X (CKP) Sensor Bolts	11 N·m	97 lb in
Crankshaft Position 24X (CKP) Sensor Bolts	10 N·m	89 lb in
Exhaust Gas Recirculation (EGR) Pipe Bolt	30 N·m	22 lb ft
Exhaust Gas Recirculation (EGR) Pipe Nut	25 N·m	18 lb ft
Engine Coolant Temperature (ECT) Sensor	20 N·m	15 lb ft
EVAP Canister Purge Valve Bracket	10 N·m	89 lb in
Exhaust Gas Recirculation (EGR) Valve Bolts	30 N·m	22 lb ft
Fuel Filler Pipe Attaching Screw	10 N·m	89 lb in
Fuel Filter Feed Pipe Fitting	30 N·m	22 lb ft
Fuel Filter Mounting Bracket Bolt	20 N·m	15 lb ft
Fuel Pressure Regulator Attaching Bolt	8.5 N·m	76 lb in
Fuel Pressure and Return Pipes	17 N·m	13 lb ft
Fuel Rail Attaching Nuts or Bolts	10 N·m	89 lb in
Fuel Sender Access Panel Nuts	10 N·m	89 lb in
Fuel Tank Filler Pipe Hose Clamp	2.5 N·m	22 lb in
Fuel Tank Retaining Strap Bolts	48 N·m	35 lb ft
Heated Oxygen Sensors (HO2S)	41 N·m	30 lb ft
Idle Air Control (IAC) Valve Attaching Screws	3 N·m	27 lb in
Ignition Coil to Ignition Control Module (ICM) Screws	4.5 N·m	40 lb in
Knock Sensor (KS)	19 N·m	14 lb ft
Manifold Absolute Pressure (MAP) Sensor Retaining Bolt	3 N·m	27 lb in
Spark Plug		
To a New Cylinder Head	20 N·m	15 lb ft
To an Existing Cylinder Head	15 N·m	11 lb ft
Throttle Body Retaining Nuts or Bolts	28 N·m	21 lb ft
Throttle Position (TP) Sensor Screws	2 N·m	18 lb in

## Fuel System Specifications

Use regular unleaded gasoline rated at 87 octane or higher. The gasoline should meet specifications which were developed by the American Automobile Manufacturers Association (AAMA) and endorsed by the Canadian Motor Vehicle Manufacturers Association for better vehicle performance and engine protection. Gasoline meeting the AAMA specification could provide improved driveability and emission control system performance compared to other gasolines. For more information, write to: American Automobile Manufacturers Association, 7430 Second Ave., Suite 300, Detroit, MI, 48202.

Be sure the posted octane is at least 87. If the octane is less than 87, you may get a heavy knocking noise when you drive. If the knocking is bad enough, your engine could be damaged.

If you are using fuel rated at 87 octane or higher and you hear heavy knocking, your engine needs service. But do not worry if you hear a little pinging noise when you are accelerating or driving up a hill. The pinging is normal, and you do not have to buy a higher octane fuel in order to get rid of pinging. The heavy, constant knock indicates a problem.

**Notice:** Your vehicle was not designed for fuel that contains methanol. Do not use methanol fuel which can corrode metal parts in your fuel system and also damage plastic and rubber parts. This kind of damage would not be covered under your warranty.

If your vehicle is certified to meet California Emission Standards, indicated on the underhood emission control label, the vehicle is designed to operate on fuels that meet California specifications. If such fuels are not available in states adopting California emissions standards, your vehicle will operate satisfactorily on fuels meeting federal specifications, but the emissions control system performance may be affected. The malfunction indicator lamp (MIL) on your instrument panel may turn ON and/or your vehicle may fail a smog test. See "Malfunction Indicator Lamp" in the Index. If this occurs, return to your authorized GM dealer for diagnosis in order to determine the cause of the failure. If the cause of the condition is the type of fuels used, repairs may not be covered by your warranty.

Some gasolines that are not reformulated for low emissions may contain an octane-enhancing additive called methylcyclopentadienyl manganese tricarbonyl (MMT). Ask your service station operator whether the fuel contains MMT. General Motors does not recommend the use of such gasolines. If fuels containing MMT are used, spark plug life may be reduced and your emission control system performance may be affected. The MIL on your instrument panel may turn ON. If this occurs, return to your authorized GM dealer for service.

In order to provide cleaner air, all gasolines in the United States are now required to contain additives that will help prevent deposits from forming in your engine and fuel system, allowing your emission control system in order to function properly. Therefore, you should not have to add anything to the fuel. In addition, gasolines containing oxygenates, such as ethers and ethanol, and reformulated gasolines may be available in your area in order to contribute to clean air. General Motors recommends that you use these gasolines, particularly if they comply with the specification described earlier.

## Fuels in Foreign Countries (Gasoline Engines)

If you plan to drive in another country outside the United States or Canada, the proper fuel may be hard to find. Never use leaded gasoline or any other fuel not recommended in the previous text on fuel. Costly repairs caused by the use of improper fuel would not be covered by your warranty.

In order to check on fuel availability, ask an auto club, or contact a major oil company that does business in the country where you will be driving.

**Engine Controls – 3.8L****Ignition System Specifications**

Application	Specification	
	Metric	English
Firing Order	1-6-5-4-3-2	
Spark Plug Wire Resistance	3000 ohms per ft	
Spark Plug Wire Resistance - POLICE	600 ohms per ft	
Spark Plug Torque	15 N·m	11 lb ft
Spark Plug Gap	1.52 mm	0.060 in
Spark Plug Type	41-921 [AC plug type]	

**Fastener Tightening Specifications**

Application	Specification	
	Metric	English
Accelerator Cable Bracket Retaining Nuts and Bolts	16 N·m	12 lb ft
Accelerator Control Assy to Floor Fasteners	3 N·m	27 lb in
Air Cleaner Assembly Screws	4 N·m	35 lb in
Air Cleaner Duct Clamps	2 N·m	18 lb in
AIR Pipe Bolts	9 N·m	80 lb in
AIR Pump Exhaust Mounting Bolts	10 N·m	88 lb in
AIR Pump Mounting Bracket Bolts	50 N·m	37 lb ft
AIR Secondary Injection Combination Valve Bolts	9 N·m	80 lb in
AIR Vacuum Control Solenoid Bolts	10 N·m	88 lb in
Camshaft Position (CMP) Sensor Retaining Bolt	10 N·m	89 lb in
Crankshaft Balancer Bolt	150 N·m +76°	110 lb ft +76°
Crankshaft Position (CKP) Sensor Bolts	30 N·m	22 lb ft
EGR Valve Adapter Pipe Bolt	50 N·m	37 lb ft
EGR Valve Adapter Pipe Stud	50 N·m	37 lb ft
EGR Valve Intake Pipe to Exhaust Manifold Bolt	29 N·m	21 lb ft
EGR Valve Outlet Pipe to Adapter Nut	29 N·m	21 lb ft
EGR Valve Outlet Pipe to Intake Manifold Bolt	29 N·m	21 lb ft
EGR Valve to Retaining Nuts	30 N·m	22 lb ft
Engine Coolant Temperature (ECT) Sensor	20 N·m	15 lb ft
Engine Oil Level Sensor	34 N·m	25 lb ft
Evaporative Emissions (EVAP) Vent Valve Bracket	2 N·m	18 lb in
Fuel Filler Neck Bolts	2 N·m	18 lb in
Fuel Filler Pipe Attaching Screws	10 N·m	89 lb in
Fuel Filter Fitting	30 N·m	22 lb ft
Fuel Filter Mounting Bracket	20 N·m	15 lb ft
Fuel Injector Sight Shield	2 N·m	18 lb in
Fuel Line Retainer	12 N·m	106 lb in
Fuel Rail Attaching Nuts or Bolts	10 N·m	88 lb in
Fuel Rail Hold-Down Stud	25 N·m	18 lb ft
Fuel Sender Access Panel Retaining Nuts	10 N·m	89 lb in
Fuel Tank Filler Pipe EVAP Pipe Hose Clamp	2.5 N·m	22 lb in
Fuel Tank Filler Pipe Ground Strap Screw	9 N·m	80 lb in
Fuel Tank Filler Pipe Hose Clamp	2.5 N·m	22 lb in
Fuel Tank Retaining Strap Bolts	48 N·m	35 lb ft
Heated Oxygen Sensors	41 N·m	30 lb ft
Idle Air Control Valve Attaching Screws	3 N·m	27 lb in
Ignition Coil to Ignition Control Module Screws	4.5 N·m	40 lb in
Ignition Control Module 14 Way Connector To Module Bolt	2.1 N·m	19 lb in

In-Line Fuel Filter Outlet Nut	30 N·m	22 lb ft
Intake Air Duct Clamp Screws	2 N·m	18 lb in
Intake Air Duct Clamps	2 N·m	18 lb in
Knock Sensor Heat Shield Bolts	60 N·m	44 lb ft
Knock Sensors	19 N·m	14 lb ft
Manifold Absolute Pressure (MAP) Sensor Bracket Retaining Bolt	30 N·m	22 lb ft
Mass Air Flow (MAF) Sensor Attaching Screws	3 N·m	27 lb in
PCM Harness Connector to PCM	8 N·m	71 lb in
Powertrain Control Module (PCM) Bolts	8 N·m	71 lb in
Secondary Air Injection Manifold Pipe Fasteners	9 N·m	80 lb in
Secondary Air Injection Pump Bracket Fasteners	10 N·m	89 lb ft
Secondary Air Injection Shut-Off Valve Bracket Fasteners	9 N·m	80 lb in
Spark Plug	15 N·m	11 lb ft
Throttle Body Retaining Nuts	10 N·m	89 lb in
Throttle Body Support Bracket Bolts	16 N·m	11.8 lb ft
Throttle Position Sensor Screws	2 N·m	18 lb in
Transaxle Range Switch Attaching Bolts	28 N·m	20 lb ft
Wheel Lug Nuts	140 N·m	104 lb ft

## Fuel System Specifications

If you have the 3400 V6 engine (VIN Code M) or 3800 V6 engine (VIN Code K), use regular unleaded gasoline rated at 87 octane or higher. IF you are using fuel rated at the recommended octane or higher and you hear a little pinging noise when you are accelerating or driving up a hill that is normal. You do not need to buy a higher octane fuel to get rid of pinging. It is the heavy, constant knock that means there is a problem.

If you have the 3800 Supercharged V6 engine (VIN Code 1), use premium unleaded gasoline rated at 91 octane or higher. With the 3800 Supercharged engine, in an emergency, you may be able to use an octane as low as 87, if heavy knocking does not occur. If you are using 91 or higher octane unleaded gasoline and you hear heavy knocking, your engine needs service.

It is recommended that the gasoline meet specifications which have been developed by the American Automobile Manufacturers Association (AAMA) and endorsed by the Canadian Motor Vehicle Manufacturers Association for better vehicle performance and engine protection. Gasolines meeting the AAMA specification could provide improved driveability and emission control system performance compared to other gasolines. For more information, write to : American Automobile Manufacturer's Association, 7430 Second Ave, Suite 300, Detroit MI 48202.

Be sure the posted octane is at least 91 for premium, at least 90 for middle grade, and at least 87 for regular grade. If the octane is less than 87, you may get a heavy knocking noise when you drive. If it is bad enough, it can damage your engine.

## Notice

Your vehicle was not designed for fuel that contains methanol. Do not use methanol fuel which can corrode metal parts in your fuel system and also damage plastic and rubber parts. This kind of damage would not be covered under your warranty.

If your vehicle is certified to meet California Emission Standards, as indicated on the under hood emission control label, it is designed to operate on fuels that meet California specifications. If such fuels are not available in states adopting California emissions standards, your vehicle will operate satisfactorily on fuels meeting federal specifications, but emission control system performance may be affected. The malfunction indicator lamp on your instrument panel may turn on and/or your vehicle may fail a smog-check test. If this occurs, return to your authorized dealer for diagnosis to determine the cause of failure. In the event it is determined that the cause of the condition is the type of fuels used, repairs may not be covered by your warranty.

Some gasolines that are not reformulated for low emissions may contain an octane-enhancing additive called methylcyclopentadienyl manganese tricarbonyl (MMT). Ask your service station operator whether or not the fuel contains MMT.

## Exhaust System

### Fastener Tightening Specifications

Application	Specification	
	Metric	English
Catalytic Converter Bolt (3.8L)	45 N·m	33 lb ft
Catalytic Converter Nut (3.4L)	34 N·m	25 lb ft
EGR Adapter Pipe to Exhaust Manifold Bolt (3.8L)	29 N·m	21 lb ft
Engine Lift Bracket Bolt/Nut	30 N·m	22 lb ft
Exhaust Crossover Pipe Bolt/Stud (3.8L)	20 N·m	15 lb ft
Exhaust Crossover Pipe Heat Shield Bolt (3.4L)	10 N·m	89 lb in
Exhaust Crossover Pipe Heat Shield Nut	20 N·m	15 lb ft
Exhaust Crossover Pipe nut (3.4L)	25 N·m	18 lb ft
Exhaust Manifold Heat Shield Bolt (3.4L)	10 N·m	89 lb in
Exhaust Manifold Heat Shield Bolt (3.8L)	20 N·m	15 lb ft
Exhaust Manifold Bolt/Stud (3.8L)	30 N·m	22 lb ft
Exhaust Manifold Nut (3.4L)	16 N·m	12 lb ft
Exhaust Manifold Pipe Stud Nut	32 N·m	24 lb ft
Exhaust Pipe Rear Hanger Bolt	25 N·m	18 lb ft
Fuel Injector Sight Shield Bracket Nut	30 N·m	22 lb ft
Rear Bumper Impact Bar Bolt	25 N·m	18 lb ft

### Exhaust System Description

#### Important

Use of non-OEM parts may cause driveability concerns.

The exhaust system design varies according to the model designation and the intended use of the vehicle.

In order to secure the exhaust pipe to the exhaust manifold, the exhaust system utilizes a flange and seal joint coupling. A flange and gasket coupling secures the catalytic converter assembly to the muffler assembly.

Hangers suspend the exhaust system from the underbody, allowing some movement of the exhaust system and disallowing the transfer of noise and vibration into the vehicle.

Heat shields protect the vehicle from the high temperatures generated by the exhaust system.

#### Resonator

Some exhaust systems are equipped with a resonator. The resonator, located either before or after the muffler, allows the use of mufflers with less back pressure. Resonators are used when vehicle characteristics require specific exhaust tuning.

#### Catalytic Converter

The catalytic converter is an emission control device added to the engine exhaust system in order to reduce hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) pollutants from the exhaust gas.



## 2001 Chevrolet Monte Carlo Restoration Kit

The catalytic converter is comprised of a ceramic monolith substrate, supported in insulation and housed within a sheet metal shell. The substrate may be washcoated with 3 noble metals:

- Platinum (Pt)
- Palladium (Pd)
- Rhodium (Rh)

The catalyst in the converter is not serviceable.

### **Muffler**

The exhaust muffler reduces the noise levels of the engine exhaust by the use of tuning tubes. The tuning tubes create channels inside the exhaust muffler that lower the sound levels created by the combustion of the engine.

## Transmission/Transaxle Description and Operation

### Automatic Transmission – 4T65E

#### Fastener Tightening Specifications

Description of Usage	Specification	
	Metric	English
2-1 Servo to Case	25 N·m	18 lb ft
Accumulator Cover to Case	12 N·m	106 lb in
Automatic Transmission Auxiliary Oil Cooler Bolts	25 N·m	18 lb ft
Automatic Transmission Auxiliary Oil Cooler Pipe Fittings	23 N·m	17 lb ft
Automatic Transmission Auxiliary Oil Cooler Nuts	10 N·m	97 lb in
Automatic Transmission Brace Bolts (to the Automatic Transmission)	43 N·m	35 lb ft
Automatic Transmission Brace Bolts (to the Engine)	63 N·m	46 lb ft
Automatic Transmission Fluid Filler Tube Bracket Bolt	13 N·m	115 lb in
Automatic Transmission Mount Bracket Bolts	95 N·m	70 lb ft
Automatic Transmission Mount to Automatic Transmission Bracket Nuts	47 N·m	35 lb ft
Automatic Transmission Mount to Frame Nuts	47 N·m	35 lb ft
Automatic Transmission Oil Cooler Hose Fittings	23 N·m	17 lb ft
Automatic Transmission Oil Cooler Hose Retaining Bracket Bolt	25 N·m	18 lb ft
Automatic Transmission Oil Cooler Pipe Clip Bolt	4 N·m	27 lb in
Automatic Transmission Range Selector Cable Bracket Bolts	25 N·m	18 lb ft
Automatic Transmission Range Selector Lever Nut	20 N·m	15 lb ft
Automatic Transmission Shift Lock Control Bolts	13 N·m	115 lb in
Automatic Transmission Assembly to Engine Bolts	75 N·m	55 lb ft
Automatic Transmission Torque Converter Bolts	63 N·m	47 lb ft
Automatic Transmission Torque Converter Cover Bolts	10 N·m	89 lb in
Case Cover to Case	12 N·m	106 lb in
Case Cover to Case	12 N·m	106 lb in
Case Cover to Driven Sprocket Support	25 N·m	18 lb ft
Case Cover to Driven Sprocket Support (Torx)	12 N·m	106 lb in
Case to Drive Sprocket Support	25 N·m	18 lb ft
Case Extension to Case	36 N·m	27 lb ft
Case Side Cover to Case	25 N·m	18 lb ft
Case Side Cover to Case (Stud)	25 N·m	18 lb ft
Case Side Cover to Case (Torx Special)	25 N·m	18 lb ft
Console Shift Control Nuts	24 N·m	18 lb ft
Detent Spring to Case Cover	12 N·m	106 lb in
Forward Band Servo Cover to Case	12 N·m	106 lb in
Manual Shaft/Detent Nut	32 N·m	23 lb ft
Oil Cooler Quick Connector	38 N·m	28 lb ft
Oil Cooler Quick Connector with Checkball	38 N·m	28 lb ft
Oil Pan to Case	14 N·m	10 lb ft
Oil Pressure Test Hole Plug	12 N·m	106 lb in
Pump Body to Case	16 N·m	11 lb ft
Pump Cover to Case Cover	12 N·m	106 lb in
Pump Cover to Pump Body	8 N·m	70 lb in
Speed Sensor to Case	12 N·m	106 lb in
TFP Switch to Case	16 N·m	120 lb ft
TFP Switch to Case Cover	12 N·m	106 lb in
TFP Switch to Valve Body	8 N·m	70 lb in
Valve Body to Case	12 N·m	106 lb in

Valve Body to Case	12 N·m	106 lb in
Valve Body to Case Cover	12 N·m	106 lb in
Valve Body to Case Cover	12 N·m	106 lb in
Valve Body to Case Cover (Torx)	12 N·m	106 lb in
Valve Body to Driven Sprocket Support	25 N·m	18 lb ft

### Transmission General Specifications

Name	Hydra-matic 4T65-E
RPO Codes	M15
Production Location	Warren, MI
Vehicle Platform (Engine/Transmission) Usage	W
Transaxle Drive	Transverse Mounted Front Wheel Drive
1st Gear Ratio	2.921:1
2nd Gear Ratio	1.568:1
3rd Gear Ratio	1.000:1
4th Gear Ratio	0.705:1
Reverse	2.385:1
Torque Converter Size (Diameter of Torque Converter Turbine)	245 mm (M15)
Pressure Taps	Line Pressure
Transaxle Fluid Type	DEXRON® III
Transaxle Fluid Capacity (Approximate)	Bottom Pan Removal: 7.0 L (7.4 qts) Complete Overhaul: 9.5 L (10.0 qts) Dry: 12.7 L (13.4 qts)
Transaxle Type: 4	Four Forward Gears
Transaxle Type: T	Transverse Mount
Transaxle Type: 65	Product Series
Transaxle Type: E	Electronic Controls
Chain Ratios (Designates Number of Teeth on the Drive/Driven Sprockets)	35/35
Final Drive Ratios	3.29
Overall Final Drive Ratios	3.29
Position Quadrant	P, R, N, D, 3, 2, 1
Case Material	Die Cast Aluminum
Transaxle Weight Dry	87.9 kg (194.2 lbs)
Transaxle Weight Wet	97.0 kg (214.4 lbs)
Maximum Trailer Towing Capacity	907 kg (2000 lbs)
Maximum Gross Vehicle Weight (GVW)	2903 kg (6,400 lbs)

### Fluid Capacity Specifications

Application	Specification	
	Metric	English
Bottom Pan Removal	7.0 liters	7.4 quarts
Complete Overhaul	9.5 liters	10.0 quarts
Dry	12.7 liters	13.4 quarts

## Transmission Component and System Description

### Transmission General Description

The 4T65-E is a fully automatic front wheel drive electronically controlled transmission. The 4T65-E provides four forward ranges including overdrive. The PCM controls shift points by means of two shift solenoids. A vane-type oil pump supplies the oil pressure. The PCM regulates oil pressure by means of a pressure control solenoid valve.

All vehicles equipped with a 4T65-E transmission have an electronically controlled capacity clutch (ECCC) system. In the ECCC system, the pressure plate does not fully lock to the torque converter cover. It is instead, precisely controlled to maintain a small amount of slippage between the engine and the turbine, reducing driveline torsional disturbances.

You can operate the transmission in any one of the following seven modes:

- P -- Park position prevents the vehicle from rolling either forward or backward. For safety reasons, use the parking brake in addition to the park position.
- R -- Reverse allows the vehicle to be operated in a rearward direction.
- N -- Neutral allows the engine to be started and operated while driving the vehicle. If necessary, you may select this position in order to restart the engine with the vehicle moving.
- D -- Overdrive is used for all normal driving conditions. Overdrive provides four gear ratios plus a converter clutch operation. Depress the accelerator in order to downshift for safe passing.
- 3 -- Drive position is used for city traffic and hilly terrain. Drive provides three gear ranges and drive range prevents the transmission from operating in fourth gear. Depress the accelerator in order to downshift.
- 2 -- Manual Second provides two gear ratios under most operating conditions. Manual Second provides acceleration and engine braking. Select this range at any vehicle speed, but the transmission will not downshift into Second gear until the vehicle speed drops below approximately 100 km/h (62 mph)
- 1 -- Manual Lo provides maximum engine braking. You may also select this range at any vehicle speed, but the transmission will not downshift into First gear until the vehicle speed drops below approximately 60 km/h (37 mph).

### Mechanical Components

The mechanical components of this unit are as follows:

- A torque converter with an Electronically Controlled Capacity Clutch (ECCC)
- A drive link assembly
- 4 multiple disk clutch assemblies: Input, Second, Third and Fourth
- 3 friction bands: Forward band, 2/1 band and Reverse band
- 2 planetary gear sets: Input and Reaction
- 3 one-way clutches: a roller clutch (1-2 support) and 2 sprag clutches (Third and Input)
- A final drive and differential assembly
- A control valve assembly
- A vane type oil pump

The electrical components of this unit are as follows:

- 2 shift solenoid valves
- A torque converter clutch pulse width modulation (TCC PWM) solenoid valve
- A pressure control (PC) solenoid valve
- An automatic transmission fluid temperature (TFT) sensor
- 2 speed sensors: input shaft and vehicle speed sensors
- An automatic transmission fluid pressure (TFP) manual valve position switch
- Either an Internal Mode Switch or an exterior-mounted Transmission Range Switch.
- An automatic transmission (A/T) wiring harness assembly

## **Adapt Function**

The 4T65-E transmission uses a line pressure control system, that has the ability to adapt line pressure to compensate for normal wear of the following parts:

- The clutch fiber plates
- The springs and seals
- The apply bands

The PCM maintains information for the following transmission adaptive systems:

### **Upshift Adapts (1-2, 2-3 and 3-4)**

The PCM monitors the automatic transmission input shaft speed (AT ISS) sensor and the vehicle speed sensor (VSS) in order to determine when an upshift has started and completed. The PCM measures the time for the upshift. If the upshift time is longer than a calibrated value, then the PCM will adjust the current to the pressure control (PC) solenoid valve to increase the line pressure for the next shift in the same torque range. If the upshift time is shorter than the calibrated value, then the PCM will decrease the line pressure for the next shift in the same torque range.

### **Steady State Adapts**

The PCM monitors the AT ISS sensor and the VSS after an upshift in order to determine the amount of clutch slippage. If excessive slippage is detected, then the PCM will adjust the current to the PC solenoid valve in order to increase the line pressure to maintain the proper gear ratio for the commanded gear.

The TAP information is divided into 13 units, called cells. The cells are numbered 4 through 16. Each cell represents a given torque range. TAP cell 4 is the lowest adaptable torque range and TAP cell 16 is the highest adaptable torque range. It is normal for TAP cell values to display zero or negative numbers. This indicates that the PCM has adjusted line pressure at or below the calibrated base pressure.

## **Automatic Transmission Shift Lock Control Description**

The automatic transmission shift lock control system is a safety device that prevents an inadvertent shift out of PARK when the engine is running. The driver must press the brake pedal before moving the shift lever out of the PARK position. The system consist of the following components:

- The automatic transmission shift lock control solenoid.
- The automatic transmission shift lock control switch.
- The body control module (BCM).
- The powertrain control module (PCM).

With the ignition in the ON position, battery positive voltage is supplied to the automatic transmission shift lock control switch. The circuit continues through the normally-closed switch to the automatic transmission shift lock control solenoid. The body control module (BCM) provides a ground for the automatic transmission shift lock control solenoid when the transmission is in the PARK position. The body control module (BCM) receives the transmission gear position information via class2 serial data from the powertrain control module (PCM). This causes the automatic transmission shift lock control solenoid to energize and lock the shift lever in the PARK position. When the driver presses the brake pedal, the contacts in the automatic transmission shift lock control switch open. This causes the automatic transmission shift lock control solenoid to release. This allows the shift lever to move from the PARK position. The body control module (BCM) turns off the automatic transmission shift lock control solenoid ground circuit when the transmission is out of the PARK position.

**This Page  
Intentionally Left  
Blank.**

## Abbreviations and Meanings

Abbreviation	Meaning
<b>A</b>	
A	Ampere(s)
ABS	Antilock Brake System
A/C	Air Conditioning
AC	Alternating Current
ACC	Accessory, Automatic Climate Control
ACL	Air Cleaner
ACR4	Air Conditioning Refrigerant, Recovery, Recycling, Recharging
AD	Automatic Disconnect
A/D	Analog to Digital
ADL	Automatic Door Lock
A/F	Air/Fuel Ratio
AH	Active Handling
AIR	Secondary Air Injection
ALC	Automatic Level Control, Automatic Lamp Control
AM/FM	Amplitude Modulation/Frequency Modulation
Ant	Antenna
AP	Accelerator Pedal
APCM	Accessory Power Control Module
API	American Petroleum Institute
APP	Accelerator Pedal Position
APT	Adjustable Part Throttle
ASM	Assembly, Accelerator and Servo Control Module
ASR	Acceleration Slip Regulation
A/T	Automatic Transmission/Transaxle
ATC	Automatic Transfer Case, Automatic Temperature Control
ATDC	After Top Dead Center
ATSLC	Automatic Transmission Shift Lock Control
Auto	Automatic
avg	Average
A4WD	Automatic Four-Wheel Drive
AWG	American Wire Gage
<b>B</b>	
B+	Battery Positive Voltage
BARO	Barometric Pressure
BATT	Battery
BBV	Brake Booster Vacuum
BCA	Bias Control Assembly
BCM	Body Control Module
BHP	Brake Horsepower

BLK	Black
BLU	Blue
BP	Back Pressure
BPCM	Battery Pack Control Module
BPMV	Brake Pressure Modulator Valve
BPP	Brake Pedal Position
BRN	Brown
BTDC	Before Top Dead Center
BTM	Battery Thermal Module
BTSI	Brake Transmission Shift Interlock
Btu	British Thermal Units
<b>C</b>	
°C	Degrees Celsius
CAC	Charge Air Cooler
CAFE	Corporate Average Fuel Economy
Cal	Calibration
Cam	Camshaft
CARB	California Air Resources Board
CC	Coast Clutch
cm <sup>3</sup>	Cubic Centimeters
CCM	Convenience Charge Module, Chassis Control Module
CCOT	Cycling Clutch Orifice Tube
CCP	Climate Control Panel
CD	Compact Disc
CE	Commutator End
CEAB	Cold Engine Air Bleed
CEMF	Counter Electromotive Force
CEX	Cabin Exchanger
cfm	Cubic Feet per Minute
cg	Center of Gravity
CID	Cubic Inch Displacement
CKP	Crankshaft Position
CKT	Circuit
C/Ltr	Cigar Lighter
CL	Closed Loop
CLS	Coolant Level Switch
CMC	Compressor Motor Controller
CMP	Camshaft Position
CNG	Compressed Natural Gas
CO	Carbon Monoxide
CO <sub>2</sub>	Carbon Dioxide
Coax	Coaxial
COMM	Communication



Conn	Connector
CPA	Connector Position Assurance
CPP	Clutch Pedal Position
CPS	Central Power Supply
CPU	Central Processing Unit
CRT	Cathode Ray Tube
CRTC	Cathode Ray Tube Controller
CS	Charging System
CSFI	Central Sequential Fuel Injection
CTP	Closed Throttle Position
cu ft	Cubic Foot/Feet
cu in	Cubic Inch/Inches
CV	Constant Velocity Joint
CVRSS	Continuously Variable Road Sensing Suspension
Cyl	Cylinder(s)
<b>D</b>	
DAB	Delayed Accessory Bus
dB	Decibels
dBA	Decibels on A-weighted Scale
DC	Direct Current, Duty Cycle
DCM	Door Control Module
DE	Drive End
DEC	Digital Electronic Controller
DERM	Diagnostic Energy Reserve Module
DI	Distributor Ignition
dia	Diameter
DIC	Driver Information Center
Diff	Differential
DIM	Dash Integration Module
DK	Dark
DLC	Data Link Connector
DMCM	Drive Motor Control Module
DMM	Digital Multimeter
DMSDS	Drive Motor Speed and Direction Sensor
DMU	Drive Motor Unit
DOHC	Dual Overhead Camshafts
DR, Drvr	Driver
DRL	Daytime Running Lamps
DTC	Diagnostic Trouble Code
<b>E</b>	
EBCM	Electronic Brake Control Module
EBTCM	Electronic Brake and Traction Control Module

EC	Electrical Center, Engine Control
ECC	Electronic Climate Control
ECI	Extended Compressor at Idle
ECL	Engine Coolant Level
ECM	Engine Control Module, Electronic Control Module
ECS	Emission Control System
ECT	Engine Coolant Temperature
EEPROM	Electrically Erasable Programmable Read Only Memory
EEVIR	Evaporator Equalized Values in Receiver
EFE	Early Fuel Evaporation
EGR	Exhaust Gas Recirculation
EGR TVV	Exhaust Gas Recirculation Thermal Vacuum Valve
EHPS	Electro-Hydraulic Power Steering
EI	Electronic Ignition
ELAP	Elapsed
ELC	Electronic Level Control
E/M	English/Metric
EMF	Electromotive Force
EMI	Electromagnetic Interference
Eng	Engine
EOP	Engine Oil Pressure
EOT	Engine Oil Temperature
EPA	Environmental Protection Agency
EPR	Exhaust Pressure Regulator
EPROM	Erasable Programmable Read Only Memory
ESB	Expansion Spring Brake
ESC	Electronic Suspension Control
ESD	Electrostatic Discharge
ESN	Electronic Serial Number
ETC	Electronic Throttle Control, Electronic Temperature Control, Electronic Timing Control
ETCC	Electronic Touch Climate Control
ETR	Electronically Tuned Receiver
ETS	Enhanced Traction System
EVAP	Evaporative Emission
EVO	Electronic Variable Orifice
Exh	Exhaust

F	
°F	Degrees Fahrenheit
FC	Fan Control
FDC	Fuel Data Center
FED	Federal All United States except California
FEDS	Fuel Enable Data Stream
FEX	Front Exchanger
FF	Flexible Fuel
FFH	Fuel-Fired Heater
FI	Fuel Injection
FMVSS	Federal U.S. Motor Vehicle Safety Standards
FP	Fuel Pump
ft	Foot/Feet
FT	Fuel Trim
F4WD	Full Time Four-Wheel Drive
4WAL	Four-Wheel Antilock
4WD	Four-Wheel Drive
FW	Flat Wire
FWD	Front Wheel Drive, Forward
G	
g	Grams, Gravitational Acceleration
GA	Gage, Gauge
gal	Gallon
gas	Gasoline
GCW	Gross Combination Weight
Gen	Generator
GL	Gear Lubricant
GM	General Motors
GM SPO	General Motors Service Parts Operations
gnd	Ground
gpm	Gallons per Minute
GRN	Green
GRY	Gray
GVWR	Gross Vehicle Weight Rating
H	
H	Hydrogen
H <sub>2</sub> O	Water
Harn	Harness
HC	Hydrocarbons
H/CMPR	High Compression
HD	Heavy Duty

HDC	Heavy Duty Cooling
hex	Hexagon, Hexadecimal
Hg	Mercury
Hi Alt	High Altitude
HO2S	Heated Oxygen Sensor
hp	Horsepower
HPL	High Pressure Liquid
HPS	High Performance System
HPV	High Pressure Vapor
HPVS	Heat Pump Ventilation System
Htd	Heated
HTR	Heater
HUD	Head-up Display
HVAC	Heater-Ventilation-Air Conditioning
HVACM	Heater-Vent-Air Conditioning Module
HVIL	High Voltage Interlock Loop
HVM	Heater Vent Module
Hz	Hertz
I	
IAC	Idle Air Control
IAT	Intake Air Temperature
IC	Integrated Circuit, Ignition Control
ICCS	Integrated Chassis Control System
ICM	Ignition Control Module
ID	Identification, Inside Diameter
IDI	Integrated Direct Ignition
IGBT	Insulated Gate Bi-Polar Transistor
ign	Ignition
ILC	Idle Load Compensator
in	Inch/Inches
INJ	Injection
inst	Instantaneous, Instant
IP	Instrument Panel
IPC	Instrument Panel Cluster
IPM	Instrument Panel Module
I/PEC	Instrument Panel Electrical Center
ISC	Idle Speed Control
ISO	International Standards Organization
ISS	Input Speed Shaft, Input Shaft Speed

<b>K</b>	
KAM	Keep Alive Memory
KDD	Keyboard Display Driver
kg	Kilogram
kHz	Kilohertz
km	Kilometer
km/h	Kilometers per Hour
km/l	Kilometers per Liter
kPa	Kilopascals
KS	Knock Sensor
kV	Kilovolts
<b>L</b>	
L	Liter
L4	Four Cylinder Engine, In-Line
L6	Six-Cylinder Engine, In-Line
lb	Pound
lb ft	Pound Feet Torque
lb in	Pound Inch Torque
LCD	Liquid Crystal Display
LDCL	Left Door Closed Locking
LDCM	Left Door Control Module
LDM	Lamp Driver Module
LED	Light Emitting Diode
LEV	Low Emissions Vehicle
LF	Left Front
lm	Lumens
LR	Left Rear
LT	Left
LT	Light
LT	Long Term
LTPI	Low Tire Pressure Indicator
LTPWS	Low Tire Pressure Warning System
<b>M</b>	
MAF	Mass Air Flow
Man	Manual
MAP	Manifold Absolute Pressure
MAT	Manifold Absolute Temperature
max	Maximum
M/C	Mixture Control
MDP	Manifold Differential Pressure

MFI	Multiport Fuel Injection
mi	Miles
MIL	Malfunction Indicator Lamp
min	Minimum
MIN	Mobile Identification Number
mL	Milliliter
mm	Millimeter
mpg	Miles per Gallon
mph	Miles per Hour
ms	Millisecond
MST	Manifold Surface Temperature
MSVA	Magnetic Steering Variable Assist, Magnasteer®
M/T	Manual Transmission/Transaxle
MV	Megavolt
mV	Millivolt
<b>N</b>	
NAES	North American Export Sales
NC	Normally Closed
NEG	Negative
Neu	Neutral
NI	Neutral Idle
NiMH	Nickel Metal Hydride
NLGI	National Lubricating Grease Institute
N·m	Newton-meter Torque
NO	Normally Open
NOx	Oxides of Nitrogen
NPTC	National Pipe Thread Coarse
NPTF	National Pipe Thread Fine
NOVRAM	Non-Volatile Random Access Memory
<b>O</b>	
O <sub>2</sub>	Oxygen
O <sub>2</sub> S	Oxygen Sensor
OBD	On-Board Diagnostics
OBD II	On-Board Diagnostics Second Generation
OC	Oxidation Converter Catalytic
OCS	Opportunity Charge Station
OD	Outside Diameter
ODM	Output Drive Module
ODO	Odometer
OE	Original Equipment
OEM	Original Equipment Manufacturer
OHC	Overhead Camshaft

ohms	Ohm
OL	Open Loop, Out of Limits
ORC	Oxidation Reduction Converter Catalytic
ORN	Orange
ORVR	On-Board Refueling Vapor Recovery
OSS	Output Shaft Speed
oz	Ounce(s)
<b>P</b>	
PAG	Polyalkylene Glycol
PAIR	Pulsed Secondary Air Injection
PASS, PSGR	Passenger
PASS-Key®	Personalized Automotive Security System
P/B	Power Brakes
PC	Pressure Control
PCB	Printed Circuit Board
PCM	Powertrain Control Module
PCS	Pressure Control Solenoid
PCV	Positive Crankcase Ventilation
PEB	Power Electronics Bay
PID	Parameter Identification
PIM	Power Inverter Module
PM	Permanent Magnet Generator
P/N	Part Number
PNK	Pink
PNP	Park/Neutral Position
PRNDL	Park, Reverse, Neutral, Drive, Low
POA	Pilot Operated Absolute Valve
POS	Positive, Position
POT	Potentiometer Variable Resistor
PPL	Purple
ppm	Parts per Million
PROM	Programmable Read Only Memory
P/S, PS	Power Steering
PSCM	Power Steering Control Module, Passenger Seat Control Module
PSD	Power Sliding Door
PSP	Power Steering Pressure
psi	Pounds per Square Inch
psia	Pounds per Square Inch Absolute
psig	Pounds per Square Inch Gauge
pt	Pint
PTC	Positive Temperature Coefficient
PWM	Pulse Width Modulated

Q	
QDM	Quad Driver Module
qt	Quart(s)
R	
R-12	Refrigerant-12
R-134a	Refrigerant-134a
RAM	Random Access Memory, Non-permanent memory device, memory contents are lost when power is removed.
RAP	Retained Accessory Power
RAV	Remote Activation Verification
RCDLR	Remote Control Door Lock Receiver
RDCM	Right Door Control Module
Ref	Reference
Rev	Reverse
REX	Rear Exchanger
RIM	Rear Integration Module
RF	Right Front, Radio Frequency
RFA	Remote Function Actuation
RFI	Radio Frequency Interference
RH	Right Hand
RKE	Remote Keyless Entry
Rly	Relay
ROM	Read Only Memory, Permanent memory device, memory contents are retained when power is removed.
RPM	Revolutions per Minute Engine Speed
RPO	Regular Production Option
RR	Right Rear
RSS	Road Sensing Suspension
RTD	Real Time Damping
RT	Right
RTV	Room Temperature Vulcanizing Sealer
RWAL	Rear Wheel Antilock
RWD	Rear Wheel Drive
S	
s	Second(s)
SAE	Society of Automotive Engineers
SC	Supercharger
SCB	Supercharger Bypass
SCM	Seat Control Module
SDM	Sensing and Diagnostic Module
SEO	Special Equipment Option
SFI	Sequential Multiport Fuel Injection



SI	System International Modern Version of Metric System
SIAB	Side Impact Air Bag
SIR	Supplemental Inflatable Restraint
SLA	Short/Long Arm Suspension
sol	Solenoid
SO2	Sulfur Dioxide
SP	Splice Pack
S/P	Series/Parallel
SPO	Service Parts Operations
SPS	Service Programming System, Speed Signal
sq ft, ft <sup>2</sup>	Square Foot/Feet
sq in, in <sup>2</sup>	Square Inch/Inches
SRC	Service Ride Control
SRI	Service Reminder Indicator
SRS	Supplemental Restraint System
SS	Shift Solenoid
ST	Scan Tool
STID	Station Identification Station ID
S4WD	Selectable Four-Wheel Drive
Sw	Switch
SWPS	Steering Wheel Position Sensor
syn	Synchronizer
<b>T</b>	
TAC	Throttle Actuator Control
Tach	Tachometer
TAP	Transmission Adaptive Pressure, Throttle Adaptive Pressure
TBI	Throttle Body Fuel Injection
TC	Turbocharger, Transmission Control
TCC	Torque Converter Clutch
TCS	Traction Control System
TDC	Top Dead Center
TEMP	Temperature
Term	Terminal
TFP	Transmission Fluid Pressure
TFT	Transmission Fluid Temperature
THM	Turbo Hydro-Matic
TIM	Tire Inflation Monitoring, Tire Inflation Module
TOC	Transmission Oil Cooler
TP	Throttle Position
TPA	Terminal Positive Assurance
TPM	Tire Pressure Monitoring, Tire Pressure Monitor
TR	Transmission Range

TRANS	Transmission/Transaxle
TT	Tell Tail Warning Lamp
TV	Throttle Valve
TVRS	Television and Radio Suppression
TVV	Thermal Vacuum Valve
TWC	Three Way Converter Catalytic
TWC+OC	Three Way + Oxidation Converter Catalytic
TXV	Thermal Expansion Valve
<b>U</b>	
UART	Universal Asynchronous Receiver Transmitter
U/H	Underhood
U/HEC	Underhood Electrical Center
U-joint	Universal Joint
UTD	Universal Theft Deterrent
UV	Ultraviolet
<b>V</b>	
V	Volt(s), Voltage
V6	Six-Cylinder Engine, V-Type
V8	Eight-Cylinder Engine, V-Type
Vac	Vacuum
VAC	Vehicle Access Code
VATS	Vehicle Anti-Theft System
VCIM	Vehicle Communication Interface Mode
VCM	Vehicle Control Module
V dif	Voltage Difference
VDOT	Variable Displacement Orifice Tube
VDV	Vacuum Delay Valve
vel	Velocity
VES	Variable Effort Steering
VF	Vacuum Fluorescent
VIO	Violet
VIN	Vehicle Identification Number
VLR	Voltage Loop Reserve
VMV	Vacuum Modulator Valve
VR	Voltage Regulator
V ref	Voltage Reference
VSES	Vehicle Stability Enhancement System
VSS	Vehicle Speed Sensor

W	
w/	With
W/B	Wheel Base
WHL	Wheel
WHT	White
w/o	Without
WOT	Wide Open Throttle
W/P	Water Pump
W/S	Windshield
WSS	Wheel Speed Sensor
WU-OC	Warm Up Oxidation Converter Catalytic
WU-TWC	Warm Up Three-Way Converter Catalytic
X	
X-valve	Expansion Valve
Y	
yd	Yard(s)
YEL	Yellow

**This page  
intentionally left  
blank.**

## Conversion - English/Metric

English	Multiply/ Divide by	Metric
In order to calculate English measurement, divide by the number in the center column.		
In order to calculate metric measurement, multiply by the number in the center column.		
Length		
in	25.4	mm
ft	0.3048	m
yd	0.9144	
mi	1.609	km
Area		
sq in	645.2	sq mm
	6.45	sq cm
sq ft	0.0929	sq m
sq yd	0.8361	
Volume		
cu in	16,387.00	cu mm
	16.387	cu cm
	0.0164	L
qt	0.9464	
gal	3.7854	
cu yd	0.764	cu m
Mass		
lb	0.4536	kg
ton	907.18	
	0.907	tonne (t)
Force		
Kg F	9.807	newtons (N)
oz F	0.278	
lb F	4.448	
Acceleration		
ft/s²	0.3048	m/s²
ln/s²	0.0254	
Torque		
Lb in	0.11298	N·m
lb ft	1.3558	
Power		
hp	0.745	kW

Pressure (Stress)		
inches of H2O	0.2488	kPa
lb/sq in	6.895	
Energy (Work)		
Btu	1055	J (J= one Ws)
lb ft	1.3558	
kW hour	3,600,000.00	
Light		
Foot Candle	10.764	lm/m²
Velocity		
mph	1.6093	km/h
Temperature		
(°F - 32) 5/9	=	°C
°F	=	(9/5 °C + 32)
Fuel Performance		
235.215/mpg	=	100 km/L

**Equivalents - Decimal and Metric**

<b>Fraction (in)</b>	<b>Decimal (in)</b>	<b>Metric (mm)</b>
1/64	0.015625	0.39688
1/32	0.03125	0.79375
3/64	0.046875	1.19062
1/16	0.0625	1.5875
5/64	0.078125	1.98437
3/32	0.09375	2.38125
7/64	0.109375	2.77812
1/8	0.125	3.175
9/64	0.140625	3.57187
5/32	0.15625	3.96875
11/64	0.171875	4.36562
3/16	0.1875	4.7625
13/64	0.203125	5.15937
7/32	0.21875	5.55625
15/64	0.234375	5.95312
1/4	0.25	6.35
17/64	0.265625	6.74687
9/32	0.28125	7.14375
19/64	0.296875	7.54062
5/16	0.3125	7.9375
21/64	0.328125	8.33437
11/32	0.34375	8.73125
23/64	0.359375	9.12812
3/8	0.375	9.525
25/64	0.390625	9.92187
13/32	0.40625	10.31875
27/64	0.421875	10.71562
7/16	0.4375	11.1125
29/64	0.453125	11.50937
15/32	0.46875	11.90625
31/64	0.484375	12.30312
1/2	0.5	12.7
33/64	0.515625	13.09687
17/32	0.53125	13.49375
35/64	0.546875	13.89062
9/16	0.5625	14.2875
37/64	0.578125	14.68437
19/32	0.59375	15.08125
39/64	0.609375	15.47812

Fraction (in)	Decimal (in)	Metric (mm)
5/8	0.625	15.875
41/64	0.640625	16.27187
21/32	0.65625	16.66875
43/64	0.671875	17.06562
11/16	0.6875	17.4625
45/64	0.703125	17.85937
23/32	0.71875	18.25625
47/64	0.734375	18.65312
3/4	0.75	19.05
49/64	0.765625	19.44687
25/32	0.78125	19.84375
51/64	0.796875	20.24062
13/16	0.8125	20.6375
53/64	0.828125	21.03437
27/32	0.84375	21.43125
55/64	0.859375	21.82812
7/8	0.875	22.225
57/64	0.890625	22.62187
29/32	0.90625	23.01875
59/64	0.921875	23.41562
15/16	0.9375	23.8125
61/64	0.953125	24.20937
31/32	0.96875	24.60625
63/64	0.984375	25.00312
1	1.0	25.4



## Fasteners


### Metric Fasteners

This vehicle provides fastener dimensions using the metric system. Most metric fasteners are approximate in diameter to equivalent English fasteners. Make replacements using fasteners of the same nominal diameter, thread pitch, and strength.

A number marking identifies the OE metric fasteners except cross-recess head screws. The number also indicates the strength of the fastener material. A Posidrive® or Type 1A cross-recess identifies a metric cross-recess screw. For best results, use a Type 1A cross-recess screwdriver, or equivalent, in Posidrive® recess head screws.

GM Engineering Standards and North American Industries have adopted a portion of the ISO-defined standard metric fastener sizes. The purpose was to reduce the number of fastener sizes used while retaining the best thread qualities in each thread size. For example, the metric M6.0 X 1 screw, with nearly the same diameter and 25.4 threads per inch replaced the English 1/4-20 and 1/4-28 screws. The thread pitch is midway between the English coarse and fine thread pitches.

### Fastener Strength Identification

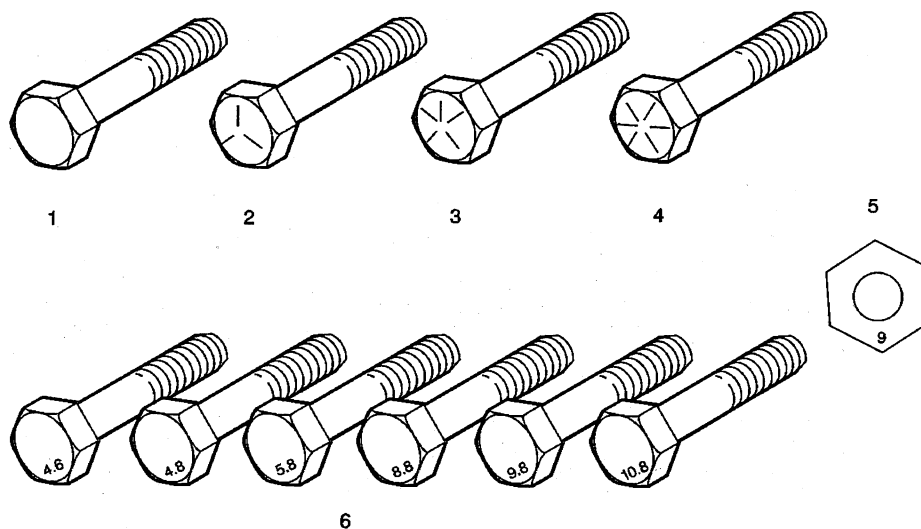

1. English Bolt, Grade 2 (Strength Class)
2. English Bolt, Grade 5 (Strength Class)
3. English Bolt, Grade 7 (Strength Class)
4. English Bolt, Grade 8 (Strength Class)
5. Metric Nut, Strength Class 9
6. Metric Bolts, Strength Class Increases as Numbers Increase

The most commonly used metric fastener strength property classes are 9.8 and 10.9. The class identification is embossed on the head of each bolt. The English, inch strength classes range from grade 2 to grade 8. Radial lines are embossed on the head of each bolt in order to identify the strength class. The number of lines on the head of the bolt is 2 lines less than the actual grade. For example, a grade 8 bolt will have 6 radial lines on the bolt head. Some metric nuts are marked with a single digit strength identification number on the nut face.

The correct fasteners are available through GM SPO. Many metric fasteners available in the aftermarket parts channels are designed to metric standards of countries other than the United States, and may exhibit the following:

- Lower strength
- No numbered head marking system
- Wrong thread pitch

The metric fasteners on GM products are designed to new, international standards. The following are the common sizes and pitches, except for special applications:

- M6.0 X 1
- M8 X 1.25
- M10 X 1.5
- M12 X 1.75
- M14 X 2.00
- M16 X 2.00

### Prevailing Torque Fasteners

Prevailing torque fasteners create a thread interface between the fastener and the fastener counterpart in order to prevent the fastener from loosening.

#### All Metal Prevailing Torque Fasteners


These fasteners accomplish the thread interface by a designed distortion or deformation in the fastener.

#### Nylon Interface Prevailing Torque Fasteners

These fasteners accomplish the thread interface by the presence of a nylon material on the fastener threads.

### Adhesive Coated Fasteners

These fasteners accomplish the thread interface by the presence of a thread-locking compound on the fastener threads. Refer to the appropriate repair procedure in order to determine if the fastener may be reused and the applicable thread-locking compound to apply to the fastener.

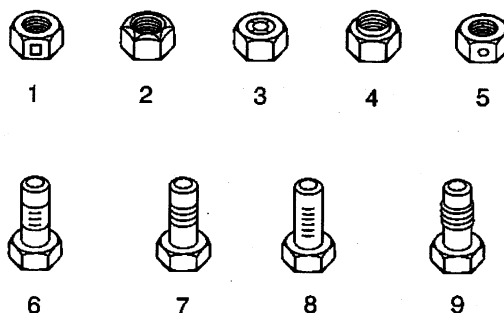

#### 1. Prevailing Torque Nut, Center Lock Type

2. Prevailing Torque Nut, Top Lock Type
3. Prevailing Torque Nut, Nylon Patch Type
4. Prevailing Torque Nut, Nylon Washer Insert Type
5. Prevailing Torque Nut, Nylon Insert Type
6. Prevailing Torque Bolt, Dry Adhesive Coating Type
7. Prevailing Torque Bolt, Thread Profile Deformed Type
8. Prevailing Torque Bolt, Nylon Strip Type
9. Prevailing Torque Bolt, Out-of-Round Thread Area Type

A prevailing torque fastener may be reused ONLY if:

- The fastener and the fastener counterpart are clean and not damaged
- There is no rust on the fastener
- The fastener develops the specified minimum torque against its counterpart prior to the fastener seating

### Metric Prevailing Torque Fastener Minimum Torque Development

Application	Specification	
	Metric	English
<b>All Metal Prevailing Torque Fasteners</b>		
6 mm	0.4 N·m	4 lb in
8 mm	0.8 N·m	7 lb in
10 mm	1.4 N·m	12 lb in
12 mm	2.1 N·m	19 lb in
14 mm	3 N·m	27 lb in
16 mm	4.2 N·m	37 lb in
20 mm	7 N·m	62 lb in
24 mm	10.5 N·m	93 lb in
<b>Nylon Interface Prevailing Torque Fasteners</b>		
6 mm	0.3 N·m	3 lb in
8 mm	0.6 N·m	5 lb in
10 mm	1.1 N·m	10 lb in
12 mm	1.5 N·m	13 lb in
14 mm	2.3 N·m	20 lb in
16 mm	3.4 N·m	30 lb in
20 mm	5.5 N·m	49 lb in
24 mm	8.5 N·m	75 lb in

**English Prevailing Torque Fastener Minimum Torque Development**

Application	Specification	
	Metric	English
<b>All Metal Prevailing Torque Fasteners</b>		
1/4 in	0.5 N·m	4.5 lb in
5/16 in	0.8 N·m	7.5 lb in
3/8 in	1.3 N·m	11.5 lb in
7/16 in	1.8 N·m	16 lb in
1/2 in	2.3 N·m	20 lb in
9/16 in	3.2 N·m	28 lb in
5/8 in	4 N·m	36 lb in
3/4 in	7 N·m	54 lb in
<b>Nylon Interface Prevailing Torque Fasteners</b>		
1/4 in	0.3 N·m	3 lb in
5/16 in	0.6 N·m	5 lb in
3/8 in	1 N·m	9 lb in
7/16 in	1.3 N·m	12 lb in
1/2 in	1.8 N·m	16 lb in
9/16 in	2.5 N·m	22 lb in
5/8 in	3.4 N·m	30 lb in
3/4 in	5 N·m	45 lb in