


# **Chevrolet**



# **Tracker**



# **2002**



# Table of Contents

|   |    |
|---|----|
| Product Information .....   | 1  |
| 2002 Chevrolet Tracker Offers Chevy Truck Toughness And Durability In An Authentic Small SUV..... | 1  |
| The Power Story.....  | 1  |
| The Durability Story.....   | 1  |
| Impressive Styling .....  | 1  |
| Interior Versatility.....   | 1  |
| Tracker Value Story.....  | 1  |
| New For 2002.....   | 2  |
| Model Lineup.....   | 2  |
| Specifications.....   | 2  |
| Overview .....  | 2  |
| Engine .....  | 2  |
| Transmission.....   | 3  |
| Chassis/Suspension .....  | 3  |
| Brakes .....  | 3  |
| Wheels/Tires .....  | 3  |
| Dimensions .....  | 3  |
| Exterior.....   | 3  |
| Interior .....  | 4  |
| Capacities .....  | 4  |
| Vehicle Identification.....   | 5  |
| Vehicle Identification Number (VIN).....  | 5  |
| Engine Identification.....  | 5  |
| Label - Vehicle Certification .....   | 6  |
| Tire Placard.....   | 6  |
| Service Parts Identification Label (SPID).....  | 7  |
| SPID Label Location.....  | 7  |
| Engine ID and VIN Derivative Location 2.0L .....  | 8  |
| Engine ID and VIN Derivative Location 2.5L .....  | 9  |
| Transmission ID and VIN Derivative Location .....   | 10 |
| Manual Transmission .....   | 10 |
| Automatic Transmission .....  | 11 |
| Engine and Transmission Usage.....  | 11 |
| Labeling - Anti-Theft.....  | 12 |
| RPO Code List .....   | 13 |
| Technical Information .....   | 15 |
| Maintenance and Lubrication.....  | 15 |
| Drive Belt Tension Specifications.....  | 15 |
| A/C Compressor .....  | 15 |
| Coolant Pump-2.0 Liter Engine .....   | 15 |
| Coolant Pump/Generator-2.0 Liter Engine .....   | 15 |
| Coolant Pump/Generator-2.5 Liter Engine .....   | 15 |
| Power Steering Pump.....  | 15 |
| Capacities - Approximate Fluid .....  | 15 |
| 4-Speed Automatic Transmission (RPO M41) .....  | 15 |
| 5-Speed Manual Transmission (RPO M59).....  | 15 |
| Axle Housing.....   | 15 |
| Cooling System Capacity.....  | 15 |
| Engine Crankcase .....  | 15 |
| Fuel Tank.....  | 16 |
| Transfer Case 4WD Only.....   | 16 |

|   |    |
|---|----|
| Maintenance Items .....                               | 16 |
| A/C Evaporator Air Filter-4-door only .....           | 16 |
| Air Cleaner Element.....                              | 16 |
| Fuel Filter .....                                     | 16 |
| Oil Filter.....                                       | 16 |
| Positive Crankcase Ventilation (PCV) Valve .....      | 16 |
| Spark Plugs .....                                     | 16 |
| Spark Plug Gap .....                                  | 16 |
| Tire Inflation Pressure Specifications .....          | 16 |
| Fluid and Lubricant Recommendations .....             | 17 |
| Descriptions and Operations .....                     | 18 |
| Power Steering System .....                           | 18 |
| Power Steering Gear Description .....                 | 18 |
| Steering Wheel and Column.....                        | 18 |
| Vehicle Steering .....                                | 18 |
| Vehicle Security .....                                | 18 |
| Driver Convenience .....                              | 19 |
| Driver Safety .....                                   | 19 |
| Suspension Description and Operation .....            | 19 |
| Front Suspension .....                                | 19 |
| Rear Suspension.....                                  | 20 |
| Wheels and Tires .....                                | 20 |
| Fastener Tightening Specifications .....              | 20 |
| General Description.....                              | 20 |
| Tread Wear Indicators Description.....                | 21 |
| Metric Wheel Nuts and Bolts Description.....          | 21 |
| Tire Inflation Description.....                       | 21 |
| P-Metric Sized Tires Description .....                | 23 |
| Driveline System Description and Operation.....       | 24 |
| Driveline/Axle – Propeller Shaft .....                | 24 |
| Front and Rear Propeller Shaft .....                  | 24 |
| Universal Joint Description.....                      | 25 |
| Wheel Drive Shafts .....                              | 26 |
| Front Drive Axle Description and Operation .....      | 26 |
| Front Axle Operation .....                            | 26 |
| Rear Drive Axle Description and Operation .....       | 27 |
| Rear Wheel Speed Sensor (ABS).....                    | 27 |
| Transfer Case Description .....                       | 28 |
| Braking System Description and Operation .....        | 28 |
| Hydraulic Brake System Description and Operation..... | 28 |
| System Component Description.....                     | 28 |
| Hydraulic Brake Master Cylinder Fluid Reservoir.....  | 28 |
| Hydraulic Brake Master Cylinder .....                 | 28 |
| Hydraulic Brake Pressure Balance Control System ..... | 28 |
| Hydraulic Brake Pipes and Flexible Brake Hoses .....  | 28 |
| Hydraulic Brake Wheel Apply Components.....           | 28 |
| System Operation.....                                 | 28 |
| Brake Assist System Description and Operation .....   | 28 |
| System Component Description.....                     | 28 |
| Brake Pedal .....                                     | 28 |
| Brake Pedal Pushrod.....                              | 29 |
| Vacuum Brake Booster.....                             | 29 |
| Vacuum Source .....                                   | 29 |

|  |    |
|--|----|
| Vacuum Source Delivery System .....                          | 29 |
| System Operation.....  | 29 |
| Disc Brake System Description and Operation.....             | 29 |
| System Component Description.....                            | 29 |
| Disc Brake Pads .....  | 29 |
| Disc Brake Rotors.....                                       | 29 |
| Disc Brake Pad Hardware .....                                | 29 |
| Disc Brake Caliper Hardware .....                            | 29 |
| System Operation.....  | 29 |
| Drum Brake System Description and Operation.....             | 30 |
| System Component Description.....                            | 30 |
| Drum Brake Shoes .....                                       | 30 |
| Brake Drums.....   | 30 |
| Drum Brake Hardware .....                                    | 30 |
| Drum Brake Adjusting Hardware .....                          | 30 |
| System Operation.....  | 30 |
| Park Brake System Description and Operation .....            | 30 |
| System Component Description.....                            | 30 |
| Park Brake Lever Assembly .....                              | 30 |
| Park Brake Cables.....                                       | 30 |
| Park Brake Cable Equalizer .....                             | 30 |
| Park Brake Apply Lever.....                                  | 30 |
| Park Brake Actuator/Adjuster .....                           | 30 |
| Drum Brake Shoes .....                                       | 31 |
| System Operation.....  | 31 |
| ABS Description and Operation .....                          | 31 |
| Antilock Brake System .....                                  | 31 |
| Engine Description and Operation.....                        | 32 |
| Engine Mechanical Specifications – 2.0L .....                | 32 |
| General:.....  | 32 |
| Lubrication System:.....                                     | 32 |
| Cooling System: .....  | 32 |
| Fastener Tightening Specifications – 2.0L.....               | 32 |
| Engine Component Description – 2.0L .....                    | 34 |
| Engine Construction .....                                    | 34 |
| Cylinder Block .....   | 34 |
| Crankshaft.....  | 34 |
| Connecting Rod and Piston.....                               | 34 |
| Oil Pump.....  | 34 |
| Oil Pan.....   | 34 |
| Cylinder Head.....   | 34 |
| Valves.....  | 35 |
| Valve Lifters.....   | 35 |
| Valve Lifter (Hydraulic Valve Lash Adjuster) Operation ..... | 35 |
| Camshaft.....  | 35 |
| Camshaft Housings and Caps.....                              | 35 |
| Camshaft Drive.....  | 35 |
| Timing Chain Housing and Cover .....                         | 36 |
| Cylinder Head Cover .....                                    | 36 |
| Intake and Exhaust Manifold .....                            | 36 |
| Engine Lubrication – 2.0L .....                              | 36 |
| Fastener Tightening Specifications – 2.5L.....               | 38 |
| Engine Cooling .....   | 40 |
| Engine Cooling System Approximate Capacities .....           | 40 |
| Cooling System Capacity 2.0 L Engine.....                    | 40 |

|  |    |
|--|----|
| Fastener Tightening Specifications.....                    | 40 |
| Cooling System Description and Operation.....              | 40 |
| Coolant Heater – 2.0L Only.....                            | 40 |
| Cooling System.....  | 40 |
| Cooling Cycle.....   | 41 |
| Coolant.....   | 41 |
| Radiator.....  | 41 |
| Pressure Cap.....  | 41 |
| Coolant Recovery System.....                               | 42 |
| Air Baffles and Seals.....                                 | 42 |
| Water Pump.....  | 42 |
| Thermostat.....  | 42 |
| Engine Electrical.....                                     | 43 |
| Fastener Tightening Specifications.....                    | 43 |
| Battery Usage.....   | 43 |
| Generator Usage.....                                       | 43 |
| Starter Motor Usage.....                                   | 44 |
| Battery Description and Operation.....                     | 45 |
| Reserve Capacity.....                                      | 46 |
| Cold Cranking Amperage.....                                | 46 |
| Circuit Description.....                                   | 46 |
| Starting System Description and Operation.....             | 46 |
| Charging System Description and Operation.....             | 47 |
| Engine Controls.....                                       | 48 |
| Engine Controls – 2.0L.....                                | 48 |
| Fastener Tightening Specifications.....                    | 48 |
| Ignition System Specifications.....                        | 49 |
| Engine Controls – 2.5L.....                                | 50 |
| Fastener Tightening Specifications.....                    | 50 |
| Ignition System Specifications.....                        | 51 |
| Fuel System Specifications – All.....                      | 51 |
| Exhaust System.....  | 52 |
| Fastener Tightening Specifications.....                    | 52 |
| Exhaust System Description.....                            | 52 |
| Transmission/Transaxle Description and Operation.....      | 53 |
| Manual Transmission Specifications.....                    | 53 |
| Fastener Tightening Specifications.....                    | 53 |
| Automatic Transmission - 4 Speed-M41.....                  | 54 |
| Fastener Tightening Specifications.....                    | 54 |
| Transmission General Information.....                      | 54 |
| Automatic Transmission Shift Lock Control Description..... | 54 |
| Clutch.....  | 55 |
| Fastener Tightening Specifications.....                    | 55 |
| Clutch Operating Members.....                              | 55 |
| Hydraulic Clutch Description.....                          | 55 |
| Abbreviations and Meanings.....                            | i  |
| Conversion - English/Metric.....                           | i  |
| Equivalents - Decimal and Metric.....                      | ii |
| Fasteners.....   | i  |
| Metric Fasteners.....                                      | i  |
| Fastener Strength Identification.....                      | i  |
| Prevailing Torque Fasteners.....                           | ii |

|   |     |
|---|-----|
| All Metal Prevailing Torque Fasteners .....                         | ii  |
| Nylon Interface Prevailing Torque Fasteners .....                   | ii  |
| Adhesive Coated Fasteners .....                                     | ii  |
| Metric Prevailing Torque Fastener Minimum Torque Development .....  | iii |
| All Metal Prevailing Torque Fasteners .....                         | iii |
| Nylon Interface Prevailing Torque Fasteners .....                   | iii |
| English Prevailing Torque Fastener Minimum Torque Development ..... | iv  |
| All Metal Prevailing Torque Fasteners .....                         | iv  |
| Nylon Interface Prevailing Torque Fasteners .....                   | iv  |





## **Product Information**

### **2002 Chevrolet Tracker Offers Chevy Truck Toughness And Durability In An Authentic Small SUV**

For 2002 the Chevrolet Tracker offers three great models capable of handling just about any task, on-road or off. The base Tracker, along with the rugged ZR2 and LT, give Tracker a lineup of models which offers Chevy Truck toughness and durability.

New features for 2002 include: AM/FM/CD radio as standard equipment; LT cloth on ZR2 seats; new ZR2 alloy wheels; new LT and optional base alloy wheel; and four new exterior colors – Medium Green Pearl Metallic, Medium Red Metallic, Light Bronzemist Metallic and Indigo Blue Metallic. Other additions such as halo "see through" headrests (four positions), front seat armrests, standard roof rack on four-door models and driver's side adjustable lumbar support make a great small utility even better.

#### **The Power Story**

Powering both the LT and ZR2 is the 2.5-liter DOHC 24-valve V6 engine that generates 155 peak horsepower, while offering good fuel efficiency. Standard on the base Tracker and available on the ZR2 two-door is the lively 127-horsepower, 2.0-liter 16-valve DOHC four-cylinder engine. Both engines give Tracker the essential power desired by small sport utility buyers.

#### **The Durability Story**

Combining that power with the ladder-based frame on which Tracker is built gives this Chevy Truck excellent on-road manners and the ability to go just about anywhere off road. Its frame and high ground clearance give Tracker many off-road advantages over its car-based competition. Tracker also has achieved impressive crash test ratings.

Tracker's confident road manners are the result of precise power rack-and-pinion steering. Its highly responsive rear suspension features a five-link design to provide exceptional road feel and a greater tread width for sure-footed control and cornering.

"This is an authentic sport utility that can handle the roughest terrain," said Margaret Brooks, Tracker brand manager. "Combining the full-ladder frame with Tracker's 4x4 shift-on-the-fly, four-wheel-drive system give Tracker the ability to handle the unexpected, on or off the road. Tracker is a tough, durable, dependable Chevy Truck."

#### **Impressive Styling**

On the outside, the Tracker's sculpted flanks and contoured edges are bold and distinctive. The ZR2 and LT appearance packages give Tracker tough-looking and upscale looks, respectively. Other available features which enhance Tracker's appearance include tubular side steps, brush guard and fog lamps, ski and bike racks, and for convertible models, a removable hardtop.

#### **Interior Versatility**

The Tracker's spacious interior allows plenty of room for friends – and their gear can be stowed in the instrument panel, the seat backs, door pockets and center console. The rear compartment of the two-door model comfortably accommodates full-size adults and the rear seats can be folded and stowed away for even more room. An optional rear lockable-storage compartment can hold valuables, or can be removed for maximum cargo space.

#### **Tracker Value Story**

Available in two-door convertible or four-door hardtop versions, and in two- or four-wheel-drive configurations, the Tracker is a whole lot of truck for not a lot of money.

Chevrolet Tracker gives consumers utility, performance, capabilities, value and style, all at a reasonable price.

## New For 2002

- LT cloth on ZR2 seats
- New ZR2 alloy wheel
- New LT & optional base alloy wheel
- Deletion of LT running boards & replacement with rocker cover
- AM/FM/CD radio made standard
- Four new exterior colors – Medium Green Pearl Metallic, Medium Red Metallic, Light Bronzemist Metallic,
- Indigo Blue Metallic
- Halo "see through" headrests (four positions)
- Front seat armrests
- Driver's side adjustable lumbar support
- Roof rack standard on four-door models

## Model Lineup

|                       | Engines          |                  | Transmissions  |              |
|-----------------------|------------------|------------------|----------------|--------------|
|                       | 2.0-liter MFI L4 | 2.5-liter MFI V6 | 5-speed manual | 4-speed auto |
| Base 2-dr conv / 4-dr | S                | –                | S              | O            |
| ZR2 2-dr conv         | S                | –                | S              | O            |
| ZR2 / LT 4-dr         | –                | S                | –              | S            |

Standard            S  
 Optional            O  
 Not available       –

## Specifications

### Overview

|                         |   |
|-------------------------|---|
| Model:                  | Chevrolet Tracker, Tracker LT, Tracker ZR2  |
| Body style / driveline: | small sport-utility vehicle, welded ladder-type frame, front-engine, two- or four-wheel drive |
| EPA vehicle class:      | sport-utility vehicle   |
| Manufacturing location: | Ingersoll, Ontario, Canada  |
| Key competitors:        | Ford Escape, Honda CR-V, Kia Sportage, Toyota RAV4  |

### Engine

|   | 2.0 Liter, Four Cyl. (L34)  | 2.5 Liter V6 (LE8)  |
|---|---|---|
| Type:   | 2.0-liter, MPFI four cyl. with aluminum alloy block   | 2.5-liter, MPFI V6 with aluminum alloy block  |
| Displacement (cu in / cc):                          | 121 / 2.0   | 152 / 2.5   |
| Bore & stroke (in / mm):                            | 3.31 x 3.54 / 84.0 x 90.0   | 3.31 x 2.95 / 84.0 x 75.0   |
| Cylinder head material:                             | aluminum alloy  | aluminum alloy  |
| Valvetrain:   | dual overhead camshafts   | dual overhead camshafts   |
| Ignition system:                                    | coil on plug  | coil on plug  |
| Fuel delivery:                                      | multi-port fuel injection   | multi-port fuel injection   |
| Compression ratio:                                  | 9.7:1   | 9.5:1   |
| Horsepower (hp / kw @ rpm):                         | 127 / 95 @ 6000   | 155 / 115 @ 6500  |
| Torque (lb-ft / Nm @ rpm):                          | 134 / 182 @ 3000  | 160 / 217 @ 4000  |
| Recommended fuel:                                   | 87 octane   | 87 octane   |
| Emissions controls:                                 | Three-way catalytic converter, exhaust gas recirculation, positive crankcase ventilation, evaporative collection system | Three-way catalytic converter, exhaust gas recirculation, positive crankcase ventilation, evaporative collection system |
| Estimated fuel economy (mpg city / hwy / combined): | 23 / 26 / 24  | 25 / 28 / 26  |

**Transmission**

| Type:                     | 5-speed manual | 4-speed automatic |
|---------------------------|----------------|-------------------|
| <b>Gear ratios: (:1):</b> |                |                   |
| First:                    | 3.65           | 2.83              |
| Second:                   | 1.95           | 1.49              |
| Third:                    | 1.38           | 1.00              |
| Fourth:                   | 1.00           | 0.69              |
| Fifth:                    | 0.80           | —                 |
| Reverse:                  | 3.67           | 2.70              |
| Final drive ratio:        | 5.12:1         | 4.87:1            |

**Chassis/Suspension**

|  |   |
|--|---|
| Front:                                 | independent MacPherson struts           |
| Rear:                                  | solid axle with five-link design        |
| Steering type:                         | power rack and pinion                   |
| Steering ratio:                        | 20.5:1                                  |
| Steering wheel turns, lock-to-lock:    | 3.0                                     |
| Turning circle, curb-to-curb (ft / m): | 2-door: 31.5 / 9.6; 4-door: 34.8 / 10.6 |

**Brakes**

|  |   |
|--|---|
| Type:  | power front disc/rear drum, optional antilock brakes. |
| Rotor diameter x thickness, front (in / mm): | 11.30 x 0.67 / 287 x 17                               |
| Drum diameter x width, rear (in / mm):       | 8.7 x 2.1 / 220 x 54                                  |
| Swept area (sq in / sq cm):                  | front: 184.9 / 1192.9; rear: 85.7 / 553.0             |

**Wheels/Tires**

|               |  |
|---------------|--|
| Wheels:       | 15-inch x 5.5-inch styled steel, 15-inch x 6-inch alloy    |
| <b>Tires:</b> |  |
| Base 2WD:     | P195/75R-15 all-season steel-belted radial blackwall tires |
| Base 4x4:     | P205/75R-15 all-season steel-belted radial blackwall tires |
| LT:           | P215/70R-15 all-season steel-belted radial blackwall tires |
| ZR2:          | P215/75R-15 all-season steel-belted white outline-lettered |

**Dimensions****Exterior**

|                                    | 2-Door             | 4-Door             |
|------------------------------------|--------------------|--------------------|
| Wheelbase (in / mm):               | 86.6 / 2200        | 97.6 / 2480        |
| Overall length (in / mm):          | 2WD: 151.6 / 3850  | 2WD: 162.6 / 4130  |
|                                    | 4WD: 151.8 / 3855  | 4WD: 162.8 / 4135  |
| Overall width (in / mm):           | 67.3 / 1710        | 67.3 / 1710        |
| Overall height (in / mm):          | 2WD: 65.7 / 1670   | 2WD: 65.6 / 1665   |
|                                    | 4WD: 66.5 / 1690   | 4WD: 66.3 / 1685   |
| Track (in / mm):                   | front: 57.5 / 1460 | front: 57.5 / 1460 |
|                                    | rear: 57.5 / 1460  | rear: 57.5 / 1460  |
| Min. ground clearance (in / mm):   | 2WD: 7.2 / 182     | 2WD: 7.2 / 182     |
|                                    | 4WD: 8.0 / 202     | 4WD: 8.0 / 202     |
| Ground to rear load floor (in/mm): | 27.7 / 704         | 27.7 / 704         |
| Base curb weight (lbs / kg):       | 2WD: 2690 / 1220   | 2WD: 2866 / 1300   |
|                                    | 4WD: 2811 / 1275   | 4WD: 2987 / 1354   |

**Interior**


|                                | <b>2-Door</b>           | <b>4-Door</b>            |
|--------------------------------|-------------------------|--------------------------|
| Seating capacity:              | 4                       | 5                        |
| Head room (in / mm):           | front: 40.9 / 1038      | front: 39.9 / 1013       |
|                                | rear: 39.5 / 1003       | rear: 39.6 / 1006        |
| Leg room (in / mm):            | front: 41.4 / 1051      | front: 41.4 / 1051       |
|                                | rear: 35.9 / 912        | rear: 35.9 / 912         |
| Shoulder room (in / mm):       | front: 53.0 / 1345      | front: 52.8 / 1341       |
|                                | rear: 52.6 / 1336       | rear: 52.6 / 1336        |
| Hip room (in / mm):            | front: 50.6 / 1284      | front: 50.7 / 1287       |
|                                | rear: 46.8 / 1188       | rear: 46.8 / 1188        |
| Cargo volume (cu ft / liters): | seat up: 10.2 / 290     | seat up: 20.2 / 572      |
|                                | seat stowed: 33.7 / 954 | seat stowed: 44.7 / 1266 |

**Capacities**

|                                      |  |                  |
|--------------------------------------|--|------------------|
| EPA interior volume (cu ft/liters):  | 96.8 / 2739                                  | 103.7 / 2936     |
| GVWR, standard (lb / kg):            | 2WD: 3483 / 1580                             | 2WD: 3814 / 1730 |
|                                      | 4WD: 3593 / 1630                             | 4WD: 3924 / 1779 |
| Payload, base:                       | 2WD: 793 / 360                               | 2WD: 948 / 430   |
|                                      | 4WD: 782 / 355                               | 4WD: 937 / 425   |
| Trailer towing maximum (lbs/kg):     | 2WD: 1000 / 453                              | 2WD: 1500 / 680  |
|                                      | 4WD: 1000 / 453                              | 4WD: 1500 / 680  |
| Fuel tank (gal / liters):            | 14.8 / 56                                    | 17.4 / 66        |
| Engine oil w/ filter (qts / liters): | 4-cylinder: 5.2 / 5.0; 6-cylinder: 5.2 / 5.0 |                  |
| Cooling system (qts / liters):       | 4-cylinder: 6.8 / 6.5; 6-cylinder: 8.5 / 8.0 |                  |

## Vehicle Identification

### Vehicle Identification Number (VIN)

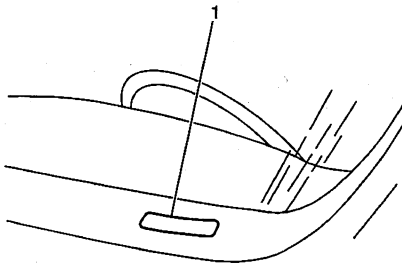

The vehicle identification number (VIN) plate is the legal identifier of the vehicle. The VIN plate is located on the upper LH corner of the Instrument Panel and can be seen through the windshield from the outside of the vehicle:

| Position | Definition              | Character | Description                      |
|----------|-------------------------|-----------|----------------------------------|
| 1        | Country of Origin       | 2         | Canadian Built                   |
| 2        | Manufacturer            | C         | CAMI                             |
| 3        | Make                    | N         | Chevrolet MPV                    |
| 4        | GVWR/Brake System       | B         | 3001-4000                        |
| 5        | Truck Line/Chassis Type | E         | Compact Cab 4X2                  |
| 6        | Series                  | J         | Compact Cab 4X4                  |
| 7        | Body Type               | 1         | ½ Ton                            |
| 8        | Engine Type             | 8         | Two Door Utility                 |
| 9        | Check Digit             | 3         | Four Door Cab/Utility            |
| 10       | Model Year              | C         | 2.0L, L4, MFI                    |
| 11       | Plant Location          | 1         | 2.5L, V6, MFI                    |
| 12-17    | Plant Sequence Number   | --        | Check Digit                      |
|          |                         | 2         | 2002                             |
|          |                         | 6         | Ingersoll, Ontario               |
|          |                         | --        | Production Plant Sequence Number |

### Engine Identification

| Position   | Definition            | Character | Description                      |
|--|-----------------------|-----------|----------------------------------|
| All engines are stamped or laser etched with a identification number. The identification number contains the following 10 positions: |                       |           |                                  |
| 1  | Engine Type           | J<br>H    | --<br>--                         |
| 2-3  | Engine Displacement   | 20<br>25  | 2.0L, L4, MFI<br>2.5L, V6, MFI   |
| 4  | Model Year            | 2         | 2002                             |
| 5-10   | Plant Sequence Number | --        | Production Plant Sequence Number |

## Label - Vehicle Certification

The vehicle certification label is permanently located on the drivers door lock pillar. Refer to this label in order to obtain the following information:

- The Gross Vehicle Weight Rating (GVWR)
- The Gross Axle Weight Rating (GAWR), front and rear

The Gross Vehicle Weight (GVW) must not exceed the Gross Vehicle Weight Rating (GVWR).

The GVW is the weight of the vehicle and everything the vehicle carries. Include the following items when figuring the GVW:

- The base vehicle weight (factory weight)
- The weight of any added vehicle accessories
- The weight of the driver and the passenger
- The weight of any cargo being carried

The front and rear Gross Axle Weights (GAW) must not exceed the Gross Axle Weight Ratings (GAWR), front and rear.

The GAW is the weight exerted on one of the axles (front or rear).

## Tire Placard


| TIRE PLACARD                          |            |            |
|---------------------------------------|------------|------------|
|                                       | FRONT      | REAR       |
| T I R E S                             | P195/75R15 | P195/75R15 |
| R I M S                               | 15X5 1/2JJ | 15X5 1/2JJ |
| INFLATION<br>PRESSURE COLD<br>kPa/PSI | 180/26     | 180/26     |

67D10

The tire placard is located on the left door lock pillar. Refer to the placard to obtain:


- The maximum vehicle capacity weight
- The cold tire inflation pressures
- The tire sizes (original equipment tires)
- The tire speed ratings (original equipment tires)

## Service Parts Identification Label (SPID)

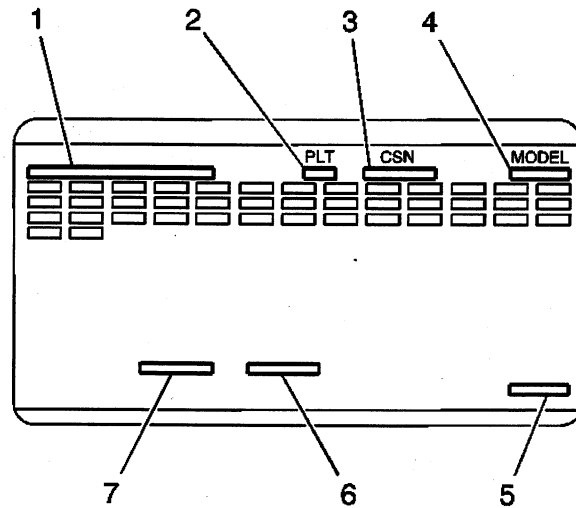


- (1) Vehicle Identification Number
- (2) Assembly Plant
- (3) Build Sequence
- (4) Model Designation
- (5) Paint Technology
- (6) Paint Type
- (7) Exterior Paint Number

### SPID Label Location

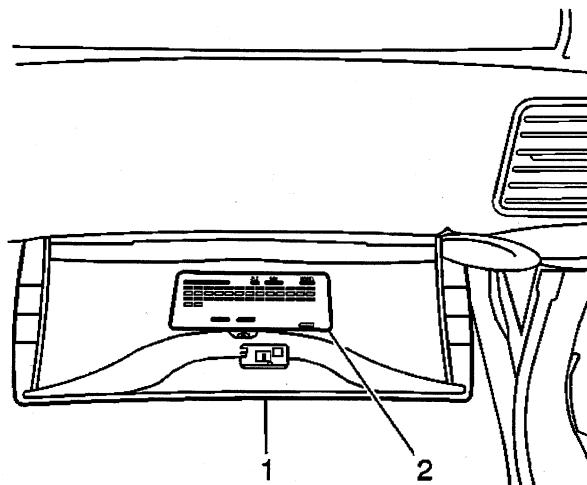

The service parts identification label (2) is placed on the vehicle in order to help service and parts personnel identify the vehicle's original parts and the vehicle's original options. The label (2) is located on the inside of the IP compartment (1).

## Engine ID and VIN Derivative Location 2.0L

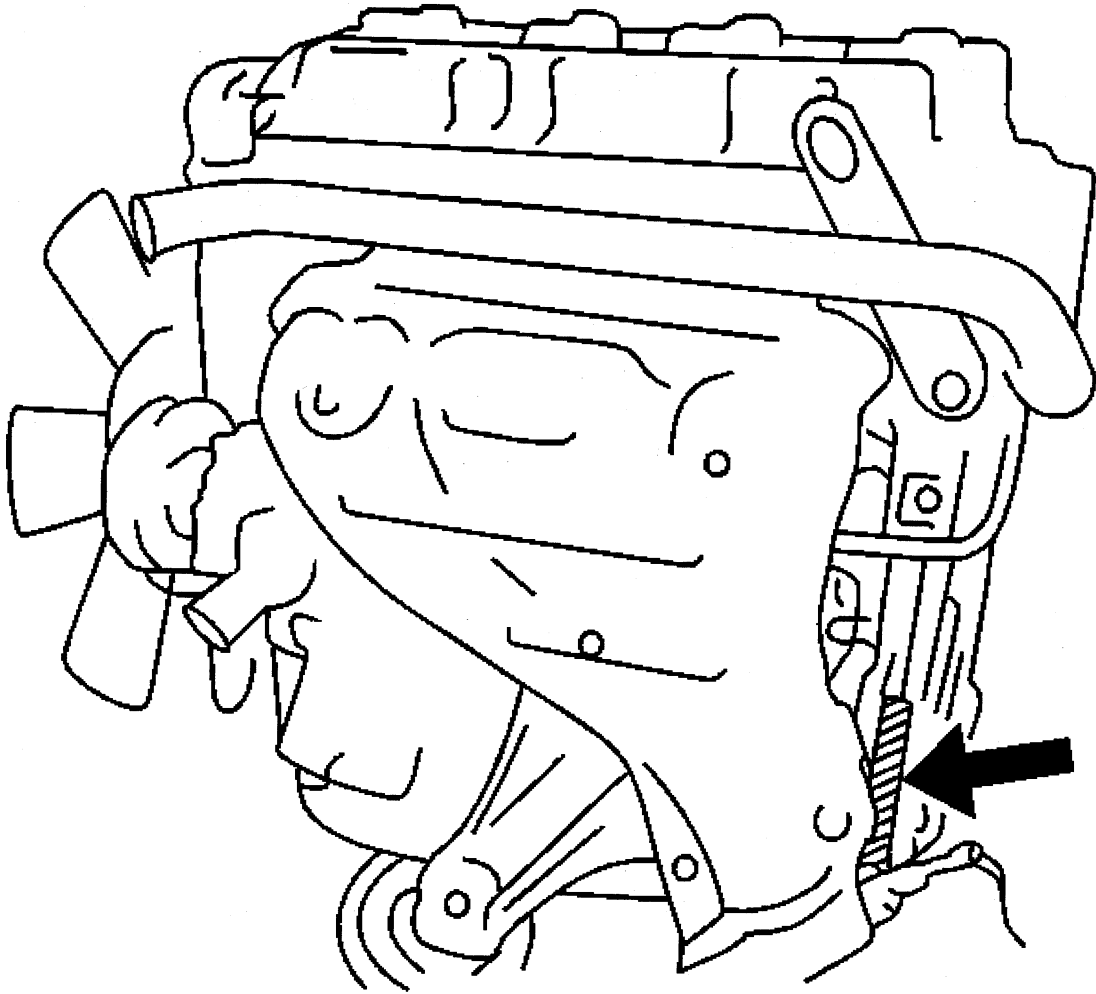


The engine code letter is the eight digit of the VIN, which identifies the engine.

Stick-on labels attached to the engine, laser etching, or stampings in the engine block indicate the engine type, the engine displacement, the model year and the production sequence number.

The engine ID number is located on the lower left engine block area at the bellhousing (1).



## Engine ID and VIN Derivative Location 2.5L

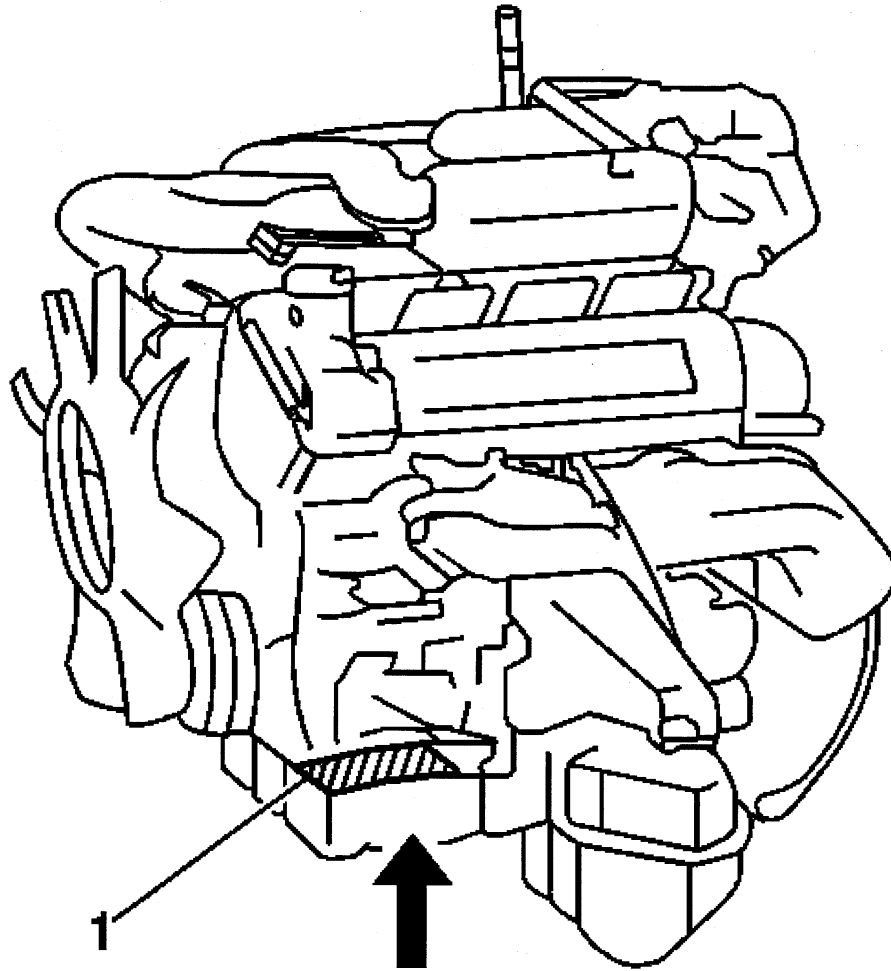


The engine code letter is the eight digit of the VIN, which identifies the engine.

Stick-on labels attached to the engine, laser etching, or stampings in the engine block indicate the engine type, the engine displacement, the model year and the production sequence number.

The engine ID number is located on the lower left front of the engine block.


## Transmission ID and VIN Derivative Location

### Manual Transmission

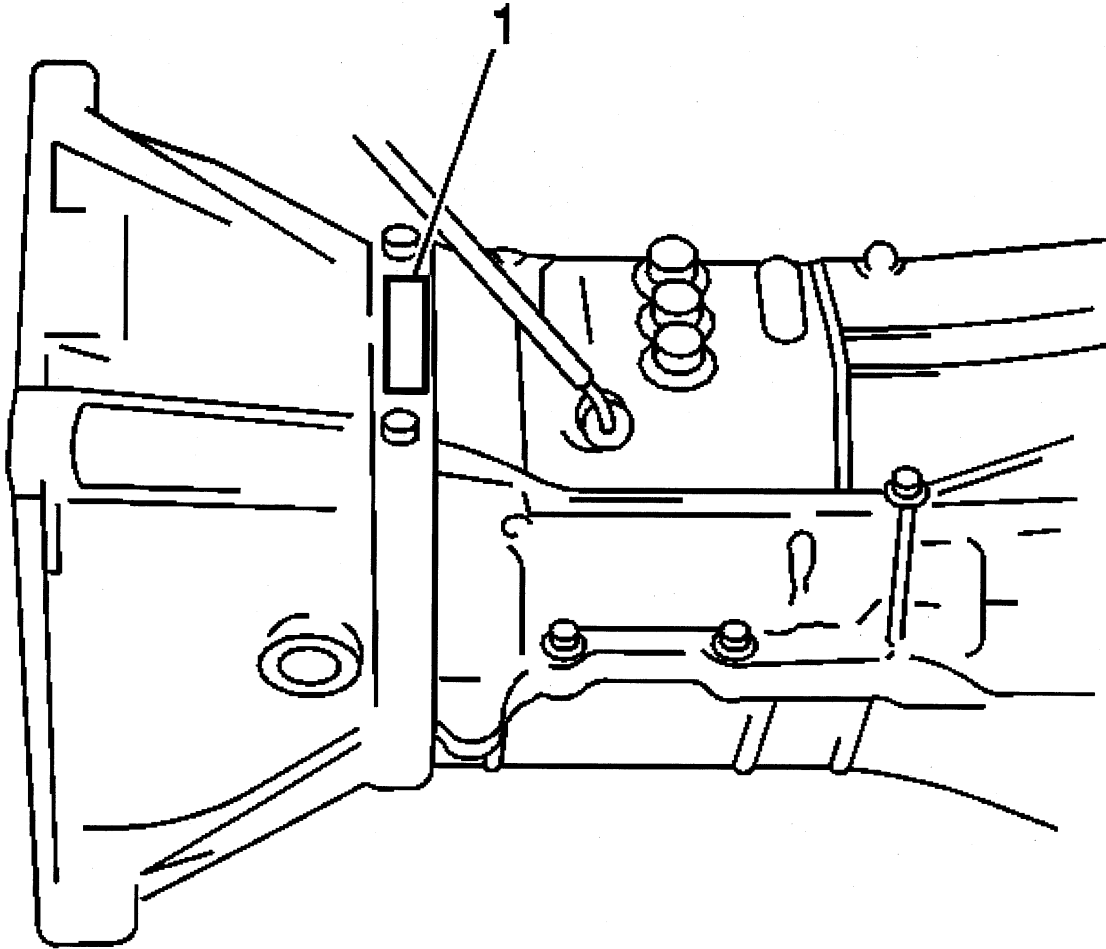

The manual transmission model identification is located on a label or tag or stamped or etched on the transmission case (1). If this label is missing or unreadable, use the service parts identification label in order to identify the vehicle's transmission.

## Automatic Transmission

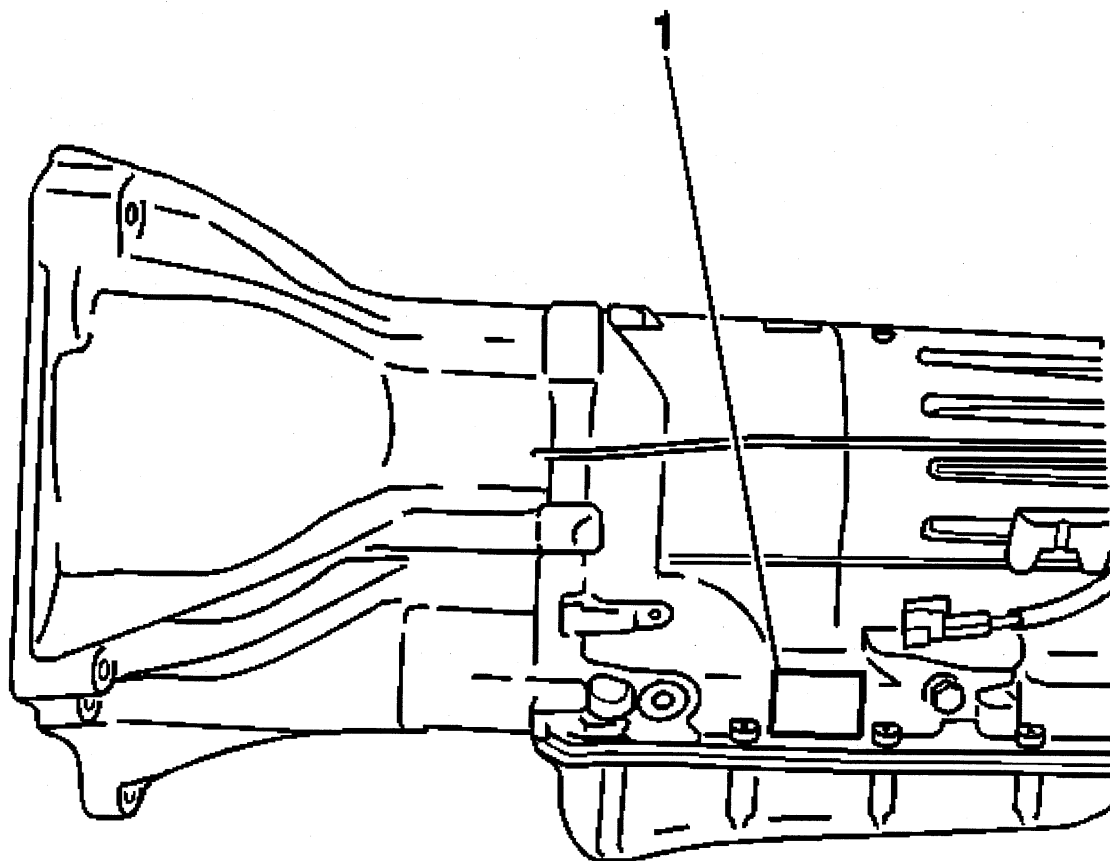


The automatic transmission model identification is located on a label or tag or stamped or etched on the transmission case (1). If this label is missing or unreadable, use the service parts identification label in order to identify the vehicle's transmission.

## Engine and Transmission Usage

| Body Type | Car Line (Division) | Engine Size | Fuel System | Engine RPO | Transmission Used              | Transmission RPO |
|-----------|---------------------|-------------|-------------|------------|--------------------------------|------------------|
| E/J       | Tracker             | 2.0L        | MFI         | L34        | 4 Speed Auto<br>5 Speed Manual | M41<br>M59       |
| E/J       | Tracker             | 2.5L        | MFI         | LE8        | 4 Speed Auto Only              | M41              |

## Labeling - Anti-Theft

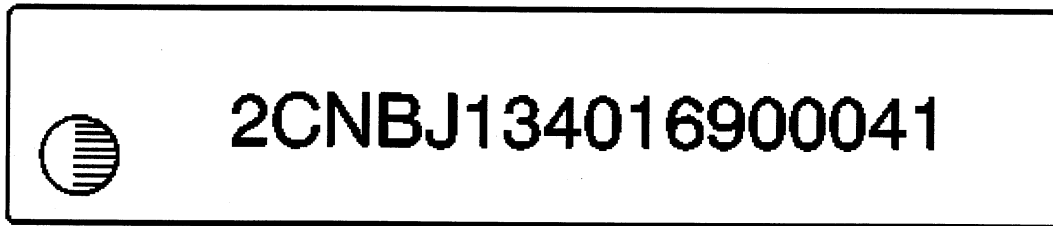

Federal law requires General Motors (GM) to affix a label to certain parts on selected vehicles with the Vehicle Identification Number (VIN). The purpose of this law is to reduce the number of motor vehicle thefts by helping in the tracing and recovery of parts from stolen vehicles. The certification label on the driver's door qualifies as a theft deterrent label.

The theft deterrent label will be permanently affixed to an interior surface of the part and will contain the complete VIN. The label on replacement parts will contain the letter R, the manufacturer's logo, and the acronym for the Department of Transportation (DOT). DO NOT deface, or remove these labels.

## RPO Code List

The production/process codes provide the description of the Regular Production Options (RPOs) used on the vehicle. The RPO list is printed on the Service Parts Identification Label. The following is a list of the RPO abbreviations and the description of each:

| RPO | Description  |
|-----|--|
| AK5 | Restraint System Front Seat, Inflatable, Driver and Passenger                        |
| AK6 | Restraint System Seat, Inflatable, Driver and Passenger, Delete                      |
| AM7 | Rear Folding Seat  |
| AM9 | Rear Split Back Folding Seat   |
| AN4 | Child Restraint Provisions   |
| ARZ | Removable Stowage Net Bag  |
| AR9 | Deluxe Front Bucket Seat   |
| AUO | Remote Entry Lock Control  |
| AU3 | Electric Door Lock Control   |
| A31 | Power Windows, All Doors   |
| BNN | Cargo Area Stowage Compartment   |
| BVE | Side Running Board Steps   |
| B57 | Deluxe Exterior Ornamentation  |
| B58 | Covering Floor Mat, Front & Rear, Carpeted Insert                                    |
| B84 | Body Side Exterior Molding   |
| B96 | Wheel Opening Molding  |
| C25 | Intermittent Rear Window Wiper System  |
| C42 | HVAC System Heater Deluxe Outside Air  |
| C49 | Electric Rear Window Defogger  |
| C60 | HVAC System Air Conditioner Front Manual Controls                                    |
| DG7 | Electric Remote Control Outside Mirror, Left Hand and Right Hand, Color              |
| DL5 | Decal Roadside Service Information   |
| DR1 | Manual Control Outside Mirror, Left Hand and Right Hand, Color                       |
| D42 | Rear Compartment Shade   |
| D48 | Electric Remote Control Outside Mirror, Left Hand and Right Hand, Color              |
| FE9 | Federal Emission Certification   |
| HC1 | Axle Rear 4.62 Ratio   |
| HC3 | Axle Rear 5.12 Ratio   |
| HC8 | Axle Rear 4.87 Ratio   |
| JM4 | Power Brake System, Front Disc, Rear Drum, Cast Iron, Antilock, Front and Rear Wheel |
| J41 | Power Brake System, Front Disc, Rear Drum, Cast Iron                                 |
| K05 | Engine Block Heater  |
| K34 | Automatic Cruise Control, Electronic   |
| LE8 | Engine Gas, 6 Cylinder, 2.5L, MFI, DOHC, Suzuki                                      |
| LO1 | Engine Gas, 4 Cylinder, 1.6L, MFI, OHC   |
| L34 | Engine Gas, 4 Cylinder, 2.0L, MFI, DOHC  |
| MM5 | Merchandised Transmission Manual 5 Speed Provisions                                  |
| MX0 | Merchandised Transmission Automatic Provisions, O/D                                  |
| M41 | 4-Speed Auto Transmission, 2.828 1st, 0.730 4th                                      |
| M59 | 5-Speed Manual Transmission, Suzuki, 3.65 1st, 0.795 5th                             |
| NC1 | California Emission System, LEV  |
| NF2 | Federal Emission System, Tier 1  |
| NF7 | Federal Emission System, NLEV  |
| NG1 | Emission Certification, Geographically Restricted Registration                       |
| NV5 | Differential Carrier Shield  |
| NX2 | Aluminum Spare Wheel 15 X 6.0  |

2002 Chevrolet Tracker Restoration Kit

|     |  |
|-----|--|
| NY7 | Transfer Case Shield   |
| N29 | Special Aluminum Wheel 15 X 6  |
| N33 | Tilt Type Steering Column  |
| N40 | Non-Variable Ratio Power Steering  |
| N79 | Full Size Steel Spare Wheel  |
| PG2 | Steel Wheel 15 X 5.5   |
| PW8 | Aluminum Styled Wheel 15 X 6   |
| P17 | Spare Wheel Cover  |
| QAR | Tire All P195/75R15-94S BW R/PE ST TL ALS                                    |
| QCE | Tire All P205/75R15/N BL R/PE ST TL ALS                                      |
| QCM | Tire All P215/75R15-100S WOL R/PE ST TL ALS                                  |
| QPK | Tire All P215/70R15- 97S BW R/PE ST TL ALS                                   |
| TL4 | Painted Grille   |
| T61 | Daytime Running Lamp System  |
| T62 | Daytime Running Lamp System - Delete   |
| T82 | Automatic Headlamp Control, On-Off   |
| UH8 | Instrument Cluster, Cool Temperature, Trip Odometer, Tach                    |
| UL5 | Radio Delete   |
| UM6 | Radio AM/FM Stereo, Seek/Scan, Auto Reverse Cassette, Clock, ETR             |
| UQO | 4 Speaker System, Dual Front Door Mounted, Dual Standard Range Quarter/Shelf |
| U1C | Radio AM/FM Stereo, Seek/Scan, Compact Disc, Clock, ETR                      |
| U19 | Instrument Speedometer, Kilometers & Miles, Kilo Odometer                    |
| U73 | Fixed Radio Antenna  |
| VB1 | Japan Shipping Label   |
| VC5 | Shipping Label, Except US, US Possessions, or Japan                          |
| VD9 | Front & Rear Fascia, Body Color  |
| VG8 | Notice to Buyer Vehicle Label  |
| V22 | Chrome Radiator Grille   |
| V54 | Painted Roof Luggage Carrier   |
| V73 | Vehicle Statement USA/Canada   |
| V78 | Vehicle Statement - Delete   |
| WR0 | Appearance Package Special Edition Tracker                                   |
| XR5 | Pollen Filter  |
| X88 | Chevrolet Name Plate Conversion  |
| YF5 | Emission Certification, California   |
| ZR2 | 4 x 4 Sport High Wider Performance Chassis Package                           |
| ZY1 | Color Combination Solid  |
| Z05 | Convenience Package  |
| Z49 | Export Canadian Modif Mandatory Base Equip                                   |
| 5AO | Gloss Black Grille   |

## Technical Information

### Maintenance and Lubrication

#### Drive Belt Tension Specifications

| Application                                    | Specification    |                        |
|--|------------------|------------------------|
|  | Metric           | English                |
| <b>A/C Compressor</b>                          |                  |                        |
| • 2.0 Liter Engine                             | 6-9 mm at 10 kg  | 0.24-0.35 in at 22 lbs |
| • 2.5 Liter Engine                             | 4-7 mm at 10 kg  | 0.16-0.28 in at 22 lbs |
| <b>Coolant Pump-2.0 Liter Engine</b>           |                  |                        |
| • New Belt-under 5 minutes of use              | 4-5 mm at 10 kg  | 0.16-0.19 in at 22 lbs |
| • Used Belt                                    | 5-7 mm at 10 kg  | 0.20-0.27 in at 22 lbs |
| <b>Coolant Pump/Generator-2.0 Liter Engine</b> |                  |                        |
| • New Belt-under 5 minutes of use              | 5-6 mm at 10 kg  | 0.20-0.24 in at 22 lbs |
| • Used Belt                                    | 6-8 mm at 10 kg  | 0.24-0.32 in at 22 lbs |
| <b>Coolant Pump/Generator-2.5 Liter Engine</b> |                  |                        |
| • New Belt-under 5 minutes of use              | 7-9 mm at 10 kg  | 0.28-0.35 in at 22 lbs |
| • Used Belt                                    | 9-11 mm at 10 kg | 0.35-0.43 in at 22 lbs |
| <b>Power Steering Pump</b>                     |                  |                        |
| • 2.0 Liter Engine                             | 6-9 mm at 10 kg  | 0.24-0.35 in at 22 lbs |
| • 2.5 Liter Engine                             | 4-7 mm at 10 kg  | 0.16-0.28 in at 22 lbs |

#### Capacities - Approximate Fluid

| Application                                     | Specification |         |
|---|---------------|---------|
|   | Metric        | English |
| <b>4-Speed Automatic Transmission (RPO M41)</b> |               |         |
| • Bottom Pan Removal-2WD                        | 2.8 L         | 3.0 qts |
| • Bottom Pan Removal-4WD                        | 2.5 L         | 2.6 qts |
| • Complete Overhaul-2WD - 2.0L                  | 7.4 L         | 7.8 qts |
| • Complete Overhaul-2WD - 2.5L                  | 7.4 L         | 7.8 qts |
| • Complete Overhaul-4WD - 2.0L                  | 7.1 L         | 7.5 qts |
| • Complete Overhaul-4WD - 2.5L                  | 7.1 L         | 7.5 qts |
| <b>5-Speed Manual Transmission (RPO M59)</b>    |               |         |
| • Two-Wheel-Drive Models                        | 1.9 L         | 2.0 qts |
| • Four-Wheel-Drive Models                       | 1.5 L         | 1.6 qts |
| <b>Axle Housing</b>                             |               |         |
| • Front   | 1.0 L         | 1.1 qts |
| • Rear  | 2.2 L         | 2.3 qts |
| <b>Cooling System Capacity</b>                  |               |         |
| • 2.0L Engine                                   | 6.5 L         | 6.9 qts |
| • 2.5L Engine                                   | 8.0 L         | 8.5 qts |
| <b>Engine Crankcase</b>                         |               |         |
| • Without Filter Change 2.0L Engine             | 5.0 L         | 5.3 qts |
| • Without Filter Change 2.5L Engine             | 5.0 L         | 5.3 qts |
| • With Filter Change 2.0L Engine                | 5.2 L         | 5.5 qts |
| • With Filter Change 2.5L Engine                | 5.5 L         | 5.8 qts |

|                               |        |              |
|-------------------------------|--------|--------------|
| <b>Fuel Tank</b>              |        |              |
| • 2-Door Convertible Models   | 56.0 L | 14.8 gallons |
| • 4-Door Hardtop Models       | 66.0 L | 17.4 gallons |
| <b>Transfer Case 4WD Only</b> | 1.7 L  | 1.8 qts      |

**Maintenance Items**

| Application                                       | Specification               |
|---|-----------------------------|
| <b>A/C Evaporator Air Filter-4-door only</b>      | GM P/N 91175057             |
| <b>Air Cleaner Element</b>                        |                             |
| • 2.0 Liter Engine                                | GM P/N 91174457             |
| • 2.5 Liter Engine                                | GM P/N 30025009             |
| <b>Fuel Filter</b>                                | GM P/N 30020673             |
| <b>Oil Filter</b>                                 |                             |
| • 2.0 Liter Engine                                | GM P/N 91173772             |
| • 2.5 Liter Engine                                | GM P/N 91176162             |
| <b>Positive Crankcase Ventilation (PCV) Valve</b> |                             |
| • 1.6 Liter Engine                                | GM P/N 96068664             |
| • 2.0 Liter Engine                                | GM P/N 91174516             |
| • 2.5 Liter Engine                                | GM P/N 91176183             |
| <b>Spark Plugs</b>                                |                             |
| • 2.0 Liter Engine, NGK IFR5J11                   | GM P/N 91176020             |
| • 2.0 Liter Engine, NGK BKR6E11                   | GM P/N 91173854             |
| • 2.0 Liter Engine, Denso K20PR-U11               | GM P/N 91173855             |
| • 2.5 Liter Engine, NGK IFR5J11                   | GM P/N 91176020             |
| • 2.5 Liter Engine, NGK BKR6E11                   | GM P/N 91173854             |
| • 2.5 Liter Engine, Denso K20PR-U11               | GM P/N 91173855             |
| <b>Spark Plug Gap</b>                             | 1.0-1.1 mm (0.039-0.043 in) |

**Tire Inflation Pressure Specifications**

| Tire Size        | Specification |         |
|------------------|---------------|---------|
|                  | Metric        | English |
| P195/75R15-Front | 180 kPa       | 26 psi  |
| P195/75R15-Rear  | 180 kPa       | 26 psi  |
| P205/75R15-Front | 180 kPa       | 26 psi  |
| P205/75R15-Rear  | 180 kPa       | 26 psi  |
| P215/70R15-Front | 180 kPa       | 26 psi  |
| P215/70R15-Rear  | 180 kPa       | 26 psi  |
| P215/75R15-Front | 180 kPa       | 26 psi  |
| P215/75R15-Rear  | 180 kPa       | 26 psi  |
| Spare            | 180 kPa       | 26 psi  |



**Fluid and Lubricant Recommendations**

| <b>Application</b>  | <b>Fluid/Lubricant</b>   |
|---|--|
| Automatic Transmission  | DEXRON®-III Automatic Transmission Fluid GM P/N 12346143 (Canadian P/N 10952622) or the equivalent   |
| Chassis Lubrication   | Chassis Lubricant GM P/N 12377985, a lubricant meeting the requirements of NLGI # 2, Category LB or GC-LB, or the equivalent   |
| Clutch Linkage Pivot Points   | Chassis Lubricant GM P/N 12377985, a lubricant meeting the requirements of NLGI # 2, Category LB or GC-LB, or the equivalent   |
| Engine Coolant  | A 50/50 mixture of clean water (preferably distilled) and a good quality Ethylene Glycol Base Coolant GM P/N 1052753 (Canadian P/N 993089) or an equivalent conforming to GM Specification 1825M or an approved recycled coolant conforming to GM Specification 1825M. |
| Engine Oil  | The engine oil with the American Petroleum Institute Certified For Gasoline Engines "Starburst" symbol of the proper viscosity.  |
| Floor Shift Linkage   | Lubriplate® Lubricant Aerosol GM P/N 12346293, a lubricant meeting the requirements of NLGI # 2, Category LB or GC-LB, or the equivalent   |
| Front Wheel Bearings  | Wheel Bearing Lubricant meeting the requirements of NLGI # 2, Category GC or GC-LB GM P/N 1051344 (Canadian P/N 993037) or the equivalent  |
| Hood and Door Hinges  | Multi-Purpose Lubricant, Superlube® GM P/N 12346241 (Canadian P/N 10953474) or the equivalent  |
| Hood Latch Assembly, Secondary Latch Assembly, Pivots, Spring Anchor and Release Pawl | Lubriplate® Lubricant Aerosol GM P/N 12346293, a lubricant meeting the requirements of NLGI # 2, Category LB or GC-LB, or the equivalent   |
| Hydraulic Brake System  | Delco Supreme 11® Brake Fluid GM P/N 12377967 (Canadian P/N 992667) or an equivalent DOT-3 brake fluid   |
| Hydraulic Clutch System   | Hydraulic Clutch Fluid GM P/N 12345347 (Canadian P/N 10953517) or the equivalent   |
| Key Lock Cylinders  | Multi-Purpose Lubricant, Superlube® GM P/N 12346241 (Canadian P/N 10953474) or the equivalent  |
| Manual Transmission Shift Linkage   | Chassis Lubricant GM P/N 12377985, a lubricant meeting the requirements of NLGI # 2, Category LB or GC-LB, or the equivalent   |
| Manual Transmission-All and Transfer Case-Four-Wheel-Drive                            | GM Goodwrench Synthetic Manual Transmission Fluid GM P/N 12346190 (Canadian P/N 10953477) or an equivalent SAE 75W-90 GL-4 Gear Oil  |
| Parking Brake Cable Guides  | Chassis Lubricant GM P/N 12377985, or lubricant meeting the requirements of NLGI # 2, Category LB or GC-LB   |
| Power Steering System   | DEXRON®-III Automatic Transmission Fluid GM P/N 12346143 (Canadian P/N 10952622) or the equivalent   |
| Rear Axle-All and Front Axle-Four-Wheel Drive   | Axle Lubricant GM P/N 12345977 (Canadian P/N 10953482) or SAE 80W-90 GL-5 Gear Lubricant   |
| Weatherstrip Conditioning   | Dielectric Silicone Grease GM P/N 12345579 (Canadian P/N 1974984) Weatherstrip Lubricant-Krytox GM P/N 3634770, or the equivalent  |
| Windshield Washer Solvent   | GM Optikleen® Washer Solvent GM P/N 1051515 (Canadian P/N 993033) or the equivalent  |

## **Descriptions and Operations**

### **Power Steering System**

#### **Power Steering Gear Description**

The power steering system is a closed loop system. The system consists of the following components:

- The power steering fluid reservoir
- The power steering pump
- The power steering gear
- The power steering pipes and hoses

The power steering fluid flows from the fluid reservoir through a hose to the power steering pump. The engine drive belt rotates the pump pulley. The pulley turns the pump drive shaft. The shaft turns the pump rotor. The vanes in the rotor pressurize the power steering fluid. The engine speed sensing type flow control valve controls the fluid pressure. This valve reduces the fluid pressure as the engine speed increases. The fluid flows, under pressure, from the pump, through the pipe and the hose, to the steering gear.

#### **Important**

DO NOT disassemble the power steering gear.

The steering gear is a rack and pinion type steering system. The steering gear has a control valve which directs the fluid to either side of the rack piston. The piston uses hydraulic pressure to move the rack to the left and to the right. The rack moves the tie rods. The tie rods move the steering knuckles. The steering knuckles rotate on ball joints and strut bearings and turn the front wheels and tires.

The power steering fluid flows from the steering gear, through the pipe and the hose, to the reservoir.

If the hydraulic assist fails, the driver maintains manual steering control. Under this condition, however, the driver must use more steering effort.

### **Steering Wheel and Column**

The steering wheel and column has 4 primary functions:

- Vehicle steering
- Vehicle security
- Driver convenience
- Driver safety

#### **Vehicle Steering**

The steering wheel is the first link between the driver and the vehicle. The steering wheel is fastened to a steering shaft within the column. At the lower end of the column, the intermediate shaft connects the column to the steering gear.

#### **Vehicle Security**

Theft deterrent components are mounted and designed into the steering column. The following components allow the column to be locked in order to minimize theft:

- The ignition switch
- The steering column lock
- The ignition cylinder

## Driver Convenience

The steering wheel and column may also have driver controls attached for convenience and comfort. The following controls may be mounted on or near the steering wheel or column.

- The turn signal switch
- The hazard switch
- The headlamp dimmer switch
- The wiper/washer switch
- The horn pad/cruise control switch
- The redundant radio/entertainment system controls
- The tilt or tilt/telescoping functions
- The HVAC controls

## Driver Safety

The energy-absorbing steering column compresses in the event of a front-end collision, which reduces the chance of injury to the driver. The mounting capsules break away from the mounting bracket in the event of an accident.

## Suspension Description and Operation

### Front Suspension

The front suspension has two primary purposes:

- Isolate the driver from irregularities in the road surface.
- Define the ride and handling characteristics of the vehicle.

The front suspension absorbs the impact of the tires travelling over irregular road surfaces and dissipates this energy throughout the suspension system. This process isolates the vehicle occupants from the road surface. The rate at which the suspension dissipates the energy and the amount of energy that is absorbed is how the suspension defines the vehicle's ride characteristics. Ride characteristics are designed into the suspension system and are not adjustable. The ride characteristics are mentioned in this description in order to aid in the understanding of the functions of the suspension system. The suspension system must allow for the vertical movement of the tire and wheel assembly as the vehicle travels over irregular road surfaces while maintaining the tire's relationship with the road.

The steering knuckle is suspended between a lower control arm and a strut assembly. The lower control arm attaches to the steering knuckle at the outermost point of the control arm. The attachment is through a ball and socket type joint. The innermost end of the control arm is attached at two points to the crossmember with semi-rigid bushings. The upper portion of the steering knuckle is attached to a strut assembly. The strut assembly is attached to the vehicle body with an upper bearing. The steering knuckle moves up and down independent of the vehicle body structure.

This up and down motion of the steering knuckle as the vehicle travels over bumps is absorbed predominantly by the coil spring. This spring is retained under tension between the lower control arm and the vehicle body. The strut has an absorber in order to dampen out the oscillations of the coil spring. A strut is a basic hydraulic cylinder. The strut is filled with oil and has a moveable shaft that connects to a piston inside the strut. Valves inside the strut offer resistance to oil flow and consequently inhibit rapid movement of the piston and shaft. Each end of the strut is designed as the connection point of the suspension system to the vehicle. This allows the strut to utilize the dampening action to reduce the recoil of a spring alone. The lower control arm is allowed to pivot at the vehicle frame in a vertical fashion. The ball joint allows the steering knuckle to maintain the perpendicular relationship to the road surface.

Front suspensions systems utilize a stabilizer shaft. The stabilizer shaft connects between the left lower control arm and the right lower control arm through the stabilizer shaft links and the stabilizer shaft insulators. This bar controls the amount of independent movement of the suspension when the vehicle turns. Limiting the independent movement defines the vehicles handling characteristics on turns.

## Rear Suspension

The rear suspension has two primary purposes:

- Isolate the driver from irregularities in the road surface.
- Define the ride and handling characteristics of the vehicle.

The rear suspension absorbs the impact of the tires travelling over irregular road surfaces and dissipates this energy throughout the suspension system. This process isolates the vehicle occupants from the road surface. The rate at which the suspension dissipates the energy and the amount of energy that is absorbed is how the suspension defines the vehicle's ride characteristics. Ride characteristics are designed into the suspension system and are not adjustable. The ride characteristics are mentioned in this description in order to aid in the understanding of the functions of the suspension system. The suspension system must allow for the vertical movement of the tire and wheel assembly as the vehicle travels over irregular road surfaces while maintaining the tire's relationship to the road.

The rear suspension of this vehicle is a coil sprung rigid axle with 5 links. The 2 upper control arms control the longitudinal movement and the rotational movement of the axle. The 2 lower control arms also control the longitudinal movement and the rotational movement of the axle. The rear axle tie rod controls the lateral axle movement. The control arms and the tie rod retain the axle to the frame with semi-rigid bushings. The 5 links allow the axle to move up and down as the vehicle travels over bumps. This control of axle movement defines the vehicle's handling characteristics in turns.

The up and down motion of the axle is absorbed predominantly by the coil spring. This spring is retained under tension between the axle and the frame. The 2 shock absorbers dampen the oscillations of the coil spring. A shock absorber is a basic hydraulic cylinder. A shock absorber is filled with oil and has a moveable shaft that connects to a piston inside the strut. Valves inside the shock absorber offer resistance to oil flow and consequently inhibit rapid movement of the piston and shaft. This control of vertical axle movement defines the vehicle's ride characteristics as the vehicle travels over bumps.

## Wheels and Tires

### Fastener Tightening Specifications

| Application    | Specification |            |
|----------------|---------------|------------|
|                | Metric        | English    |
| Wheel Nut Caps | 3 N·m         | 27 lb in   |
| Wheel Nuts     | 100 N·m       | 73.8 lb ft |

### General Description

The factory installed tires are designed to operate satisfactorily with loads up to and including the full rated load capacity when these tires are inflated to the recommended pressures.


The following factors have an important influence on tire life:

- Correct tire pressures
- Correct wheel alignment
- Proper driving techniques
- Tire rotation

The following factors increase tire wear:

- Heavy cornering
- Excessively rapid acceleration
- Heavy braking

### Tread Wear Indicators Description

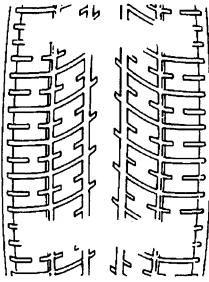

The original equipment tires have tread wear indicators that show when you should replace the tires.

The location of these indicators are at 72 degree intervals around the outer diameter of the tire. The indicators appear as a 6 mm (0.25 in) wide band when the tire tread depth becomes 1.6 mm (2/32 in).

### Metric Wheel Nuts and Bolts Description

Metric wheel/nuts and bolts are identified in the following way:

- The wheel/nut has the word Metric stamped on the face.
- The letter M is stamped on the end of the wheel bolt.

The thread sizes of metric wheel/nuts and the bolts are indicated by the following example: M12 x 1.5.

- M = Metric
- 12 = Diameter in millimeters
- 1.5 = Millimeters gap per thread

### Tire Inflation Description

When you inflate the tires to the recommended inflation pressures, the factory-installed wheels and tires are designed in order to handle loads to the tire's rated load capacity. Incorrect tire pressures, or under-inflated tires, can cause the following conditions:

- Vehicle handling concerns
- Poor fuel economy
- Shortened tire life
- Tire overloading

Inspect the tire pressure when the following conditions apply:

- The vehicle has been sitting at least 3 hours.
- The vehicle has not been driven for more than 1.6 km (1 mi).
- The tires are cool.

Inspect the tires monthly or before any extended trip. Adjust the tire pressure to the specifications on the tire label. Install the valve caps or the extensions on the valves. The caps or the extensions keep out dust and water.

The kilopascal (kPa) is the metric term for pressure. The tire pressure may be printed in both kilopascal (kPa) and psi. One psi equals 6.9 kPa.

### Inflation Pressure Conversion (Kilopascals to PSI)

| kPa                         | psi | kPa | psi |
|-----------------------------|-----|-----|-----|
| 140                         | 20  | 215 | 31  |
| 145                         | 21  | 220 | 32  |
| 155                         | 22  | 230 | 33  |
| 160                         | 23  | 235 | 34  |
| 165                         | 24  | 240 | 35  |
| 170                         | 25  | 250 | 36  |
| 180                         | 26  | 275 | 40  |
| 185                         | 27  | 310 | 45  |
| 190                         | 28  | 345 | 50  |
| 200                         | 29  | 380 | 55  |
| 205                         | 30  | 415 | 60  |
| Conversion: 6.9 kPa = 1 psi |     |     |     |

Tires with a higher than recommended pressure can cause the following conditions:

- A hard ride
- Tire bruising
- Rapid tread wear at the center of the tire


Tires with a lower than recommended pressure can cause the following conditions:

- A tire squeal on turns
- Hard steering
- Rapid wear and uneven wear on the edge of the tread
- Tire rim bruises and tire rim rupture
- Tire cord breakage
- High tire temperatures
- Reduced vehicle handling
- High fuel consumption
- Soft riding

Unequal pressure on the same axle can cause the following conditions:

- Uneven braking
- Steering lead
- Reduced vehicle handling

## P-Metric Sized Tires Description

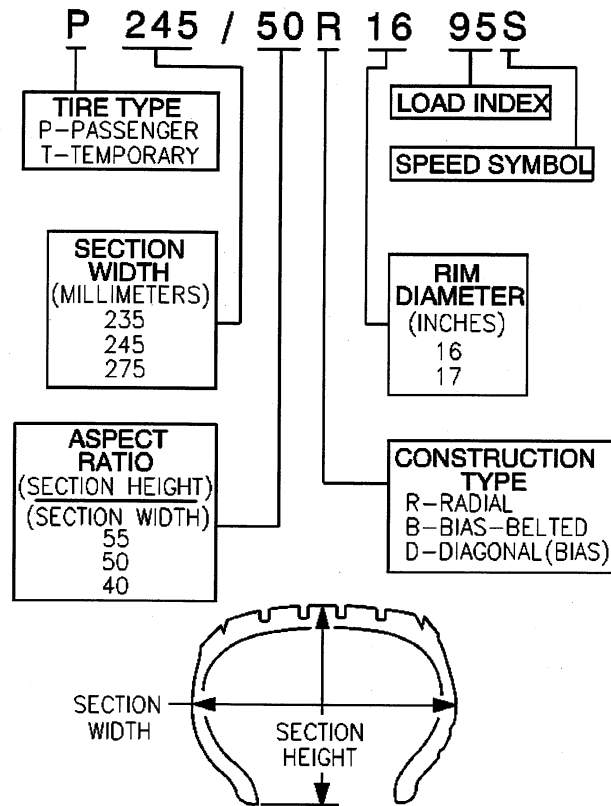


Most P-metric tire sizes do not have exact corresponding alphanumeric tire sizes. Replacement tires should be of the same tire performance criteria (TPC) specification number including the same size, the same load range, and the same construction as those originally installed on the vehicle. Consult a tire dealer if you must replace the P-metric tire with other sizes. Tire companies can best recommend the closest match of alphanumeric to P-metric sizes within their own tire lines.

## Driveline System Description and Operation

### Driveline/Axle – Propeller Shaft

#### Front and Rear Propeller Shaft

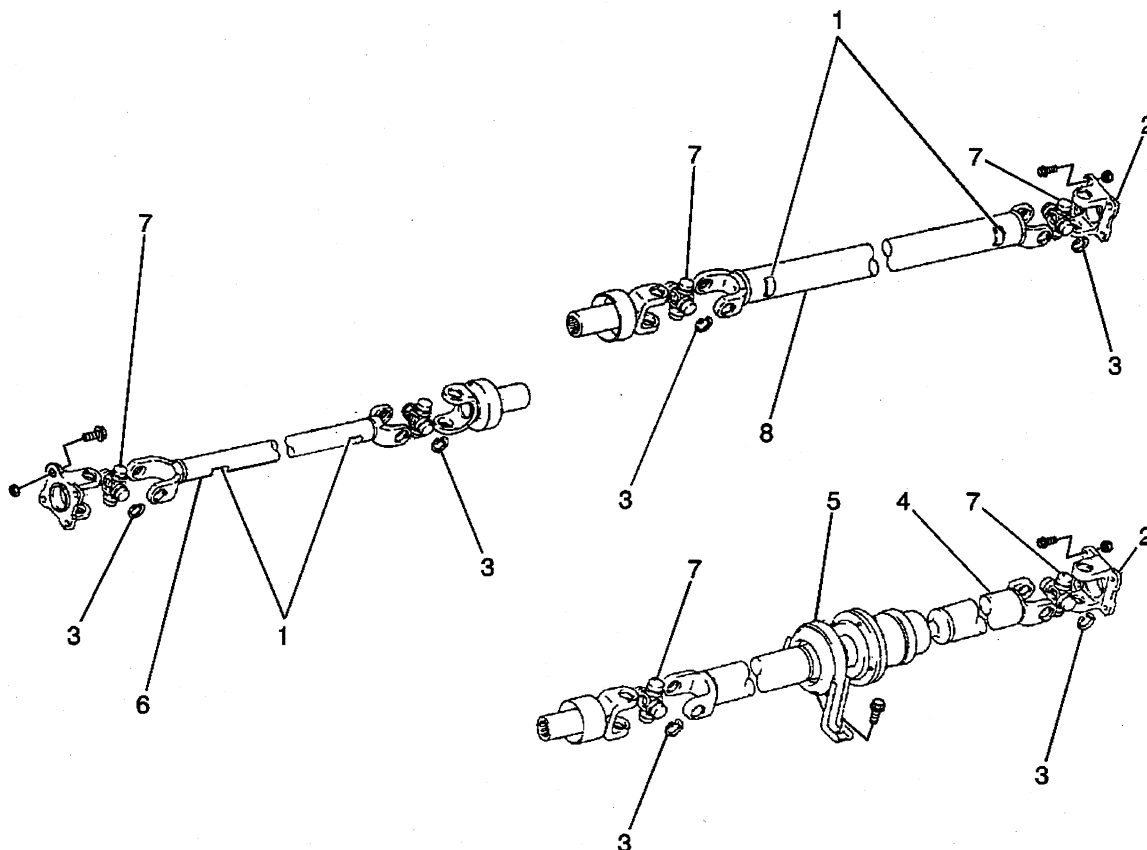

- (1) Balance Weight
- (2) Pinion Flange Yoke
- (3) Snap Ring
- (4) 2 Piece Propeller Shaft (4 Door 2WD Equipped)
- (5) Center Support and Center Support Bearing (4 Door 2WD Equipped)
- (6) Front Propeller Shaft (4WD Equipped)
- (7) Universal Joint
- (8) Rear Propeller Shaft

The propeller shaft is a balanced cylindrical shaft which transfers engine torque from the transmission or transfer case to the front or rear differential carrier through universal joints (7). The number of propeller shafts and universal joint assemblies can be either one propeller shaft and 2 universal joint assemblies (two-wheel drive), or 2 propeller shafts and 4 universal joint assemblies (four-wheel drive). The sliding yoke is splined to the transmission or transfer case output shaft. The sliding yoke permits fore and aft




movement of the propeller shaft as the differential moves up or down with suspension movement. The splines are lubricated internally by transmission or transfer case lubricant.

The pinion flange yoke (2) is bolted to the differential pinion flange and needs no lubrication. The propeller shaft is designed and built with the yoke lugs in line with each other. This design produces the smoothest running shaft possible and is known as phasing. The propeller shaft will absorb vibrations from speeding up and slowing on each revolution of the universal joints. A total cancellation of vibration produces a smooth flow of power through the driveline.

When servicing the propeller shaft and its components, exercise care during removal and installation procedures to make sure the propeller shaft is installed in the same position from which it was removed. It is necessary to make index marks (reference marks) on the propeller shaft pinion flange yoke and the differential pinion flange before removing them to ensure correct installation and alignment. If this precaution is not observed, a driveline imbalance may result, causing vibration, premature component wear or other problems.


### Universal Joint Description

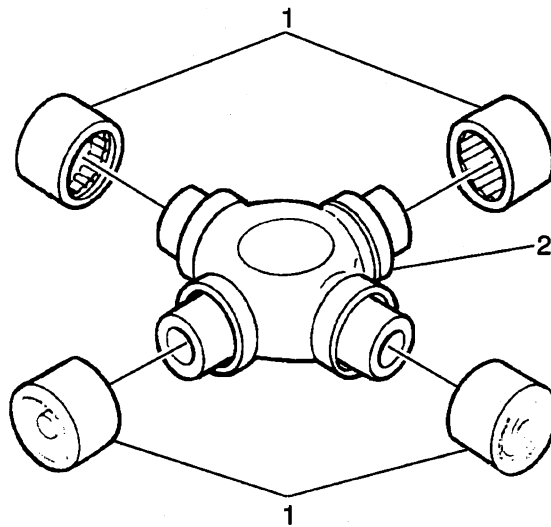

A universal joint consists of bearing assemblies connected by a crossmember called a spider (2). The spider is shaped like a cross and has arms of equal length. The bearings used in universal joints are the needle roller type and revolve around the ends of the spider inside bearing caps which act as races. The bearing caps (1) are fitted into the propeller shaft yokes and are held in place with snap rings. The universal joint is designed to handle the effects of various loadings and axle windup during acceleration.

The universal joints will operate safely and efficiently within design angle variations. When the design angle is changed or exceeded, the operational life of the joint may decrease. Universal joints are lubricated and sealed during manufacturing and do not require maintenance. If a universal joint becomes noisy or worn, it must be replaced as an assembly.

## Wheel Drive Shafts

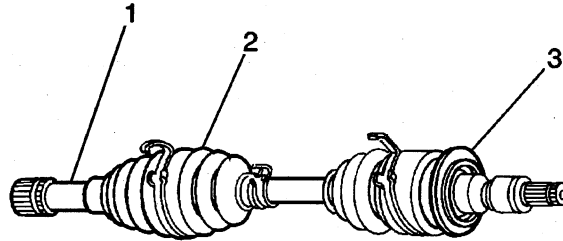

The front drive axle shaft is a flexible assembly consisting of an inner and outer Constant Velocity (CV) joint joined by an axle shaft (1). The inner or differential-side CV joint is a double offset design which is completely flexible and has the capability of an in and out movement. The outer or wheel-side CV joint (2) is a ball joint design that is completely flexible, but cannot move in and out.

### Front Drive Axle Description and Operation

The front axle assembly consists of the following:

- Front axle housing
- Differential carrier
- Left inner axle shaft
- Left drive axle shaft
- Right drive axle shaft

The front axle housing is mounted to the vehicle frame. The differential carrier is mounted in the right side of the front axle housing. The front propeller shaft turns the differential assembly which transfers engine power when in 4WD mode to the right and left drive axle shafts. The front axle housing is sealed and contains a synthetic gear lubricant which lubricates the differential assembly, left inner axle shaft and its support bearing. The front axle housing is also vented to prevent excessive heat buildup.

The differential assembly utilizes a hypoid beveled ring and pinion gear set. It consists of a ring gear which is mounted to the differential case, a pinion gear which is mounted in the differential case, and a set of four gears mounted inside the differential case. Two of these gears are known as side gears and the other two are known as differential pinion gears. The right side gear is splined to the right drive axle shaft, and the left side gear is splined to the left inner axle shaft.

At the end of the left inner axle shaft is a flange which bolts to a similar flange at the differential-side joint of the left drive axle shaft. Because these shafts are splined to the differential side gears, the right drive axle and the left inner axle shaft rotate as their respective side gear rotates. The differential pinion gears are mounted on a pinion shaft and are free to rotate on it. The pinion shaft is fitted into bores in the differential case and is held in place by a roll pin. The differential case is mounted in the differential carrier where the pinion gear drives the ring gear, differential case, and its side and differential pinion gears.

### Front Axle Operation

When the transfer case is placed in 4WH or 4WL, the electric motor actuator turns on and builds pressure. When the pressure reaches the specific amount (within seconds) the actuator engages and

locks the differential into the drive mode. Engine torque is provided by the front propeller shaft. The propeller shaft is bolted to the pinion flange by a universal joint. The pinion gear turns the ring gear and differential case, which causes the side gears to rotate with the case. This action in turn causes the left inner axle shaft and the right drive axle shaft to rotate and drive the front wheels. When both wheels have equal traction, the differential pinion gears do not rotate on the pinion shaft. This is due to an input force which is equally divided between the side gears. In other words, the differential pinion gears revolve with the pinion shaft, but do not rotate around it. When the vehicle turns a corner, the outer drive axle must turn faster than the inner drive axle. When the inner drive axle turns slower than the outer, it slows its side gear. The differential pinion gears will roll around the slower drive axle side gear providing torque to the outer drive axle. When the transfer case is placed in 2WH or N, the front axle is disengaged and the front propeller shaft as well as all front axle components remain stationary while the front wheels are free to rotate.

## **Rear Drive Axle Description and Operation**

The rear axle assembly contains two rigid axle shafts which transfer engine torque to the rear wheels. These axle shafts are supported in the rear axle housing by bearings at both outer ends, and driven by the differential assembly which is mounted in the center of the rear axle housing. A propeller shaft turns the differential assembly and transfers power to the rear axle shafts. The rear axle housing is sealed and contains a synthetic gear lubricant which lubricates the differential assembly and axle shafts bearings. The rear axle housing is also vented to prevent excessive heat buildup. The rear trailing rods connect the rear axle housing to the frame and act as pivot points for the housing as it moves up and down with the rear suspension. Coil springs support the rear of the vehicle and are seated into the frame and rear axle housing axle. Shock absorbers are fitted between the rear axle housing and the frame to help to reduce road vibration and rough pavement. An upper control arm is fitted to the body by bushings, and to the rear differential carrier by a rear control arm ball joint to prevent the rear axle housing from moving in a lateral direction.

The differential assembly uses a hypoid, beveled ring and pinion gear set. It consists of a ring gear which is mounted to the differential case and a pinion gear which is mounted in the differential carrier. The ring and pinion gears are in constant mesh with each other. A set of six gears are mounted inside the differential case. Two of these gears are known as side gears and the other four are known as differential pinion gears. Each side gear is splined to an axle shaft which causes each axle shaft to turn when its side gear rotates. The differential pinion gears are mounted on a pinion cross shaft and are free to rotate on it. The pinion shaft is fitted into a bore in the differential case and is held in place by a pinion shaft roll pin. The differential case is mounted in the differential carrier where the pinion gear drives the ring gear, differential case, and the side and differential pinion gears. The differential carrier is mounted near the center of the rear axle housing.

Engine torque is provided by a rear propeller shaft that is bolted to the pinion gear by a universal joint and pinion flange. The pinion gear is in constant mesh with the ring gear and causes it to turn. The ring gear then rotates the differential case causing the differential pinion gears to turn with the case. This causes the side gears and both rear axle shafts to rotate. When both wheels have equal traction, the pinion gears do not rotate on the cross shaft. This is due to an input force that is equally divided between the side gears. In other words, the pinion gears revolve with the cross shaft but do not rotate around it. When the vehicle turns a corner, the outer axle must turn faster than the inner axle. When the inner axle turns slower than the outer, it slows its side gear. The differential pinion gears will roll around the slower side gear providing torque to the outer axle shaft.

## **Rear Wheel Speed Sensor (ABS)**

A four-wheel antilock braking system is optional equipment on this vehicle. The rear wheel speed sensor is mounted on the rear differential carrier. The rear wheel speed sensor consists of a magnetic core, with a magnet and a coil. The speed sensor exciter ring is mounted on the differential case behind the ring gear and rotates with the case. An electrical impulse is produced each time a gear tooth of the speed sensor exciter ring passes the rear wheel speed sensor, allowing the sensor to receive a signal in direct proportion to the rear axle speed. This signal is then sent to the Electronic Brake Control Module (EBCM). For more information and diagnostic procedures, refer to Antilock Brake System.

## **Transfer Case Description**

Vehicles equipped with 4WD, the transfer case, located at the rear of the transmission, is responsible for transferring engine torque to the front and rear wheels. The transfer case contains an input gear, countershaft and counter gear, rear output shaft, low output gear and a front output shaft (for front drive) connected and driven by a drive chain.

The transfer case gearshift control lever can be placed in four positions: 4H (direct connection with the input gear, counter gear and low output gear), N (by way of the reduction clutch sleeve located between the input gear and the low output gear) and 2H (high speed to the rear wheels only). The front drive shift fork mechanism also has an auxiliary spring to ensure a smooth shift from 4H to 2H.

You can shift from 2H to 4H or from 4H to 2H at any speed if your vehicle is going less than 60 mph (100 kph) and your wheels are straight ahead. Your front axle will engage faster if you take your foot off the accelerator pedal for a few seconds as you shift.

## **Braking System Description and Operation**

### **Hydraulic Brake System Description and Operation**

#### **System Component Description**

The hydraulic brake system consists of the following:

##### **Hydraulic Brake Master Cylinder Fluid Reservoir**

Contains supply of brake fluid for the hydraulic brake system.

##### **Hydraulic Brake Master Cylinder**

Converts mechanical input force into hydraulic output pressure.

Hydraulic output pressure is distributed from the master cylinder through two hydraulic circuits, supplying diagonally-opposed wheel apply circuits.

##### **Hydraulic Brake Pressure Balance Control System**

Regulates brake fluid pressure delivered to hydraulic brake wheel circuits, in order to control the distribution of braking force.

Pressure balance control is achieved through dynamic rear proportioning (DRP), which is a function of the ABS modulator.

##### **Hydraulic Brake Pipes and Flexible Brake Hoses**

Carries brake fluid to and from hydraulic brake system components.

##### **Hydraulic Brake Wheel Apply Components**

Converts hydraulic input pressure into mechanical output force.

#### **System Operation**

Mechanical force is converted into hydraulic pressure by the master cylinder, regulated to meet braking system demands by the pressure balance control system, and delivered to the hydraulic brake wheel circuits by the pipes and flexible hoses. The wheel apply components then convert the hydraulic pressure back into mechanical force which presses linings against rotating brake system components.

## **Brake Assist System Description and Operation**

### **System Component Description**

The brake assist system consists of the following:

#### **Brake Pedal**

Receives, multiplies and transfers brake system input force from driver.

### **Brake Pedal Pushrod**

Transfers multiplied input force received from brake pedal to brake booster.

### **Vacuum Brake Booster**

Uses source vacuum to decrease effort required by driver when applying brake system input force.

When brake system input force is applied, air at atmospheric pressure is admitted to the rear of both vacuum diaphragms, providing a decrease in brake pedal effort required. When input force is removed, vacuum replaces atmospheric pressure within the booster.

### **Vacuum Source**

Supplies force used by vacuum brake booster to decrease brake pedal effort.

### **Vacuum Source Delivery System**

Enables delivery and retention of source vacuum for vacuum brake booster.

### **System Operation**

Brake system input force is multiplied by the brake pedal and transferred by the pedal pushrod to the hydraulic brake master cylinder. Effort required to apply the brake system is reduced by the vacuum brake booster.

## **Disc Brake System Description and Operation**

### **System Component Description**

The disc brake system consists of the following components:

#### **Disc Brake Pads**

Applies mechanical output force from the hydraulic brake calipers to friction surfaces of brake rotors.

#### **Disc Brake Rotors**

Uses mechanical output force applied to friction surfaces from the disc brake pads to slow speed of tire and wheel assembly rotation.

#### **Disc Brake Pad Hardware**

Secures disc brake pads firmly in proper relationship to the hydraulic brake calipers. Enables a sliding motion of brake pads when mechanical output force is applied.

#### **Disc Brake Caliper Hardware**

Provides mounting for hydraulic brake caliper and secures the caliper firmly in proper relationship to caliper bracket. Enables a sliding motion of the brake caliper to the brake pads when mechanical output force is applied.

### **System Operation**

Mechanical output force is applied from the hydraulic brake caliper pistons to the inner brake pads. As the pistons press the inner brake pads outward, the caliper housings draw the outer brake pads inward. This allows the output force to be equally distributed. The brake pads apply the output force to the friction surfaces on both sides of the brake rotors, which slows the rotation of the tire and wheel assemblies. The correct function of both the brake pad and brake caliper hardware is essential for even distribution of braking force.

## **Drum Brake System Description and Operation**

### **System Component Description**

The drum brake system consists of the following:

#### **Drum Brake Shoes**

Applies mechanical output force (from hydraulic brake wheel cylinders) to friction surface of brake drums.

#### **Brake Drums**

Uses mechanical output force applied to friction surface from drum brake shoes to slow speed of tire and wheel assembly rotation.

#### **Drum Brake Hardware**

Secures drum brake shoes firmly in proper relationship to hydraulic brake wheel cylinders. Enables sliding motion of brake shoes needed to expand toward friction surface of drums when mechanical output force is applied; provides return of brake shoes when mechanical output force is relieved.

#### **Drum Brake Adjusting Hardware**

Provides automatic adjustment of brake shoes to brake drum friction surface whenever brake apply occurs during rearward motion of the vehicle.

### **System Operation**

Mechanical output force is applied from the hydraulic brake wheel cylinder pistons to the top of the drum brake shoes. The output force is then distributed between the primary and secondary brake shoes as the shoes expand toward the friction surface of the brake drums. The brake shoes apply the output force to the friction surface of the brake drums, which slows the rotation of the tire and wheel assemblies. The proper function of both the drum brake hardware and adjusting hardware is essential to the proper distribution of braking force.

## **Park Brake System Description and Operation**

### **System Component Description**

The park brake system consists of the following:

#### **Park Brake Lever Assembly**

Receives, multiplies, and transfers park brake system apply input force from operator to park brake cable system.

Releases applied park brake system when lever is returned to at-rest, lowered, position.

#### **Park Brake Cables**

Transfers input force received from park brake lever, through park brake cable equalizer, to park brake apply levers.

#### **Park Brake Cable Equalizer**

Evenly distributes input force to both the left and right park brake units.

#### **Park Brake Apply Lever**

Multiplies and transfers input force to park brake actuator/adjuster.

#### **Park Brake Actuator/Adjuster**

Uses multiplied input force from apply lever to expand drum brake shoes toward the friction surface of the brake drum.

Threaded park brake actuators/adjusters are also used to control clearance between the drum brake shoes and the friction surface of the brake drum.

### **Drum Brake Shoes**

Applies mechanical output force from park brake actuator/adjuster to friction surface of the brake drum.

### **System Operation**

Park brake apply input force is received by the park brake lever assembly being applied. The input force is multiplied by the lever assembly, transferred, and evenly distributed, through the park brake cables and the park brake cable equalizer, to the left and right park brake apply levers. The park brake apply levers multiply and transfer the apply input force to the park brake actuators/adjusters which expand the drum brake shoes toward the friction surface of the brake drum in order to prevent the rotation of the rear tire and wheel assemblies. The park brake lever assembly releases an applied park brake system when it is returned to the at-rest, lowered, position.

### **ABS Description and Operation**

#### **Antilock Brake System**

When wheel slip is detected during a brake application, the ABS enters antilock mode. During antilock braking, hydraulic pressure in the individual wheel circuits is controlled to prevent any wheel from slipping. A separate hydraulic line and specific solenoid valves are provided for each wheel. The ABS can decrease, hold, or increase hydraulic pressure to each wheel brake. The ABS cannot, however, increase hydraulic pressure above the amount which is transmitted by the master cylinder during braking.

During antilock braking, a series of rapid pulsations is felt in the brake pedal. These pulsations are caused by the rapid changes in position of the individual solenoid valves as the EBCM responds to wheel speed sensor inputs and attempts to prevent wheel slip. These pedal pulsations are present only during antilock braking and stop when normal braking is resumed or when the vehicle comes to a stop. A ticking or popping noise may also be heard as the solenoid valves cycle rapidly. During antilock braking on dry pavement, intermittent chirping noises may be heard as the tires approach slipping. These noises and pedal pulsations are considered normal during antilock operation.

Vehicles equipped with ABS may be stopped by applying normal force to the brake pedal. Brake pedal operation during normal braking is no different than that of previous non-ABS systems. Maintaining a constant force on the brake pedal provides the shortest stopping distance while maintaining vehicle stability.

## Engine Description and Operation

### Engine Mechanical Specifications – 2.0L

| Application  | Specification        |                  |
|--|----------------------|------------------|
|  | Metric               | English          |
| <b>General:</b>                                    |                      |                  |
| • Engine Type                                      | L4                   |                  |
| • RPO Code   | L34                  |                  |
| • Displacement                                     | 1995 cc              | 122 CID          |
| • Bore   | 84 mm                | 3.31 in          |
| • Stroke   | 90 mm                | 3.54 in          |
| • Compression Ratio                                | 9.7:1                |                  |
| • Firing Order                                     | 1-3-4-2              |                  |
| • Spark Plug Type-Denso                            | SK16PR11 or PK16PR11 |                  |
| • Spark Plug Type-NGK                              | IFR5G11 or PFR5G-11  |                  |
| • Spark Plug Gap                                   | 1.0-1.1 mm           | 0.039-0.043 in   |
| <b>Lubrication System:</b>                         |                      |                  |
| • Oil Pressure at 4000 RPM                         | 390-470 kPa          | 55.5-66.8 psi    |
| • Oil Capacity with Filter Change                  | 5.2 L                | 5.5 qt           |
| • Oil Capacity without Filter Change               | 5.0 L                | 5.2 qt           |
| <b>Cooling System:</b>                             |                      |                  |
| • Cooling System Capacity                          | 6.5 L                | 6.9 qt           |
| • Temperature at which Thermostat begins to Open   | 83°C                 | 179°F            |
| • Temperature at which Thermostat Fully Open       | 95°C                 | 203°F            |
| • Thermostat Valve Lift                            | 8 mm at 95°C         | 0.32 in at 203°F |
| • Radiator Cap Relief Valve Pressure               | 108 kPa              | 15.7 psi         |
| • Temperature at which Fan Clutch begins to Engage | 50-70°C              | 122-158°F        |

### Fastener Tightening Specifications – 2.0L

| Application   | Specification |           |
|---|---------------|-----------|
|   | Metric        | English   |
| Air Cleaner (ACL) Mounting Bolts                        | 10 N·m        | 89 lb in  |
| Air Conditioner (A/C) Compressor Mounting Bolts         | 23 N·m        | 17 lb ft  |
| Air Conditioner (A/C) Compressor Bracket Mounting Bolts | 55 N·m        | 40 lb ft  |
| Camshaft Bearing Cap Bolts                              | 11 N·m        | 97 lb in  |
| Camshaft Position Sensor Bolt                           | 15 N·m        | 11 lb ft  |
| Camshaft Timing Sprocket Bolts                          | 80 N·m        | 58 lb ft  |
| Connecting Rod Bearing Cap Nuts                         | 45 N·m        | 33 lb ft  |
| Coolant Bypass Pipe to Cylinder Head Bolt               | 15 N·m        | 11 lb ft  |
| Crankshaft Position Sensor Bolt                         | 6 N·m         | 53 lb in  |
| Crankshaft Pulley Bolt                                  | 150 N·m       | 109 lb ft |
| Cylinder Head Cover Bolts                               | 11 N·m        | 97 lb in  |
| Cylinder Head Bolts                                     |               |           |
| • First Pass  | 53 N·m        | 39 lb ft  |
| • Second Pass   | 84 N·m        | 61 lb ft  |
| • Third Pass  | Loosen to 0   |           |
| • Fourth Pass   | 53 N·m        | 39 lb ft  |
| • Fifth Pass  | 84 N·m        | 61 lb ft  |
| • Sixth Pass (Final Torque)                             | 105 N·m       | 76 lb ft  |
| Cylinder Head M 6 Bolt                                  | 11 N·m        | 97 lb in  |



|   |        |           |
|---|--------|-----------|
| Drive Belt Idler Pulley Nut                     | 45 N·m | 33 lb ft  |
| Drive Belt Tensioner Bolts                      |        |           |
| • Cooling Fan Drive Belt Tensioner Bolts        | 45 N·m | 33 lb ft  |
| • Accessory Drive Belt Tensioner Bolts          | 25 N·m | 19 lb ft  |
| Engine Cooling Fan Nuts                         | 11 N·m | 97 lb in  |
| Engine Ground Wire Bolts                        | 15 N·m | 11 lb ft  |
| Engine Mount Bracket Bolts (Engine Side)        | 50 N·m | 37 lb ft  |
| Engine Mount Bracket Bolts (Body Side)          | 85 N·m | 62 lb ft  |
| Engine Mount Nuts                               | 50 N·m | 37 lb ft  |
| Engine Oil Drain Plug                           | 35 N·m | 26 lb ft  |
| Engine Oil Pan Nuts and Bolts                   | 11 N·m | 97 lb in  |
| Exhaust Manifold Flange Bolts                   | 50 N·m | 37 lb ft  |
| Exhaust Manifold Heat Shield Bolts              | 15 N·m | 11 lb ft  |
| Exhaust Manifold-to-Cylinder Head Nuts          | 50 N·m | 37 lb ft  |
| Exhaust Manifold-to-Bracket Bolts               | 50 N·m | 37 lb ft  |
| Exhaust Pipe PUP Catalytic Converter Clamp Bolt | 50 N·m | 37 lb ft  |
| Fuel Rail to Cylinder Head Bolts                | 23 N·m | 17 lb ft  |
| Fuel Rail Banjo Fitting                         | 30 N·m | 22 lb ft  |
| Flywheel Retaining Bolts                        |        |           |
| • Automatic Transmission                        | 70 N·m | 51 lb ft  |
| • Manual Transmission                           | 70 N·m | 51 lb ft  |
| Generator Mounting Bolts and Nuts               | 23 N·m | 17 lb ft  |
| Heated Oxygen (HO2S1 and HO2S2) Sensor          | 45 N·m | 33 lb ft  |
| Ignition Coil Bolts                             | 10 N·m | 89 lb in  |
| Intake Manifold Bolts and Nuts                  | 25 N·m | 19 lb ft  |
| Intake Manifold Front Support Bracket Bolts     | 45 N·m | 33 lb ft  |
| Intake Manifold Top Support Bracket Bolts       | 15 N·m | 11 lb ft  |
| Lower Crankcase Bolts                           |        |           |
| • First Pass                                    | 19 N·m | 14 lb ft  |
| • Second Pass (Final Torque)                    | 27 N·m | 20 lb ft  |
| Main Bearing Cap Bolts:                         |        |           |
| • First Pass                                    | 42 N·m | 31 lb ft  |
| • Second Pass (Final Torque)                    | 60 N·m | 44 lb ft  |
| Negative Battery Cable                          | 15 N·m | 11 lb ft  |
| Oil Filter Adapter                              | 23 N·m | 17 lb ft  |
| Oil Pressure Switch                             | 14 N·m | 11 lb ft  |
| Oil Pump Sprocket Cover Bolts                   | 11 N·m | 97 lb in  |
| Oil Pump Bolts                                  | 27 N·m | 20 lb ft  |
| Oil Pump Case Bolts                             | 12 N·m | 106 lb in |
| Oil Pump Strainer Bolts                         | 11 N·m | 97 lb in  |
| Oil Pump Relief Valve Retainer                  | 29 N·m | 21 lb ft  |
| Power Steering Pump Bolts                       | 25 N·m | 19 lb ft  |
| Spark Plugs                                     | 25 N·m | 18 lb ft  |
| Starter Bolts                                   | 30 N·m | 22 lb ft  |
| Strut Tower Brace                               | 50 N·m | 37 lb ft  |
| Throttle Body Bolts and Nuts                    | 25 N·m | 19 lb ft  |
| Timing Chain Cover Nut and Bolts                | 11 N·m | 97 lb in  |
| Timing Chain Tensioner Bolts (Camshaft)         | 11 N·m | 97 lb in  |
| Timing Chain Tensioner Bolts (Crankshaft)       | 11 N·m | 97 lb in  |
| Timing Chain Tensioner Nut (Camshaft)           | 45 N·m | 33 lb ft  |
| Timing Chain Tensioner Guide Bolts (Crankshaft) | 9 N·m  | 62 lb in  |
| Timing Chain Tensioner Shoe Nut (Crankshaft)    | 25 N·m | 19 lb ft  |
| Torque Converter Bolts                          | 65 N·m | 47 lb ft  |

|                                       |        |          |
|---------------------------------------|--------|----------|
| Transmission Bracket Bolts            | 50 N·m | 37 lb ft |
| Transmission to Engine Mounting Bolts | 85 N·m | 62 lb ft |
| Water Pump Bolts                      | 27 N·m | 20 lb ft |

## **Engine Component Description – 2.0L**

### **Engine Construction**

The engine is a four cylinder in-line, four stroke gasoline unit with a Double Overhead Cam (DOHC) valve mechanism arranged for V-type valve configuration.

The DOHC is mounted over the cylinder head and is driven by the crankshaft through two timing chains. In this configuration there are no push rods and no rocker arms provided in the valve train system.

### **Cylinder Block**

The cylinder block is an aluminum casting with four cast iron cylinder sleeves. The cylinder block has four in-line cylinders which are numbered 1 through 4 starting from the crankshaft pulley. The cylinder block contains coolant jackets through which coolant flows around the cylinders, to cool the cylinder block and maintain a constant operating temperature. The lower crankcase of the cylinder block is also an aluminum casting with cast iron inserts at the main bearing locations. The lower crankcase runs the entire perimeter of the cylinder block.

### **Crankshaft**

The crankshaft is nodular cast iron and is supported by five main bearings. The crankpins of cylinders 1 and 4 are 180 degrees from the crankpins of cylinders 2 and 3. The crankshaft is counterbalanced by the flywheel, the crankshaft balancer and eight counterweights cast into the crankshaft. Oil holes run through the center of the crankshaft to supply oil to the connecting rods, bearings, pistons and other components. The end thrust load is taken by the thrust washers installed at the center number three bearing journal. The main bearings are of the precision insert type. The front of the crankshaft incorporates a sprocket which drives the oil pump through a sprocket and chain.

### **Connecting Rod and Piston**

Each piston is cast aluminum alloy and has two compression rings and one oil ring. The piston rings are of a low tension type to reduce friction. The top compression ring is plated with chromium for abrasion resistance. The second compression ring is gray iron. The oil ring is a 3-piece spring construction, consisting of two rails and one spacer.

The piston pin is offset 0.5 mm (0.02 in) toward the thrust side. This allows a gradual change in thrust pressure against the cylinder wall as the piston travels through the bore. The connecting rods are forged steel, heat treated and shot peened. Piston pins are chromium steel and have a full floating fit in the pistons and in the connecting rods. The connecting rod bearings are of the precision insert type.

### **Oil Pump**

The oil pump is bolted to the bottom of the lower crankcase. A sprocket on the front of the oil pump is driven by a chain from the sprocket on the front of the crankshaft. The tension on the oil pump drive chain is accomplished by an adjustable guide.

### **Oil Pan**

The oil pan is constructed of stamped steel and is mounted to the lower crankcase. The oil pan includes a baffle that helps prevent the oil from shifting away from the oil pump suction pipe during hard turns, acceleration or stopping.

### **Cylinder Head**

The cylinder head is an aluminum alloy casting with pressed-in valve guides and valve seat inserts. The fuel injection nozzles are located in the intake ports.

The cylinder head has four in-line combustion chambers. Each combustion chamber has two intake valves and two exhaust valves.

A fuel injector is positioned near each set of intake valves. During each intake stroke of the engine, a fuel injector sprays or atomizes fuel into a fine mist. This mist mixes with air drawn in through the intake manifold as the piston reaches the bottom of the cylinder during the intake stroke.

### **Valves**

The valve train is driven by a double overhead camshaft. Each camshaft has eight cam lobes. Each cam lobe operates an intake or exhaust valve. Valve lash is not adjustable. Valve Lash is provided for by Hydraulic Valve Lash (HVL) Adjusters.

There are two intake and two exhaust valves per cylinder. There are two valve springs per valve. The valve springs are conical-shaped to fit inside the valve lifter body. Positive valve stem seals are used on all valves.

### **Valve Lifters**

Direct acting hydraulic valve lifters are used. The valve lifter body includes a hardened iron contact foot bonded to a steel shell. These lifters are not repairable.

### **Valve Lifter (Hydraulic Valve Lash Adjuster) Operation**

The Hydraulic Valve Lash (HVL) Adjuster located between the camshaft and the valve stem is a direct acting type.

With the engine oil delivered into it from the oil pump, the HVL adjuster operates as follows to adjust the valve lash (clearance) to 0 automatically at all times.

1. When the camshaft is not depressing the HVL adjuster, the adjuster is held against the camshaft and the valve stem by the plunger spring. In this state, the valve lash is kept at 0. (At 0 valve lash, the oil pressure becomes equal in the A and B chambers, and the check ball closes the passage between these two chambers.
2. When the lobe of the camshaft starts pressing the HVL adjuster, the adjuster and plunger are pushed downward at the same time the body is pushed upward by the counterforce from the valve stem. As a result, the B chamber is compressed and the pressure rises inside the HVL adjuster. The engine oil in the B chamber will leak through the slight clearance between the body and the plunger. However, since the compression time is very short, the volume of engine oil in the B chamber will only change slightly and the HVL adjuster (plunger and body as one unit) push down the valve stem to open the valve.
3. When the pushing of the camshaft against the HVL adjuster is over, the operation starts again as described in step 1. As the oil pressure in the B chamber is lower than that in A (the oil in the B chamber under high pressure has leaked gradually -- refer to step 2), the oil pressure in the A chamber pushes the check ball open to allow the engine oil to flow from the chamber to the B chamber until the oil pressure becomes equal between the two chambers.

### **Camshaft**

Two camshafts are used, one for all intake valves, the other for all exhaust valves. The camshafts are cast iron. The exhaust camshaft rear end is slotted to mate with, and drive the camshaft position sensor.

### **Camshaft Housings and Caps**

The camshaft housings and caps are cast aluminum. The camshafts run directly on the housings and caps without bearing inserts.

### **Camshaft Drive**

Two roller timing chains are used. One chain is driven from the crankshaft and drives an idler gear. A second chain is driven from the idler gear and drives the camshafts.

A mechanical, ratcheting tensioner applies tension to an adjustable guide on the slack side of the crankshaft timing chain. A fixed guide controls crankshaft chain motion on the tension side of the chain.

An hydraulic tensioner and an upper guide control camshaft chain motion. The hydraulic tensioner incorporates a guide which applies tension to the slack side of the camshaft timing chain.

## Timing Chain Housing and Cover

The timing chain housing is die cast aluminum and retains the crankshaft front seal.


## Cylinder Head Cover

The cylinder head cover is die cast aluminum and houses the ignition coils.

## Intake and Exhaust Manifold

The intake manifold is made of aluminum. The exhaust manifold is cast iron.

## Engine Lubrication – 2.0L

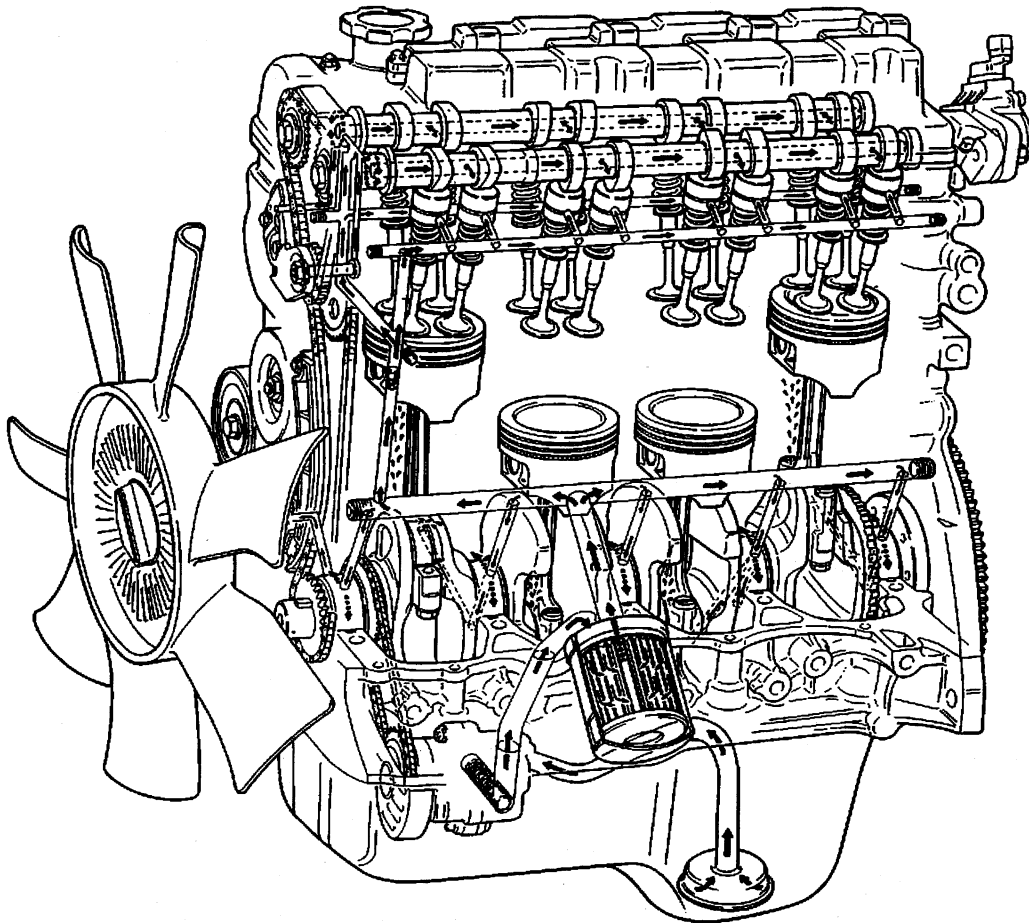

The lubrication system consists of an oil pan, oil pump screen, oil pump, oil filter and oil pressure regulator. This pressure-fed lubrication system supplies oil to the moving parts of the engine.

The oil pump is bolted to the bottom of the lower crankcase. A sprocket on the front of the oil pump is driven by a chain from the sprocket on the front of the crankshaft. The tension on the oil pump drive chain is accomplished by an adjustable guide.

The oil pump picks up oil from the oil pan and feeds it under pressure to the various parts of the engine. An oil strainer is mounted before the inlet to the oil pump to remove impurities which could clog or damage the oil pump or other engine components. The oil pump itself is a trochoid gear type pump with

internal drive and driven gears. When the drive rotates, the driven gear rotates in the same direction, but on a different center point. This causes the space between the gears to constantly open and narrow, pulling oil in from the oil pan when the space opens and pumping the oil out to the engine as it narrows.

The oil filter is a full flow type with a relief valve built into the paper filter element. Contaminants which can get into the oil during operation could cause accelerated engine wear or seizing if allowed into the engine. The oil filter, situated at the beginning of the oil passage circuit, removes these contaminants as the oil passes through it. The relief valve spring will open under the pressure of the oil and allow oil to bypass the filter and flow directly to the engine.

At high engine speeds, the oil pump supplies a much higher amount of oil than required for lubrication of the engine. The oil pressure regulator prevents too much oil from entering the engine lubrication passages. During normal oil supply, a coil spring and valve keeps the bypass closed, directing all oil pumped to the engine. When the amount of oil being pumped increases, the pressure becomes high enough (420 kPa (60 psi) to overcome the force of the spring, opening the valve and allowing excess oil to flow through the valve and drain back to the oil pan.

Oil is pumped from the oil pan by the oil pump. After it passes through the oil filter, it is fed through two paths to lubricate the cylinder block and cylinder head.

In one path, the oil is pumped through oil passages in the crankshaft to the connecting rods, then to the pistons and cylinders. It then drains back to the oil pan.

In the second path, the oil is pumped through the oil control valve, which consists of an orifice and a check ball, and then through passages to the camshaft and the hydraulic valve lash adjusters. The oil passes through internal passageways in the camshafts to lubricate the valve assemblies before draining back to the oil pan.

**Fastener Tightening Specifications – 2.5L**

| Application   | Specification |           |
|---|---------------|-----------|
|   | Metric        | English   |
| Air Conditioner (A/C) Compressor Mounting Bolts         | 23 N·m        | 17 lb ft  |
| Air Conditioner (A/C) Compressor Bracket Mounting Bolts | 55 N·m        | 40 lb ft  |
| Camshaft Bearing Cap Bolts                              | 12 N·m        | 106 lb in |
| Camshaft Position Sensor Bolt                           | 15 N·m        | 11 lb ft  |
| Camshaft Timing Sprocket Bolts                          | 80 N·m        | 58 lb ft  |
| Connecting Rod Bearing Cap Nuts                         | 45 N·m        | 33 lb ft  |
| Crankshaft Position Sensor Bolt                         | 6 N·m         | 53 lb in  |
| Crankshaft Pulley Bolt                                  | 150 N·m       | 109 lb ft |
| Cylinder Head Cover Bolts                               | 10.5 N·m      | 93 lb in  |
| Cylinder Head Bolts                                     |               |           |
| • First Pass  | 53 N·m        | 39 lb ft  |
| • Second Pass   | 84 N·m        | 61 lb ft  |
| • Third Pass  | Loosen to 0   |           |
| • Fourth Pass   | 53 N·m        | 39 lb ft  |
| • Fifth Pass  | 84 N·m        | 61 lb ft  |
| • Sixth Pass - Final Torque                             | 105 N·m       | 76 lb ft  |
| Cylinder Head M 6 Bolt                                  | 11 N·m        | 97 lb in  |
| Drive Belt Tensioner Bolts                              |               |           |
| • Accessory Drive Belt Tensioner Bolts                  | 25 N·m        | 19 lb ft  |
| Engine Cooling Fan Nuts                                 | 25 N·m        | 18 lb ft  |
| Engine Ground Wire Bolts                                | 15 N·m        | 11 lb ft  |
| Engine Mount Nuts                                       | 50 N·m        | 37 lb ft  |
| Engine Oil Drain Plug                                   | 35 N·m        | 26 lb ft  |
| Engine Oil Pan Nuts and Bolts                           | 11 N·m        | 97 lb in  |
| Exhaust Manifold Heat Shield Bolts                      | 10 N·m        | 89 lb in  |
| Exhaust Manifold-to-Cylinder Head Nuts                  | 30 N·m        | 22 lb ft  |
| Exhaust Manifold-to-Bracket Bolts                       | 50 N·m        | 37 lb ft  |
| Fuel Rail Banjo Fitting                                 | 30 N·m        | 22 lb ft  |
| Flywheel Retaining Bolts                                |               |           |
| • Automatic Transmission                                | 70 N·m        | 51 lb ft  |
| Generator Mounting Bolts and Nuts                       | 23 N·m        | 17 lb ft  |
| Generator Terminal Nut                                  | 8 N·m         | 71 lb in  |
| Heated Oxygen HO2S1 and HO2S2 Sensor                    | 45 N·m        | 33 lb ft  |
| Ignition Coil Bolts                                     | 10 N·m        | 89 lb in  |
| Intake Manifold Bolts and Nuts                          | 23 N·m        | 17 lb ft  |
| Lower Crankcase Bolts                                   |               |           |
| • First Pass  | 19 N·m        | 14 lb ft  |
| • Second Pass - Final Torque                            | 27 N·m        | 20 lb ft  |
| Main Bearing Cap Bolts                                  |               |           |
| • First Pass  | 42 N·m        | 31 lb ft  |
| • Second Pass - Final Torque                            | 58 N·m        | 42 lb ft  |
| Negative Battery Cable                                  | 15 N·m        | 11 lb ft  |
| Oil Pressure Switch                                     | 14 N·m        | 11 lb ft  |
| Oil Pump Bolts  | 27 N·m        | 20 lb ft  |
| Oil Pump Case Bolts                                     | 12 N·m        | 106 lb in |
| Oil Pump Strainer Bolts                                 | 11 N·m        | 97 lb in  |
| Power Steering Pump Bolts                               | 25 N·m        | 19 lb ft  |
| Spark Plugs   | 25 N·m        | 18 lb ft  |
| Starter Bolts   | 11 N·m        | 97 lb in  |

# 2002 Chevrolet Tracker Restoration Kit

|   |        |           |
|---|--------|-----------|
| Strut Tower Brace                             | 50 N·m | 37 lb ft  |
| Throttle Body Bolts and Nuts                  | 12 N·m | 106 lb in |
| Timing Chain Cover Nut and Bolts              | 11 N·m | 97 lb in  |
| Timing Chain Tensioner Bolts - Left Camshaft  | 12 N·m | 106 lb in |
| Timing Chain Tensioner Bolts - Right Camshaft | 11 N·m | 97 lb in  |
| Timing Chain Tensioner Nuts - Left Camshaft   | 45 N·m | 33 lb ft  |
| Timing Chain Tensioner Bolts - Primary        | 11 N·m | 97 lb in  |
| Timing Chain Tensioner Guide Bolts - Primary  | 11 N·m | 97 lb in  |
| Timing Chain Tensioner Shoe Nut - Primary     | 27 N·m | 20 lb ft  |
| Torque Converter Bolts                        | 65 N·m | 47 lb ft  |
| Transmission to Engine Mounting Bolts         | 80 N·m | 58 lb ft  |
| Water Pump Bolts                              | 27 N·m | 20 lb ft  |

## Engine Cooling

### Engine Cooling System Approximate Capacities

| Application                                  | Specification                    |   |
|--|----------------------------------|---|
|  | Metric                           | English                                 |
| <b>Cooling System Capacity 2.0 L Engine</b>  |                                  |   |
| • Engine, Radiator and Heater Core           | 5.6 Liters                       | 6.0 Quarts                              |
| • Coolant Recovery Reservoir                 | 0.9 Liters                       | 0.8 Quarts                              |
| • Total                                      | 6.5 Liters                       | 6.8 Quarts                              |
| Coolant Solution Protection Point            | -36°C                            | -33°F                                   |
| Cooling System Pressure Capacity             | 90 kPa                           | 13 psi                                  |
| Generator/Coolant Pump Drive Belt Deflection | 5-8 mm at 10 kg applied pressure | 0.20-0.32 in at 22 lbs applied pressure |
| Radiator Cap Pressure Capacity               | 90 kPa                           | 13 psi                                  |
| Thermostat Valve Lift (Minimum)              | 8 mm at 95°C                     | 0.31 in at 203°F                        |
| Thermostat Valve Opening Temperature         | 80-90°C                          | 176-203°F                               |

### Fastener Tightening Specifications

| Application                                   | Specification |           |
|---|---------------|-----------|
|   | Metric        | English   |
| Air Conditioning (A/C) Flexible Hose Bolts    | 15 N·m        | 11 lb ft  |
| Air Conditioning (A/C) Mounting Bracket Bolts | 23 N·m        | 17 lb ft  |
| Battery Cable-to-Battery Terminal Retainers   | 15 N·m        | 11 lb ft  |
| Cooling Fan Nuts                              | 11 N·m        | 97 lb in  |
| Coolant Intake Pipe Bolt                      | 11 N·m        | 97 lb in  |
| Crankshaft Pulley Bolts                       | 16 N·m        | 12 lb ft  |
| Engine Oil Level Indicator Tube Mounting Bolt | 11 N·m        | 97 lb in  |
| Fan Clutch Nuts                               | 11 N·m        | 97 lb in  |
| Generator Mounting Bracket Bolt               | 23 N·m        | 17 lb ft  |
| Generator Upper Mounting Bolt                 | 27 N·m        | 20 lb ft  |
| Heater Outlet Line Bolt                       | 15 N·m        | 11 lb ft  |
| Outlet Support Pipe Bolt                      | 11 N·m        | 97 lb in  |
| Power Steering Fluid Reservoir Bolts          | 15 N·m        | 11 lb ft  |
| Radiator Bolts                                | 10 N·m        | 89 lb in  |
| Shroud Bolts                                  | 11 N·m        | 97 lb in  |
| Thermostat Cap Bolts                          | 16 N·m        | 12 lb ft  |
| Water Pump Pulley Bolts                       | 23 N·m        | 17 lb ft  |
| Water Pump Nuts and Bolts                     | 13 N·m        | 115 lb in |

### Cooling System Description and Operation

#### Coolant Heater – 2.0L Only

The engine coolant heater is used to preheat the engine coolant for cold weather starting. The engine coolant heater operates from a 110-volt AC power source and uses a heating element installed in the engine block coolant jacket. The heating element warms the coolant when the heater cord is plugged into an AC power source.

The unit has a detachable electrical cord. If the heater fails to operate, inspect the cord connections and power supply before replacing the heating element.

#### Cooling System

The cooling system's function is to maintain an efficient engine operating temperature during all engine speeds and operating conditions. The cooling system is designed to remove approximately one-third of



the heat produced by the burning of the air-fuel mixture. When the engine is cold, the coolant does not flow to the radiator until the thermostat opens. This allows the engine to warm quickly.

### **Cooling Cycle**

Coolant flows from the radiator outlet and into the water pump inlet. Some coolant flows from the water pump, to the heater core, then back to the water pump. This provides the passenger compartment with heat and defrost capability as the coolant warms up.

Coolant also flows from the water pump outlet and into the engine block. In the engine block, the coolant circulates through the water jackets surrounding the cylinders where it absorbs heat.

The coolant then flows through the cylinder head gasket openings and into the cylinder heads. In the cylinder heads, the coolant flows through the water jackets surrounding the combustion chambers and valve seats, where it absorbs additional heat.

From the cylinder heads, the coolant flows to the thermostat. The flow of coolant will either be stopped at the thermostat until the engine reaches normal operating temperature, or it will flow through the thermostat and into the radiator where it is cooled. At this point, the coolant flow cycle is completed.

Efficient operation of the cooling system requires proper functioning of all cooling system components. The cooling system consists of the following components:

### **Coolant**

The engine coolant is a solution made up of a 50-50 mixture of DEX-COOL and suitable drinking water. The coolant solution carries excess heat away from the engine to the radiator, where the heat is dissipated to the atmosphere.

### **Radiator**

The radiator is a heat exchanger. It consists of a core and two tanks. The aluminum core is a tube and fin crossflow design that extends from the inlet tank to the outlet tank. Fins are placed around the outside of the tubes to improve heat transfer to the atmosphere.

The inlet and outlet tanks are a molded, high temperature, nylon reinforced plastic material. A high temperature rubber gasket seals the tank flange edge to the aluminum core. The tanks are clamped to the core with clinch tabs. The tabs are part of the aluminum header at each end of the core.

The radiator also has a drain cock located in the bottom of the left hand tank. The drain cock unit includes the drain cock and drain cock seal.

The radiator removes heat from the coolant passing through it. The fins on the core transfer heat from the coolant passing through the tubes. As air passes between the fins, it absorbs heat and cools the coolant.

### **Pressure Cap**

The pressure cap seals the cooling system. It contains a blow off or pressure valve and a vacuum or atmospheric valve. The pressure valve is held against its seat by a spring, which protects the radiator from excessive cooling system pressure. The vacuum valve is held against its seat by a spring, which permits opening of the valve to relieve vacuum created in the cooling system as it cools off. The vacuum, if not relieved, might cause the radiator and/or coolant hoses to collapse.

The pressure cap allows cooling system pressure to build up as the temperature increases. As the pressure builds, the boiling point of the coolant increases. Engine coolant can be safely run at a temperature much higher than the boiling point of the coolant at atmospheric pressure. The hotter the coolant is, the faster the heat transfers from the radiator to the cooler, passing air.

The pressure in the cooling system can get too high. When the cooling system pressure exceeds the rating of the pressure cap, it raises the pressure valve, venting the excess pressure.

As the engine cools down, the temperature of the coolant drops and a vacuum is created in the cooling system. This vacuum causes the vacuum valve to open, allowing outside air into the surge tank. This

equalizes the pressure in the cooling system with atmospheric pressure, preventing the radiator and coolant hoses from collapsing.

### **Coolant Recovery System**

The coolant recovery system consists of a plastic coolant recovery reservoir and overflow tube. The recovery reservoir is also called a recovery tank or expansion tank. It is partially filled with coolant and is connected to the radiator fill neck with the overflow tube. Coolant can flow back and forth between the radiator and the reservoir.

In effect, a cooling system with a coolant recovery reservoir is a closed system. When the pressure in the cooling system gets too high, it will open the pressure valve in the pressure cap. This allows the coolant, which has expanded due to being heated, is allowed to flow through the overflow tube and into the recovery reservoir. As the engine cools down, the temperature of the coolant drops and a vacuum is created in the cooling system. This vacuum opens the vacuum valve in the pressure cap, allowing some of the coolant in the reservoir to be siphoned back into the radiator. Under normal operating conditions, no coolant is lost. Although the coolant level in the recovery reservoir goes up and down, the radiator and cooling system are kept full. An advantage to using a coolant recovery reservoir is that it eliminates almost all air bubbles from the cooling system. Coolant without bubbles absorbs heat much better than coolant with bubbles.

### **Air Baffles and Seals**

The cooling system uses deflectors, air baffles and air seals to increase cooling system capability. Deflectors are installed under the vehicle to redirect airflow beneath the vehicle and through the radiator to increase engine cooling. Air baffles are also used to direct airflow through the radiator and increase cooling capability. Air seals prevent air from bypassing the radiator and A/C condenser, and prevent recirculation of hot air for better hot weather cooling and A/C condenser performance.

### **Water Pump**

The water pump is a centrifugal vane impeller type pump. The pump consists of a housing with coolant inlet and outlet passages and an impeller. The impeller is mounted on the pump shaft and consists of a series of flat or curved blades or vanes on a flat plate. When the impeller rotates, the coolant between the vanes is thrown outward by centrifugal force.

The impeller shaft is supported by one or more sealed bearings. The sealed bearings never need to be lubricated. Grease cannot leak out, dirt and water cannot get in as long as the seal is not damaged or worn.

The purpose of the water pump is to circulate coolant throughout the cooling system. The water pump is driven by the crankshaft via the drive belt.

### **Thermostat**

The thermostat is a coolant flow control component. It's purpose is to help regulate the operating temperature of the engine. It utilizes a temperature sensitive wax-pellet element. The element connects to a valve through a small piston. When the element is heated, it expands and exerts pressure against the small piston. This pressure forces the valve to open. As the element is cooled, it contracts. This contraction allows a spring to push the valve closed.

When the coolant temperature is below the rated thermostat opening temperature, the thermostat valve remains closed. This prevents circulation of the coolant to the radiator and allows the engine to warm up. After the coolant temperature reaches the rated thermostat opening temperature, the thermostat valve will open. The coolant is then allowed to circulate through the thermostat to the radiator where the engine heat is dissipated to the atmosphere. The thermostat also provides a restriction in the cooling system, after it has opened. This restriction creates a pressure difference which prevents cavitation at the water pump and forces coolant to circulate through the engine block.

## Engine Electrical

### Fastener Tightening Specifications

| Application                                     | Specification |          |
|---|---------------|----------|
|   | Metric        | English  |
| Battery Cable-to-Battery Terminal Retainers     | 15 N·m        | 11 lb ft |
| Battery Hold Down Bracket Nuts                  | 8 N·m         | 71 lb in |
| Body Ground Bolt                                | 8 N·m         | 71 lb in |
| Camshaft Position (CMP) Sensor Retaining Screws | 15 N·m        | 11 lb ft |
| Commutator End Cover Bolts                      | 8 N·m         | 71 lb in |
| Field Coil Lead Wire Retaining Nut              | 10 N·m        | 89 lb in |
| Generator B Terminal Nut                        | 10 N·m        | 89 lb in |
| Generator Housing Bolts                         | 17 N·m        | 10 lb ft |
| Generator Mounting Bolts                        | 23 N·m        | 17 lb ft |
| Generator Pulley Nut                            | 118 N·m       | 86 lb ft |
| Ignition Coil Bolts                             | 10 N·m        | 89 lb in |
| Solenoid Mounting Screws                        | 7 N·m         | 62 lb in |
| Spark Plugs                                     | 25 N·m        | 19 lb ft |
| Starter Motor Mounting Bolts                    | 30 N·m        | 22 lb ft |
| Starter Solenoid Nut                            | 8 N·m         | 71 lb in |

### Battery Usage

| Application                | Specification |        |         |
|----------------------------|---------------|--------|---------|
|                            | 60 Amp        | 70 Amp | 85 Amp  |
| • Amphere Hour Capacity    | 36            | 48     | 54      |
| • Catalog Number           | 974           | 2841   | 3274    |
| • Cold Cranking Amperes    | 390           | 600    | 700     |
| • Replacement Model        | 26R-50S       | 85-7YR | 24R-7YR |
| • Reserve Capacity Minutes | 71            | --     | --      |
| • Test Load Amperes        | 190           | 295    | 350     |

### Generator Usage

| Application  | Specification                       |              |
|--|-------------------------------------|--------------|
|  | Metric                              | English      |
| Brush Length--Standard                               | 16 mm                               | 0.63 in      |
| Brush Length--Minimum                                | 2 mm                                | 0.08 in      |
| Condenser Capacity                                   | 0.5 microfarads                     |              |
| Direction of Rotation                                | Clockwise (Viewed From Pulley Side) |              |
| Maximum Generator Output                             | 60, 70 and 85 amps                  |              |
| Maximum Generator Speed                              | 18,000 RPM                          |              |
| Normal Operating Voltage                             | 12 volts                            |              |
| Polarity Negative (-) Ground No-Load Generator Speed | 1,300 RPM                           |              |
| Regular Voltage                                      | 14.4-15.0 volts                     |              |
| Rotor Slip Ring Resistance                           | 2.5-2.9 ohms                        |              |
| Temperature Range                                    | -30 to 90°C                         | -22 to 194°F |

**Starter Motor Usage**


| Application   | Specification                           |                |
|---|---|----------------|
|   | Metric                                  | English        |
| Brush Length--Standard 1.2kW  | 12.3 mm                                 | 0.44 in        |
| Brush Length--Minimum 1.2kW   | 7 mm                                    | 0.28 in        |
| Brush Length--Standard 1.4kW  | 16.5 mm                                 | 0.65 in        |
| Brush Length--Minimum 1.4kW   | 12.0 mm                                 | 0.47 in        |
| Commutator Run-Out--Standard  | 0.05 mm                                 | 0.002 in       |
| Commutator Run-Out--Maximum   | 0.40 mm                                 | 0.015 in       |
| Commutator Outside Diameter--Standard   | 29.4 mm                                 | 1.16 in        |
| Commutator Outside Diameter--Minimum  | 28.8 mm                                 | 1.13 in        |
| Commutator Insulation Depth--Standard   | 0.4-0.6 mm                              | 0.015-0.023 in |
| Commutator Insulation Depth--Minimum  | 0.2 mm                                  | 0.008 in       |
| Direction of Rotation   | Clockwise as viewed from pinion         |                |
| Number of Pinion Teeth  | 8                                       |                |
| Output  | 1.2 and 1.4 kwatts                      |                |
| Rating  | 30 seconds                              |                |
| Solenoid Operating Voltage  | 8 volts maximum                         |                |
| Starter Motor Current Draw--No--Load-1.2 kW                                     | 90 Amps maximum at 11 Volts at 2500 RPM |                |
| Starter Motor Current Draw--No--Load--1.4 kW                                    | 90 amps max. at 11 volts at 3000 RPM    |                |
| Starter Motor Current Draw--Load -1.2 kW (11 N·m / 97 lb in of torque 880 RPM)  | 300 amps at 7.5 volts                   |                |
| Starter Motor Current Draw--Load -1.4 kW (10 N·m / 89 lb in of torque 1000 RPM) | 300 amps at 7.7 volts                   |                |
| Starter Motor Current Draw--Locked Rotor -1.2 kW (20 N·m / 14 lb ft of torque)  | 760 amps max. at 4 volts                |                |
| Starter Motor Current Draw--Locked Rotor -1.4 kW (23 N·m / 17 lb ft of torque)  | 980 amps max. at 4 volts                |                |
| Voltage   | 12 volts                                |                |

## Battery Description and Operation

### Caution

Batteries produce explosive gases, contain corrosive acid, and supply levels of electrical current high enough to cause burns. Therefore, to reduce the risk of personal injury when working near a battery:

- Always shield your eyes and avoid leaning over the battery whenever possible.
- Do not expose the battery to open flames or sparks.
- Do not allow the battery electrolyte to contact the eyes or the skin. Flush immediately and thoroughly any contacted areas with water and get medical help.
- Follow each step of the jump starting procedure in order.
- Treat both the booster and the discharged batteries carefully when using the jumper cables.

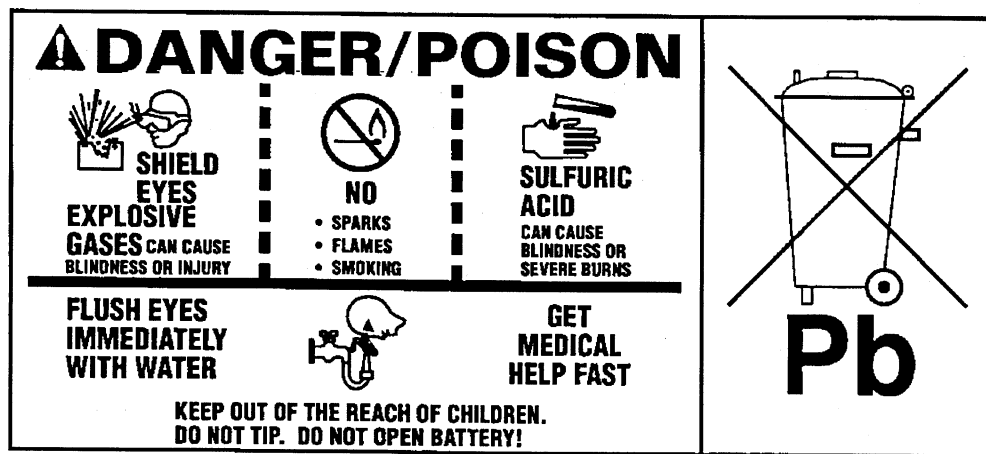

The maintenance free battery is standard. There are no vent plugs in the cover. The battery is completely sealed except for two small vent holes in the side. These vent holes allow the small amount of gas that is produced in the battery to escape.

The battery has three functions as a major source of energy:

- Engine cranking
- Voltage stabilizer
- Alternate source of energy with generator overload.

The battery specification label (example below) contains information about the following:

- The test ratings
- The original equipment catalog number
- The recommended replacement model number

|                                |                  |
|--------------------------------|------------------|
| CATALOG NO.                    |                  |
| 1819                           |                  |
| CCA<br>770                     | LOAD TEST<br>380 |
| REPLACEMENT MODEL<br>100 – 6YR |                  |

A battery has 2 ratings:

- Reserve capacity
- Cold cranking amperage

When a battery is replaced use a battery with similar ratings. Refer to the battery specification label on the original battery or refer to Battery Usage .

### **Reserve Capacity**

Reserve capacity is the amount of time in minutes it takes a fully charged battery, being discharged at a constant rate of 25 amperes and a constant temperature of 27°C (80°F) to reach a terminal voltage of 10.5 V. Refer to Battery Usage for the reserve capacity rating of the original equipment battery.

### **Cold Cranking Amperage**

The cold cranking amperage is an indication of the ability of the battery to crank the engine at cold temperatures. The cold cranking amperage rating is the minimum amperage the battery must maintain for 30 seconds at -18°C (0°F) while maintaining at least 7.2 volts. Refer to Battery Usage for the cold cranking amperage rating for this vehicle.

### **Circuit Description**

The battery positive terminal supplies Battery Positive voltage to the under hood fuse block and the rear fuse block. The under hood fuse block provides a cable connection for the generator and a cable connection for the starter.

The battery negative terminal is connected to chassis ground G305 and supplies ground for the AD converter in the DIM.

### **Starting System Description and Operation**

The cranking circuit consists of the battery , the starter motor , the ignition switch and related parts. All of these components are connected electrically.

The starter solenoid windings are energized when the ignition switch is turned to the start position and the clutch pedal position (CPP) switch (manual transmission) or the transmission range switch (automatic transmission) is closed. (In manual transmission equipped vehicles, the clutch pedal must be fully depressed to activate the clutch pedal position switch.) The resulting plunger and shift lever movement causes the drive pinion to engage the engine flywheel ring gear and the starter solenoid contacts to close.

With the contacts closed, the starter solenoid provides a closed circuit between the positive (+) battery terminal and the starter motor. The circuit is complete and cranking occurs as soon as the starter solenoid contacts are closed (the starter motor is permanently grounded to the engine block). When the engine starts, the clutch and drive assembly is designed to overrun and protect the armature from excessive speed until the ignition switch is released from the start position. After the ignition switch is released from the start position, a return spring in the solenoid assembly forces the starter solenoid contacts open, breaking the circuit between the battery and the starter motor, and disengaging the clutch and drive assembly. The ignition switch should be released immediately upon engine start-up to prevent prolonged overrun.

### **Charging System Description and Operation**

All models utilize an internal regulator charging system. The integrated circuit (IC) regulator is a solid state unit that is mounted inside the generator to the rear end frame. All regulator components are enclosed in a solid mold to protect them from heat and corrosive elements.

The generator rotor bearings contain enough grease to eliminate the need for periodic lubrication. Two brushes carry current through two slip rings to the field coil mounted on the rotor. Stator windings are assembled inside a laminated core that form part of the generator drive end frame. A rectifier bridge that contains 6 diodes is connected to the stator windings. These diodes electrically change stator AC voltage into DC voltage. This DC voltage is then transmitted to the generator output terminal. Two neutral diodes are utilized to smooth out voltage fluctuations caused by varying generator speeds. A capacitor (condenser), mounted in the regulator, protects the rectifier bridge and neutral diodes. This capacitor also suppresses radio interference noise.

## Engine Controls

### Engine Controls – 2.0L

#### Fastener Tightening Specifications

| Application  | Specification |          |
|--|---------------|----------|
|  | Metric        | English  |
| Accelerator Control Cable Adjusting Locknut                  | 23 N·m        | 17 lb ft |
| Air Cleaner Assembly Bolts                                   | 10 N·m        | 89 lb in |
| Camshaft Position (CMP) Sensor Bolt                          | 9 N·m         | 78 lb in |
| Camshaft Position (CMP) Sensor Housing Bolts                 | 15 N·m        | 11 lb ft |
| Crankshaft Position (CKP) Sensor Bolt                        | 6 N·m         | 54 lb in |
| ECT Sensor   | 15 N·m        | 11 lb ft |
| EGR Valve Bolts  | 25 N·m        | 19 lb ft |
| EGR Valve Pipe Bolts   | 15 N·m        | 11 lb ft |
| EGR Valve Pipe Midway Bolt                                   | 10 N·m        | 89 lb in |
| EVAP Canister Air Filter Bolt                                | 10 N·m        | 89 lb in |
| EVAP Canister Bracket Bolts                                  | 10 N·m        | 89 lb in |
| EVAP Canister Purge Valve Bracket Bolt                       | 11 N·m        | 97 lb in |
| EVAP Canister Vent Valve Bracket Nut                         | 10 N·m        | 89 lb in |
| Fuel Cut-Off Valve Screws                                    | 1.6 N·m       | 14 lb in |
| Fuel Pipe to Filler Door Bolts                               | 3.5 N·m       | 30 lb in |
| Fuel Filter Bracket Bolt                                     | 11 N·m        | 97 lb in |
| Fuel Filter Bracket-to-Fuel Filter Bolt                      | 11 N·m        | 97 lb in |
| Fuel Pipe Guard Nuts   | 15 N·m        | 11 lb ft |
| Fuel Pipe Hold Down Bolts                                    | 25 N·m        | 19 lb ft |
| Fuel Pressure Regulator Bolts                                | 10 N·m        | 89 lb in |
| Fuel Rail Bracket to Intake Manifold BoltsBolts              | 25 N·m        | 19 lb ft |
| Fuel Rail Plug Bolt  | 30 N·m        | 22 lb ft |
| Fuel Rail Retaining Bolts                                    | 30 N·m        | 22 lb ft |
| Fuel Sender (fuel pump) Assembly Bolts                       | 5 N·m         | 45 lb in |
| Fuel Tank Pressure Sensor Bolts                              | 1.6 N·m       | 14 lb in |
| Fuel Tank Shield (Protector) Bolts                           | 50 N·m        | 36 lb ft |
| Fuel Tank Straps Bolts                                       | 50 N·m        | 36 lb ft |
| HO2S 1   | 45 N·m        | 32 lb ft |
| HO2S 2   | 45 N·m        | 32 lb ft |
| IAC Valve Screws   | 3.5 N·m       | 30 lb in |
| Ignition Coil Bolts  | 10 N·m        | 89 lb in |
| Knock Sensor Bolt  | 23 N·m        | 17 lb ft |
| Mass Air Flow (MAF) Sensor Bolts                             | 10 N·m        | 89 lb in |
| MAP Sensor Screws  | 3.5 N·m       | 30 lb in |
| Negative Battery Cable-to-Negative Battery Terminal Retainer | 8 N·m         | 72 lb in |
| PCM Bracket Bolts  | 10 N·m        | 89 lb in |
| PSP Switch   | 27 N·m        | 20 lb ft |
| Spark Plugs  | 25 N·m        | 18 lb ft |
| Throttle Body Bolts and Nuts                                 | 25 N·m        | 18 lb ft |
| TP Sensor Bolts  | 3.5 N·m       | 30 lb in |
| Vehicle Speed Sensor (A/T) Bolt                              | 6 N·m         | 54 lb in |



### Ignition System Specifications

| Application       | Specification  |                |
|-------------------|----------------|----------------|
|                   | Metric         | English        |
| Firing Order      | 1-3-4-2        |                |
| Ignition Timing   | 5°±1° BTDC     |                |
| Spark Plug Torque | 25 N·m         | 18 lb ft       |
| Spark Plug Gap    | 1.0-1.1 mm     | 0.039-0.043 in |
| Spark Plug Type   | SK16PR11 DENSO |                |

**Engine Controls – 2.5L****Fastener Tightening Specifications**

| Application  | Specification |           |
|--|---------------|-----------|
|  | Metric        | English   |
| Accelerator Control Cable Adjusting Locknut                  | 23 N·m        | 17 lb ft  |
| Air Cleaner Assembly Bolts                                   | 10 N·m        | 89 lb in  |
| Camshaft Position (CMP) Sensor Housing Bolts                 | 15 N·m        | 11 lb ft  |
| Camshaft Position (CMP) Sensor Bolt                          | 15 N·m        | 11 lb ft  |
| Crankshaft Position (CKP) Sensor Bolt                        | 10 N·m        | 89 lb in  |
| Engine Coolant Temperature (ECT) Sensor                      | 15 N·m        | 11 lb ft  |
| Exhaust Gas Recirculation (EGR) Valve Pipe Bolts             | 15 N·m        | 11 lb ft  |
| EGR Valve Pipe Midway Bolt                                   | 10 N·m        | 89 lb in  |
| EGR Valve Bolts  | 25 N·m        | 18 lb ft  |
| Evaporative Emission (EVAP) Canister Air Filter Fastener     | 10 N·m        | 89 lb in  |
| EVAP Canister Purge Valve Bracket Bolt                       | 10 N·m        | 89 lb in  |
| EVAP Canister Vent Solenoid Bracket Bolt                     | 11 N·m        | 8 lb ft   |
| EVAP Canister Vent Valve Fastener                            | 10 N·m        | 89 lb in  |
| EVAP Tank Pressure Control Solenoid Valve Bracket Bolt       | 25 N·m        | 18 lb ft  |
| Fuel Cut-Off Valve Fasteners                                 | 1.6 N·m       | 14 lb in  |
| Fuel Filter Bracket Bolt                                     | 11 N·m        | 8 lb ft   |
| Fuel Filter Bracket-to-Fuel Filter Bolt                      | 11 N·m        | 8 lb ft   |
| Fuel Level Vent Valve (FLVV)                                 | 1.6 N·m       | 14 lb in  |
| Fuel Pipe Guard Nuts   | 15 N·m        | 11 lb ft  |
| Fuel Pressure Regulator Bolts                                | 10 N·m        | 89 lb in  |
| Fuel Rail Bolts  | 23 N·m        | 17 lb ft  |
| Fuel Rail Crossover Pipe Bolts                               | 30 N·m        | 22 lb ft  |
| Fuel Sender (fuel pump) Assembly Bolts                       | 5 N·m         | 45 lb in  |
| Fuel Supply Pipe and Fuel Return Pipe to Engine Bolt         | 10 N·m        | 89 lb in  |
| Fuel Supply Pipe Union Bolt                                  | 30 N·m        | 22 lb ft  |
| Fuel Tank Filler Pipe Bolts                                  | 3.5 N·m       | 30 lb in  |
| Fuel Tank Pressure(FTP) Sensor Bolts                         | 1.6 N·m       | 14 lb in  |
| Fuel Tank Shield (Protector) Bolts                           | 50 N·m        | 36 lb ft  |
| Fuel Tank Straps Bolts                                       | 50 N·m        | 36 lb ft  |
| Fuel Tank Vent Valve Fasteners                               | 3.5 N·m       | 30 lb in  |
| Heated Oxygen Sensor (HO2S) 1                                | 45 N·m        | 32 lb ft  |
| HO2S 2   | 45 N·m        | 32 lb ft  |
| Idle Air Control (IAC) Valve Fasteners                       | 3.5 N·m       | 30 lb in  |
| Ignition Coil Bolt   | 10 N·m        | 89 lb in  |
| Ignition Coil Cover Fastener                                 | 3 N·m         | 26 lb in  |
| Intake Collector-to-Intake Manifold Bolts and Nuts           | 23 N·m        | 16 lb ft  |
| Intake Surge Tank Nuts                                       | 23 N·m        | 16 lb ft  |
| Manifold Absolute Pressure (MAP) Sensor Fasteners            | 3 N·m         | 26 lb in  |
| Negative Battery Cable-to-Negative Battery Terminal Retainer | 8 N·m         | 72 lb in  |
| PCM Bracket Bolts  | 10 N·m        | 89 lb in  |
| Pressure Control Valve-to-Fuel Tank Fasteners                | 3.5 N·m       | 30 lb in  |
| Spark Plugs  | 25 N·m        | 18 lb ft  |
| Throttle Body Bolts and Nuts                                 | 12 N·m        | 8.5 lb ft |
| Throttle Position (TP) Sensor Bolts                          | 2.5 N·m       | 22 lb in  |
| Vehicle Speed Sensor (A/T) Bolt                              | 6 N·m         | 54 lb in  |

### Ignition System Specifications

| Application       | Specification  |                |
|-------------------|----------------|----------------|
|                   | Metric         | English        |
| Firing Order      | 1-6-5-4-3-2    |                |
| Ignition Timing   | 5°±1° BTDC     |                |
| Spark Plug Torque | 25 N·m         | 18 lb ft       |
| Spark Plug Gap    | 1.0-1.1 mm     | 0.039-0.043 in |
| Spark Plug Type   | SK16PR11 DENSO |                |

### Fuel System Specifications – All

Use regular unleaded gasoline rated at 87 octane or higher. It is recommended that the gasoline meet specifications which have been developed by the American Automobile Manufacturers Association (AAMA) and endorsed by the Canadian Motor Vehicle Manufacturers Association for better vehicle performance and engine protection. Gasoline meeting the AAMA specification could provide improved driveability and emission control system performance compared to other gasolines. For more information, write to: American Automobile Manufacturer's Association, 7430 Second Ave, Suite 300, Detroit MI 48202.

Be sure the posted octane is at least 87. If the octane is less than 87, you may get a heavy knocking noise when you drive. If the knocking is bad enough, the knocking can damage your engine.

If you are using fuel rated at 87 octane or higher and you hear heavy knocking, your engine needs service. But do not worry if you hear a little pinging noise when you are accelerating or driving up a hill. That is normal, and you do not have to buy a higher octane fuel to get rid of the pinging. However, if there is a heavy, constant knock, that means you have a problem.

#### Notice

Your vehicle was not designed for fuel that contains methanol. Do not use methanol fuel which can corrode metal parts in your fuel system and also damage plastic and rubber parts. This kind of damage would not be covered under your warranty.

If your vehicle is certified to meet California Emission Standards, indicated on the under hood emission control label, your vehicle is designed to operate on fuels that meet California specifications. If such fuels are not available in states adopting California emissions standards, your vehicle will operate satisfactorily on fuels meeting federal specifications, but emission control system performance may be affected. The malfunction indicator lamp on your instrument panel may turn ON and/or your vehicle may fail a smog-check test. If this occurs, return to your authorized dealer for diagnosis to determine the cause of failure. In the event there is a determination that the cause of the condition is the type of fuels used, repairs may not be covered by your warranty.

Some gasolines that are not reformulated for low emissions may contain an octane-enhancing additive called methylcyclopentadienyl manganese tricarbonyl (MMT). Ask your service station operator whether or not the fuel contains MMT.

## Exhaust System

### Fastener Tightening Specifications

| Application  | Specification |          |
|--|---------------|----------|
|  | Metric        | English  |
| Catalytic Converter Assembly-to-Resonator/Muffler/Tail Pipe Nuts       | 35 N·m        | 26 lb ft |
| Front Pipe-to-Catalytic Converter Assembly Bolts                       | 50 N·m        | 37 lb ft |
| Front Pipe-to-Exhaust Manifold Bolts                                   | 50 N·m        | 37 lb ft |
| Hanger Bolts   | 15 N·m        | 11 lb ft |
| PUP Catalytic Converter-to-Exhaust Manifold Nuts                       | 50 N·m        | 37 lb ft |
| PUP Catalytic Converter-to-Standard Catalytic Converter Assembly Bolts | 50 N·m        | 37 lb ft |

### Exhaust System Description

Periodic maintenance of the exhaust system is not required; however, if the vehicle is raised for other service, check the general condition of the following components:

- The Three-Way Catalytic Converter (TWC)
- The pipes
- The muffler

Check the complete exhaust system and nearby body areas for the following, which could permit exhaust fumes to seep into the passenger compartment:

- Broken parts
- Damaged parts
- Missing parts
- Mispositioned parts
- Open seams
- Holes
- Loose connections
- Other deterioration Dust or water in the rear compartment may indicate a problem in one of these areas. Any faulty areas should be corrected immediately.

The exhaust system consists (from front to rear) of the following components:

- The exhaust manifold
- The Warm-Up Three-Way Catalytic Converter (WU-TWC), if equipped
- The exhaust manifold heat shield
- The front pipe/TWC assembly
- The resonator/muffler/tail pipe assembly

Various flexible rubber hangers suspend the system along the underside of the vehicle.

## Transmission/Transaxle Description and Operation

### Manual Transmission Specifications

| Application     | Specification                      |         |
|-----------------|------------------------------------|---------|
|                 | Metric                             | English |
| 2-Wheel Drive   | 1.9 l                              | 2.0 qt  |
| 4-Wheel Drive   | 1.5 l                              | 1.6 qt  |
| Oil Recommended | 75W-90 GL4 Lubricant or equivalent |         |

### Fastener Tightening Specifications

| Application   | Specification |           |
|---|---------------|-----------|
|   | Metric        | English   |
| Backup Lamp Switch  | 23 N·m        | 17 lb ft  |
| Clutch Release Lever Bolt and Nut                           | 24 N·m        | 17 lb ft  |
| Extension Case Bolts  | 28 N·m        | 20 lb ft  |
| Fan Shroud Bolt   | 10 N·m        | 89 lb in  |
| Flywheel Inspection Cover Bolt                              | 10 N·m        | 89 lb in  |
| Front Skid Plate Bolt                                       | 54 N·m        | 40 lb ft  |
| Gearshift Control Lever Lower Boot Plate Bolt               | 7 N·m         | 62 lb in  |
| Gearshift Lever Case Bolt                                   | 17 N·m        | 12 lb ft  |
| Left Transmission-to-Engine Reinforcement Brace Bolt        | 100 N·m       | 72 lb ft  |
| Lever Locating Bolt   | 20 N·m        | 15 lb ft  |
| Lower Transmission-to-Engine Nut                            | 100 N·m       | 72 lb ft  |
| Rear Case Bolt (Four-Wheel Drive Models)                    | 28 N·m        | 20 lb ft  |
| Rear Propeller Shaft Bolt and Nut (Two-Wheel Drive Models)  | 50 N·m        | 37 lb ft  |
| Rear Transmission Crossmember Bolt (Two-Wheel Drive Models) | 60 N·m        | 44 lb ft  |
| Rear Transmission Mount Bolt (Two-Wheel Drive Models)       | 60 N·m        | 44 lb ft  |
| Reverse Gearshift Limit Bolt                                | 35 N·m        | 26 lb ft  |
| Right Transmission-to-Engine Reinforcement Brace Bolt       | 100 N·m       | 72 lb ft  |
| Select Return Spring Bolt                                   | 32 N·m        | 24 lb ft  |
| Speedometer Driven Gear Case Bolt                           | 12 N·m        | 106 lb in |
| Starter Motor Bolts and Nut                                 | 30 N·m        | 22 lb ft  |
| Transmission Drain Plug                                     | 28 N·m        | 20 lb ft  |
| Transmission Oil Lever/Filler Plug                          | 28 N·m        | 20 lb ft  |
| Upper Transmission-to-Engine Bolt                           | 100 N·m       | 72 lb ft  |

## Automatic Transmission - 4 Speed-M41

### Fastener Tightening Specifications

| Application  | Specification |           |
|--|---------------|-----------|
|  | Metric        | English   |
| Brake Applying Cover Bolts                                     | 10 N·m        | 89 lb in  |
| Cooler Pipe Clamp Bolt   | 23 N·m        | 17 lb ft  |
| Cooler Pipe Flare Nuts   | 25 N·m        | 18 lb ft  |
| Fluid Filler Tube Bracket Bolt                                 | 23 N·m        | 17 lb ft  |
| Fluid Filter Screen Bolts                                      | 5 N·m         | 44 lb in  |
| Flywheel Inspection Cover Bolts                                | 10 N·m        | 89 lb in  |
| Flywheel-to-Torque Converter Bolts                             | 65 N·m        | 48 lb ft  |
| Front Propeller Shaft Bolts and Nuts (Four-Wheel Drive Models) | 50 N·m        | 37 lb ft  |
| Front Skid Plate Bolts   | 54 N·m        | 40 lb ft  |
| Left and Right Case Stiffener Bolts                            | 60 N·m        | 44 lb ft  |
| Lower Transmission Retaining Nuts                              | 85 N·m        | 62 lb ft  |
| Manual Selector Bolts  | 18 N·m        | 13 lb ft  |
| Manual Shaft Lever Nut   | 13 N·m        | 115 lb in |
| Rear Propeller Shaft Bolts and Nuts                            | 50 N·m        | 37 lb ft  |
| Shift Select Cable Locknut                                     | 7 N·m         | 62 lb in  |
| Shift Solenoid Assembly Bolts                                  | 10 N·m        | 89 lb ft  |
| TCC Control Valve Plate Bolts                                  | 5 N·m         | 44 lb in  |
| Torque Stopper Bushing Bolts (Four-Wheel Drive Models)         | 50 N·m        | 37 lb ft  |
| Transfer Adapter Case Bolts                                    | 31 N·m        | 23 lb ft  |
| Transmission Fluid Drain Plug                                  | 17 N·m        | 13 lb ft  |
| Transmission Fluid Pan Bolts                                   | 5 N·m         | 44 lb in  |
| Transmission Range Switch Bolt                                 | 5 N·m         | 44 lb in  |
| Transmission Range Switch Set Nut                              | 5 N·m         | 44 lb in  |
| Upper Transmission Retaining Bolts                             | 85 N·m        | 62 lb ft  |

### Transmission General Information

This automatic is a full automatic type with three speeds plus overdrive. The torque converter is a three element, one step and two phase type and is equipped with an electronically controlled lock up mechanism. The internal drive components consist of 3 sets of planetary gear units. 3 disc type clutches, 4 disc type brakes and 3 one-way clutches.

### Automatic Transmission Shift Lock Control Description

The automatic transmission shift lock control system prevents the driver from shifting out of Park without depressing the brake pedal. The shift lock control solenoid is provided battery voltage when the ignition is in the ON position and the vehicle is in Park. The shift lock control solenoid is mounted near the floor shifter in the front floor console, and mechanically locks the shifter from moving. When pressure is applied to the brake pedal, the shift lock control solenoid is energized and releases the locking tab on the floor shifter.

## Clutch

### Fastener Tightening Specifications

| Application                                | Specification |            |
|--|---------------|------------|
|  | Metric        | English    |
| Clutch Actuator Cylinder Bolts             | 16 N·m        | 11.5 lb ft |
| Clutch Actuator Cylinder Line Bolts        | 23 N·m        | 17 lb ft   |
| Clutch Fluid Pipe Flare Nuts               | 13 N·m        | 10 lb ft   |
| Clutch Master Cylinder Bolt and Nut        | 13 N·m        | 115 lb in  |
| Clutch Pedal Bracket Bolts and Nuts        | 33 N·m        | 24 lb ft   |
| Clutch Pedal Position (CPP) Switch Locknut | 13 N·m        | 115 lb in  |
| Clutch Pedal Shaft Arm Bolt and Nut        | 24 N·m        | 17 lb ft   |
| Pressure Plate Cover Bolt                  | 23 N·m        | 17 lb ft   |

### Clutch Operating Members

The operating members control clutch engagement/disengagement and are known as the clutch release system. The clutch release system consists of:

- The clutch release bearing
- The clutch release fork
- The clutch pedal shaft arm
- The clutch pedal

### Hydraulic Clutch Description

The clutch is a diaphragm-spring clutch of a dry single disc type. The diaphragm spring is of a tapering-finger type, which is a solid ring in the outer diameter part, with a series of tapered fingers pointing inward. The disc, carrying torsional coil springs, is positioned on the transmission input shaft with an involute spline fit.

The clutch cover is secured to the flywheel, and carries the diaphragm spring in such a way that the peripheral edge part of the spring pushes on the pressure plate against the flywheel with the disc in between, when the clutch release bearing is held back. This is the engaged condition of the clutch.

With the clutch pedal depressed, the clutch master cylinder becomes pressurized from the force of the push rod into the master cylinder. This forces hydraulic fluid into the hydraulic line to the actuator cylinder. The actuator cylinder then pushes the release fork to engage the release bearing to advance and push on the tips of the tapered fingers of the diaphragm spring. When this happens, the diaphragm spring pulls the pressure plate away from the flywheel, thereby interrupting the flow of drive from the flywheel through the clutch disc to transmission input shaft.

**This page  
intentionally left  
blank.**



## Abbreviations and Meanings

| Abbreviation | Meaning   |
|--------------|---|
| <b>A</b>     |   |
| A            | Ampere(s)   |
| ABS          | Antilock Brake System   |
| A/C          | Air Conditioning  |
| AC           | Alternating Current   |
| ACC          | Accessory, Automatic Climate Control                          |
| ACL          | Air Cleaner   |
| ACR4         | Air Conditioning Refrigerant, Recovery, Recycling, Recharging |
| AD           | Automatic Disconnect  |
| A/D          | Analog to Digital   |
| ADL          | Automatic Door Lock   |
| A/F          | Air/Fuel Ratio  |
| AH           | Active Handling   |
| AIR          | Secondary Air Injection                                       |
| ALC          | Automatic Level Control, Automatic Lamp Control               |
| AM/FM        | Amplitude Modulation/Frequency Modulation                     |
| Ant          | Antenna   |
| AP           | Accelerator Pedal   |
| APCM         | Accessory Power Control Module                                |
| API          | American Petroleum Institute                                  |
| APP          | Accelerator Pedal Position                                    |
| APT          | Adjustable Part Throttle                                      |
| ASM          | Assembly, Accelerator and Servo Control Module                |
| ASR          | Acceleration Slip Regulation                                  |
| A/T          | Automatic Transmission/Transaxle                              |
| ATC          | Automatic Transfer Case, Automatic Temperature Control        |
| ATDC         | After Top Dead Center   |
| ATSLC        | Automatic Transmission Shift Lock Control                     |
| Auto         | Automatic   |
| avg          | Average   |
| A4WD         | Automatic Four-Wheel Drive                                    |
| AWG          | American Wire Gage  |
| <b>B</b>     |   |
| B+           | Battery Positive Voltage                                      |
| BARO         | Barometric Pressure   |
| BATT         | Battery   |
| BBV          | Brake Booster Vacuum  |
| BCA          | Bias Control Assembly   |
| BCM          | Body Control Module   |
| BHP          | Brake Horsepower  |
| BLK          | Black   |
| BLU          | Blue  |
| BP           | Back Pressure   |
| BPCM         | Battery Pack Control Module                                   |
| BPMV         | Brake Pressure Modulator Valve                                |
| BPP          | Brake Pedal Position  |
| BRN          | Brown   |

|                 |   |
|-----------------|---|
| BTDC            | Before Top Dead Center                            |
| BTM             | Battery Thermal Module                            |
| BTSI            | Brake Transmission Shift Interlock                |
| Btu             | British Thermal Units                             |
| <b>C</b>        |   |
| °C              | Degrees Celsius                                   |
| CAC             | Charge Air Cooler                                 |
| CAFE            | Corporate Average Fuel Economy                    |
| Cal             | Calibration                                       |
| Cam             | Camshaft  |
| CARB            | California Air Resources Board                    |
| CC              | Coast Clutch                                      |
| cm <sup>3</sup> | Cubic Centimeters                                 |
| CCM             | Convenience Charge Module, Chassis Control Module |
| CCOT            | Cycling Clutch Orifice Tube                       |
| CCP             | Climate Control Panel                             |
| CD              | Compact Disc                                      |
| CE              | Commutator End                                    |
| CEAB            | Cold Engine Air Bleed                             |
| CEMF            | Counter Electromotive Force                       |
| CEX             | Cabin Exchanger                                   |
| cfm             | Cubic Feet per Minute                             |
| cg              | Center of Gravity                                 |
| CID             | Cubic Inch Displacement                           |
| CKP             | Crankshaft Position                               |
| CKT             | Circuit   |
| C/Ltr           | Cigar Lighter                                     |
| CL              | Closed Loop                                       |
| CLS             | Coolant Level Switch                              |
| CMC             | Compressor Motor Controller                       |
| CMP             | Camshaft Position                                 |
| CNG             | Compressed Natural Gas                            |
| CO              | Carbon Monoxide                                   |
| CO <sub>2</sub> | Carbon Dioxide                                    |
| Coax            | Coaxial   |
| COMM            | Communication                                     |
| Conn            | Connector   |
| CPA             | Connector Position Assurance                      |
| CPP             | Clutch Pedal Position                             |
| CPS             | Central Power Supply                              |
| CPU             | Central Processing Unit                           |
| CRT             | Cathode Ray Tube                                  |
| CRTC            | Cathode Ray Tube Controller                       |
| CS              | Charging System                                   |
| CSFI            | Central Sequential Fuel Injection                 |
| CTP             | Closed Throttle Position                          |
| cu ft           | Cubic Foot/Feet                                   |
| cu in           | Cubic Inch/Inches                                 |
| CV              | Constant Velocity Joint                           |
| CVRSS           | Continuously Variable Road Sensing Suspension     |

| Cyl      | Cylinder(s)   |
|----------|---|
| <b>D</b> |   |
| DAB      | Delayed Accessory Bus                               |
| dB       | Decibels  |
| dBA      | Decibels on A-weighted Scale                        |
| DC       | Direct Current, Duty Cycle                          |
| DCM      | Door Control Module                                 |
| DE       | Drive End   |
| DEC      | Digital Electronic Controller                       |
| DERM     | Diagnostic Energy Reserve Module                    |
| DI       | Distributor Ignition                                |
| dia      | Diameter  |
| DIC      | Driver Information Center                           |
| Diff     | Differential  |
| DIM      | Dash Integration Module                             |
| DK       | Dark  |
| DLC      | Data Link Connector                                 |
| DMCM     | Drive Motor Control Module                          |
| DMM      | Digital Multimeter                                  |
| DMSDS    | Drive Motor Speed and Direction Sensor              |
| DMU      | Drive Motor Unit                                    |
| DOHC     | Dual Overhead Camshafts                             |
| DR, Drvr | Driver  |
| DRL      | Daytime Running Lamps                               |
| DTC      | Diagnostic Trouble Code                             |
| <b>E</b> |   |
| EBCM     | Electronic Brake Control Module                     |
| EBTCM    | Electronic Brake and Traction Control Module        |
| EC       | Electrical Center, Engine Control                   |
| ECC      | Electronic Climate Control                          |
| ECI      | Extended Compressor at Idle                         |
| ECL      | Engine Coolant Level                                |
| ECM      | Engine Control Module, Electronic Control Module    |
| ECS      | Emission Control System                             |
| ECT      | Engine Coolant Temperature                          |
| EEPROM   | Electrically Erasable Programmable Read Only Memory |
| EEVIR    | Evaporator Equalized Values in Receiver             |
| EFE      | Early Fuel Evaporation                              |
| EGR      | Exhaust Gas Recirculation                           |
| EGR TVV  | Exhaust Gas Recirculation Thermal Vacuum Valve      |
| EHPS     | Electro-Hydraulic Power Steering                    |
| EI       | Electronic Ignition                                 |
| ELAP     | Elapsed   |
| ELC      | Electronic Level Control                            |
| E/M      | English/Metric                                      |
| EMF      | Electromotive Force                                 |
| EMI      | Electromagnetic Interference                        |
| Eng      | Engine  |
| EOP      | Engine Oil Pressure                                 |
| EOT      | Engine Oil Temperature                              |

|          |  |
|----------|--|
| EPA      | Environmental Protection Agency  |
| EPR      | Exhaust Pressure Regulator   |
| EPROM    | Erasable Programmable Read Only Memory   |
| ESB      | Expansion Spring Brake   |
| ESC      | Electronic Suspension Control  |
| ESD      | Electrostatic Discharge  |
| ESN      | Electronic Serial Number   |
| ETC      | Electronic Throttle Control, Electronic Temperature Control, Electronic Timing Control |
| ETCC     | Electronic Touch Climate Control   |
| ETR      | Electronically Tuned Receiver  |
| ETS      | Enhanced Traction System   |
| EVAP     | Evaporative Emission   |
| EVO      | Electronic Variable Orifice  |
| Exh      | Exhaust  |
| <b>F</b> |  |
| °F       | Degrees Fahrenheit   |
| FC       | Fan Control  |
| FDC      | Fuel Data Center   |
| FED      | Federal All United States except California  |
| FEDS     | Fuel Enable Data Stream  |
| FEX      | Front Exchanger  |
| FF       | Flexible Fuel  |
| FFH      | Fuel-Fired Heater  |
| FI       | Fuel Injection   |
| FMVSS    | Federal U.S. Motor Vehicle Safety Standards  |
| FP       | Fuel Pump  |
| ft       | Foot/Feet  |
| FT       | Fuel Trim  |
| F4WD     | Full Time Four-Wheel Drive   |
| 4WAL     | Four-Wheel Antilock  |
| 4WD      | Four-Wheel Drive   |
| FW       | Flat Wire  |
| FWD      | Front Wheel Drive, Forward   |
| <b>G</b> |  |
| g        | Grams, Gravitational Acceleration  |
| GA       | Gage, Gauge  |
| gal      | Gallon   |
| gas      | Gasoline   |
| GCW      | Gross Combination Weight   |
| Gen      | Generator  |
| GL       | Gear Lubricant   |
| GM       | General Motors   |
| GM SPO   | General Motors Service Parts Operations  |
| gnd      | Ground   |
| gpm      | Gallons per Minute   |
| GRN      | Green  |
| GRY      | Gray   |
| GVWR     | Gross Vehicle Weight Rating  |

| H                 |                                      |
|-------------------|--------------------------------------|
| H                 | Hydrogen                             |
| H <sub>2</sub> O  | Water                                |
| Harn              | Harness                              |
| HC                | Hydrocarbons                         |
| H/CMPR            | High Compression                     |
| HD                | Heavy Duty                           |
| HDC               | Heavy Duty Cooling                   |
| hex               | Hexagon, Hexadecimal                 |
| Hg                | Mercury                              |
| Hi Alt            | High Altitude                        |
| HO <sub>2</sub> S | Heated Oxygen Sensor                 |
| hp                | Horsepower                           |
| HPL               | High Pressure Liquid                 |
| HPS               | High Performance System              |
| HPV               | High Pressure Vapor                  |
| HPVS              | Heat Pump Ventilation System         |
| Htd               | Heated                               |
| HTR               | Heater                               |
| HUD               | Head-up Display                      |
| HVAC              | Heater-Ventilation-Air Conditioning  |
| HVACM             | Heater-Vent-Air Conditioning Module  |
| HVIL              | High Voltage Interlock Loop          |
| HVM               | Heater Vent Module                   |
| Hz                | Hertz                                |
| I                 |                                      |
| IAC               | Idle Air Control                     |
| IAT               | Intake Air Temperature               |
| IC                | Integrated Circuit, Ignition Control |
| ICCS              | Integrated Chassis Control System    |
| ICM               | Ignition Control Module              |
| ID                | Identification, Inside Diameter      |
| IDI               | Integrated Direct Ignition           |
| IGBT              | Insulated Gate Bi-Polar Transistor   |
| ign               | Ignition                             |
| ILC               | Idle Load Compensator                |
| in                | Inch/Inches                          |
| INJ               | Injection                            |
| inst              | Instantaneous, Instant               |
| IP                | Instrument Panel                     |
| IPC               | Instrument Panel Cluster             |
| IPM               | Instrument Panel Module              |
| I/PEC             | Instrument Panel Electrical Center   |
| ISC               | Idle Speed Control                   |
| ISO               | International Standards Organization |
| ISS               | Input Speed Shaft, Input Shaft Speed |
| K                 |                                      |
| KAM               | Keep Alive Memory                    |
| KDD               | Keyboard Display Driver              |
| kg                | Kilogram                             |

|          |  |
|----------|--|
| kHz      | Kilohertz                                      |
| km       | Kilometer                                      |
| km/h     | Kilometers per Hour                            |
| km/l     | Kilometers per Liter                           |
| kPa      | Kilopascals                                    |
| KS       | Knock Sensor                                   |
| kV       | Kilovolts                                      |
| <b>L</b> |  |
| L        | Liter  |
| L4       | Four Cylinder Engine, In-Line                  |
| L6       | Six-Cylinder Engine, In-Line                   |
| lb       | Pound  |
| lb ft    | Pound Feet Torque                              |
| lb in    | Pound Inch Torque                              |
| LCD      | Liquid Crystal Display                         |
| LDCL     | Left Door Closed Locking                       |
| LDCM     | Left Door Control Module                       |
| LDM      | Lamp Driver Module                             |
| LED      | Light Emitting Diode                           |
| LEV      | Low Emissions Vehicle                          |
| LF       | Left Front                                     |
| lm       | Lumens   |
| LR       | Left Rear                                      |
| LT       | Left   |
| LT       | Light  |
| LT       | Long Term                                      |
| LTPI     | Low Tire Pressure Indicator                    |
| LTPWS    | Low Tire Pressure Warning System               |
| <b>M</b> |  |
| MAF      | Mass Air Flow                                  |
| Man      | Manual   |
| MAP      | Manifold Absolute Pressure                     |
| MAT      | Manifold Absolute Temperature                  |
| max      | Maximum  |
| M/C      | Mixture Control                                |
| MDP      | Manifold Differential Pressure                 |
| MFI      | Multiport Fuel Injection                       |
| mi       | Miles  |
| MIL      | Malfunction Indicator Lamp                     |
| min      | Minimum  |
| MIN      | Mobile Identification Number                   |
| mL       | Milliliter                                     |
| mm       | Millimeter                                     |
| mpg      | Miles per Gallon                               |
| mph      | Miles per Hour                                 |
| ms       | Millisecond                                    |
| MST      | Manifold Surface Temperature                   |
| MSVA     | Magnetic Steering Variable Assist, Magnasteer® |
| M/T      | Manual Transmission/Transaxle                  |
| MV       | Megavolt                                       |

| mV               | Millivolt                               |
|------------------|---|
| <b>N</b>         |   |
| NAES             | North American Export Sales             |
| NC               | Normally Closed                         |
| NEG              | Negative                                |
| Neu              | Neutral                                 |
| NI               | Neutral Idle                            |
| NiMH             | Nickel Metal Hydride                    |
| NLGI             | National Lubricating Grease Institute   |
| N·m              | Newton-meter Torque                     |
| NO               | Normally Open                           |
| NOx              | Oxides of Nitrogen                      |
| NPTC             | National Pipe Thread Coarse             |
| NPTF             | National Pipe Thread Fine               |
| NOVRAM           | Non-Volatile Random Access Memory       |
| <b>O</b>         |   |
| O <sub>2</sub>   | Oxygen                                  |
| O <sub>2</sub> S | Oxygen Sensor                           |
| OBD              | On-Board Diagnostics                    |
| OBD II           | On-Board Diagnostics Second Generation  |
| OC               | Oxidation Converter Catalytic           |
| OCS              | Opportunity Charge Station              |
| OD               | Outside Diameter                        |
| ODM              | Output Drive Module                     |
| ODO              | Odometer                                |
| OE               | Original Equipment                      |
| OEM              | Original Equipment Manufacturer         |
| OHC              | Overhead Camshaft                       |
| ohms             | Ohm                                     |
| OL               | Open Loop, Out of Limits                |
| ORC              | Oxidation Reduction Converter Catalytic |
| ORN              | Orange                                  |
| ORVR             | On-Board Refueling Vapor Recovery       |
| OSS              | Output Shaft Speed                      |
| oz               | Ounce(s)                                |
| <b>P</b>         |   |
| PAG              | Polyalkylene Glycol                     |
| PAIR             | Pulsed Secondary Air Injection          |
| PASS, PSGR       | Passenger                               |
| PASS-Key®        | Personalized Automotive Security System |
| P/B              | Power Brakes                            |
| PC               | Pressure Control                        |
| PCB              | Printed Circuit Board                   |
| PCM              | Powertrain Control Module               |
| PCS              | Pressure Control Solenoid               |
| PCV              | Positive Crankcase Ventilation          |
| PEB              | Power Electronics Bay                   |
| PID              | Parameter Identification                |
| PIM              | Power Inverter Module                   |
| PM               | Permanent Magnet Generator              |

|          |  |
|----------|--|
| P/N      | Part Number  |
| PNK      | Pink   |
| PNP      | Park/Neutral Position  |
| PRNDL    | Park, Reverse, Neutral, Drive, Low   |
| POA      | Pilot Operated Absolute Valve  |
| POS      | Positive, Position   |
| POT      | Potentiometer Variable Resistor  |
| PPL      | Purple   |
| ppm      | Parts per Million  |
| PROM     | Programmable Read Only Memory  |
| P/S, PS  | Power Steering   |
| PSCM     | Power Steering Control Module, Passenger Seat Control Module                                       |
| PSD      | Power Sliding Door   |
| PSP      | Power Steering Pressure  |
| psi      | Pounds per Square Inch   |
| psia     | Pounds per Square Inch Absolute  |
| psig     | Pounds per Square Inch Gauge   |
| pt       | Pint   |
| PTC      | Positive Temperature Coefficient   |
| PWM      | Pulse Width Modulated  |
| <b>Q</b> |  |
| QDM      | Quad Driver Module   |
| qt       | Quart(s)   |
| <b>R</b> |  |
| R-12     | Refrigerant-12   |
| R-134a   | Refrigerant-134a   |
| RAM      | Random Access Memory, Non-permanent memory device, memory contents are lost when power is removed. |
| RAP      | Retained Accessory Power   |
| RAV      | Remote Activation Verification   |
| RCDLR    | Remote Control Door Lock Receiver  |
| RDCM     | Right Door Control Module  |
| Ref      | Reference  |
| Rev      | Reverse  |
| REX      | Rear Exchanger   |
| RIM      | Rear Integration Module  |
| RF       | Right Front, Radio Frequency   |
| RFA      | Remote Function Actuation  |
| RFI      | Radio Frequency Interference   |
| RH       | Right Hand   |
| RKE      | Remote Keyless Entry   |
| Rly      | Relay  |
| ROM      | Read Only Memory, Permanent memory device, memory contents are retained when power is removed.     |
| RPM      | Revolutions per Minute Engine Speed  |
| RPO      | Regular Production Option  |
| RR       | Right Rear   |
| RSS      | Road Sensing Suspension  |
| RTD      | Real Time Damping  |
| RT       | Right  |



|                        |  |
|------------------------|--|
| RTV                    | Room Temperature Vulcanizing Sealer                        |
| RWAL                   | Rear Wheel Antilock  |
| RWD                    | Rear Wheel Drive   |
| <b>S</b>               |  |
| s                      | Second(s)  |
| SAE                    | Society of Automotive Engineers                            |
| SC                     | Supercharger   |
| SCB                    | Supercharger Bypass  |
| SCM                    | Seat Control Module  |
| SDM                    | Sensing and Diagnostic Module                              |
| SEO                    | Special Equipment Option                                   |
| SFI                    | Sequential Multiport Fuel Injection                        |
| SI                     | System International Modern Version of Metric System       |
| SIAB                   | Side Impact Air Bag  |
| SIR                    | Supplemental Inflatable Restraint                          |
| SLA                    | Short/Long Arm Suspension                                  |
| sol                    | Solenoid   |
| SO <sub>2</sub>        | Sulfur Dioxide   |
| SP                     | Splice Pack  |
| S/P                    | Series/Parallel  |
| SPO                    | Service Parts Operations                                   |
| SPS                    | Service Programming System, Speed Signal                   |
| sq ft, ft <sup>2</sup> | Square Foot/Feet   |
| sq in, in <sup>2</sup> | Square Inch/Inches   |
| SRC                    | Service Ride Control                                       |
| SRI                    | Service Reminder Indicator                                 |
| SRS                    | Supplemental Restraint System                              |
| SS                     | Shift Solenoid   |
| ST                     | Scan Tool  |
| STID                   | Station Identification Station ID                          |
| S4WD                   | Selectable Four-Wheel Drive                                |
| Sw                     | Switch   |
| SWPS                   | Steering Wheel Position Sensor                             |
| syn                    | Synchronizer   |
| <b>T</b>               |  |
| TAC                    | Throttle Actuator Control                                  |
| Tach                   | Tachometer   |
| TAP                    | Transmission Adaptive Pressure, Throttle Adaptive Pressure |
| TBI                    | Throttle Body Fuel Injection                               |
| TC                     | Turbocharger, Transmission Control                         |
| TCC                    | Torque Converter Clutch                                    |
| TCS                    | Traction Control System                                    |
| TDC                    | Top Dead Center  |
| TEMP                   | Temperature  |
| Term                   | Terminal   |
| TFP                    | Transmission Fluid Pressure                                |
| TFT                    | Transmission Fluid Temperature                             |
| THM                    | Turbo Hydro-Matic  |
| TIM                    | Tire Inflation Monitoring, Tire Inflation Module           |
| TOC                    | Transmission Oil Cooler                                    |

|          |   |
|----------|---|
| TP       | Throttle Position                               |
| TPA      | Terminal Positive Assurance                     |
| TPM      | Tire Pressure Monitoring, Tire Pressure Monitor |
| TR       | Transmission Range                              |
| TRANS    | Transmission/Transaxle                          |
| TT       | Tell Tail Warning Lamp                          |
| TV       | Throttle Valve                                  |
| TVRS     | Television and Radio Suppression                |
| TVV      | Thermal Vacuum Valve                            |
| TWC      | Three Way Converter Catalytic                   |
| TWC+OC   | Three Way + Oxidation Converter Catalytic       |
| TXV      | Thermal Expansion Valve                         |
| <b>U</b> |   |
| UART     | Universal Asynchronous Receiver Transmitter     |
| U/H      | Underhood                                       |
| U/HEC    | Underhood Electrical Center                     |
| U-joint  | Universal Joint                                 |
| UTD      | Universal Theft Deterrent                       |
| UV       | Ultraviolet                                     |
| <b>V</b> |   |
| V        | Volt(s), Voltage                                |
| V6       | Six-Cylinder Engine, V-Type                     |
| V8       | Eight-Cylinder Engine, V-Type                   |
| Vac      | Vacuum  |
| VAC      | Vehicle Access Code                             |
| VATS     | Vehicle Anti-Theft System                       |
| VCIM     | Vehicle Communication Interface Mode            |
| VCM      | Vehicle Control Module                          |
| V dif    | Voltage Difference                              |
| VDOT     | Variable Displacement Orifice Tube              |
| VDV      | Vacuum Delay Valve                              |
| vel      | Velocity  |
| VES      | Variable Effort Steering                        |
| VF       | Vacuum Fluorescent                              |
| VIO      | Violet  |
| VIN      | Vehicle Identification Number                   |
| VLR      | Voltage Loop Reserve                            |
| VMV      | Vacuum Modulator Valve                          |
| VR       | Voltage Regulator                               |
| V ref    | Voltage Reference                               |
| VSES     | Vehicle Stability Enhancement System            |
| VSS      | Vehicle Speed Sensor                            |
| <b>W</b> |   |
| w/       | With  |
| W/B      | Wheel Base                                      |
| WHL      | Wheel   |
| WHT      | White   |
| w/o      | Without   |
| WOT      | Wide Open Throttle                              |
| W/P      | Water Pump                                      |

|          |                                       |
|----------|---------------------------------------|
| W/S      | Windshield                            |
| WSS      | Wheel Speed Sensor                    |
| WU-OC    | Warm Up Oxidation Converter Catalytic |
| WU-TWC   | Warm Up Three-Way Converter Catalytic |
| <b>X</b> |                                       |
| X-valve  | Expansion Valve                       |
| <b>Y</b> |                                       |
| yd       | Yard(s)                               |
| YEL      | Yellow                                |

**This page  
intentionally left  
blank.**

## Conversion - English/Metric

| English   | Multiply/ Divide by | Metric        |
|---|---------------------|---------------|
| In order to calculate English measurement, divide by the number in the center column.<br>In order to calculate metric measurement, multiply by the number in the center column. |                     |               |
| Length  |                     |               |
| in  | 25.4                | mm            |
| ft  | 0.3048              | m             |
| yd  | 0.9144              |               |
| mi  | 1.609               | km            |
| Area  |                     |               |
| sq in   | 645.2               | sq mm         |
|   | 6.45                | sq cm         |
| sq ft   | 0.0929              | sq m          |
| sq yd   | 0.8361              |               |
| Volume  |                     |               |
| cu in   | 16,387.00           | cu mm         |
|   | 16.387              | cu cm         |
|   | 0.0164              | L             |
| qt  | 0.9464              |               |
| gal   | 3.7854              |               |
| cu yd   | 0.764               | cu m          |
| Mass  |                     |               |
| lb  | 0.4536              | kg            |
| ton   | 907.18              |               |
|   | 0.907               | tonne (t)     |
| Force   |                     |               |
| Kg F  | 9.807               | newtons (N)   |
| oz F  | 0.278               |               |
| lb F  | 4.448               |               |
| Acceleration  |                     |               |
| ft/s²   | 0.3048              | m/s²          |
| ln/s²   | 0.0254              |               |
| Torque  |                     |               |
| Lb in   | 0.11298             | N·m           |
| lb ft   | 1.3558              |               |
| Power   |                     |               |
| hp  | 0.745               | kW            |
| Pressure (Stress)   |                     |               |
| inches of H2O   | 0.2488              | kPa           |
| lb/sq in  | 6.895               |               |
| Energy (Work)   |                     |               |
| Btu   | 1055                | J (J= one Ws) |
| lb ft   | 1.3558              |               |
| kW hour   | 3,600,000.00        |               |
| Light   |                     |               |
| Foot Candle   | 10.764              | lm/m²         |

| Velocity         |        |               |
|------------------|--------|---------------|
| mph              | 1.6093 | km/h          |
| Temperature      |        |               |
| (°F - 32) 5/9    | =      | °C            |
| °F               | =      | (9/5 °C + 32) |
| Fuel Performance |        |               |
| 235.215/mpg      | =      | 100 km/L      |

### Equivalents - Decimal and Metric

| Fraction (in) | Decimal (in) | Metric (mm) |
|---------------|--------------|-------------|
| 1/64          | 0.015625     | 0.39688     |
| 1/32          | 0.03125      | 0.79375     |
| 3/64          | 0.046875     | 1.19062     |
| 1/16          | 0.0625       | 1.5875      |
| 5/64          | 0.078125     | 1.98437     |
| 3/32          | 0.09375      | 2.38125     |
| 7/64          | 0.109375     | 2.77812     |
| 1/8           | 0.125        | 3.175       |
| 9/64          | 0.140625     | 3.57187     |
| 5/32          | 0.15625      | 3.96875     |
| 11/64         | 0.171875     | 4.36562     |
| 3/16          | 0.1875       | 4.7625      |
| 13/64         | 0.203125     | 5.15937     |
| 7/32          | 0.21875      | 5.55625     |
| 15/64         | 0.234375     | 5.95312     |
| 1/4           | 0.25         | 6.35        |
| 17/64         | 0.265625     | 6.74687     |
| 9/32          | 0.28125      | 7.14375     |
| 19/64         | 0.296875     | 7.54062     |
| 5/16          | 0.3125       | 7.9375      |
| 21/64         | 0.328125     | 8.33437     |
| 11/32         | 0.34375      | 8.73125     |
| 23/64         | 0.359375     | 9.12812     |
| 3/8           | 0.375        | 9.525       |
| 25/64         | 0.390625     | 9.92187     |
| 13/32         | 0.40625      | 10.31875    |
| 27/64         | 0.421875     | 10.71562    |
| 7/16          | 0.4375       | 11.1125     |
| 29/64         | 0.453125     | 11.50937    |
| 15/32         | 0.46875      | 11.90625    |
| 31/64         | 0.484375     | 12.30312    |
| 1/2           | 0.5          | 12.7        |
| 33/64         | 0.515625     | 13.09687    |
| 17/32         | 0.53125      | 13.49375    |
| 35/64         | 0.546875     | 13.89062    |
| 9/16          | 0.5625       | 14.2875     |
| 37/64         | 0.578125     | 14.68437    |
| 19/32         | 0.59375      | 15.08125    |
| 39/64         | 0.609375     | 15.47812    |
| 5/8           | 0.625        | 15.875      |
| 41/64         | 0.640625     | 16.27187    |

| Fraction (in) | Decimal (in) | Metric (mm) |
|---------------|--------------|-------------|
| 21/32         | 0.65625      | 16.66875    |
| 43/64         | 0.671875     | 17.06562    |
| 11/16         | 0.6875       | 17.4625     |
| 45/64         | 0.703125     | 17.85937    |
| 23/32         | 0.71875      | 18.25625    |
| 47/64         | 0.734375     | 18.65312    |
| 3/4           | 0.75         | 19.05       |
| 49/64         | 0.765625     | 19.44687    |
| 25/32         | 0.78125      | 19.84375    |
| 51/64         | 0.796875     | 20.24062    |
| 13/16         | 0.8125       | 20.6375     |
| 53/64         | 0.828125     | 21.03437    |
| 27/32         | 0.84375      | 21.43125    |
| 55/64         | 0.859375     | 21.82812    |
| 7/8           | 0.875        | 22.225      |
| 57/64         | 0.890625     | 22.62187    |
| 29/32         | 0.90625      | 23.01875    |
| 59/64         | 0.921875     | 23.41562    |
| 15/16         | 0.9375       | 23.8125     |
| 61/64         | 0.953125     | 24.20937    |
| 31/32         | 0.96875      | 24.60625    |
| 63/64         | 0.984375     | 25.00312    |
| 1             | 1.0          | 25.4        |

**This page  
intentionally left  
blank.**



## Fasteners


### Metric Fasteners

This vehicle provides fastener dimensions using the metric system. Most metric fasteners are approximate in diameter to equivalent English fasteners. Make replacements using fasteners of the same nominal diameter, thread pitch, and strength.

A number marking identifies the OE metric fasteners except cross-recess head screws. The number also indicates the strength of the fastener material. A Posidrive® or Type 1A cross-recess identifies a metric cross-recess screw. For best results, use a Type 1A cross-recess screwdriver, or equivalent, in Posidrive® recess head screws.

GM Engineering Standards and North American Industries have adopted a portion of the ISO-defined standard metric fastener sizes. The purpose was to reduce the number of fastener sizes used while retaining the best thread qualities in each thread size. For example, the metric M6.0 X 1 screw, with nearly the same diameter and 25.4 threads per inch replaced the English 1/4-20 and 1/4-28 screws. The thread pitch is midway between the English coarse and fine thread pitches.

### Fastener Strength Identification

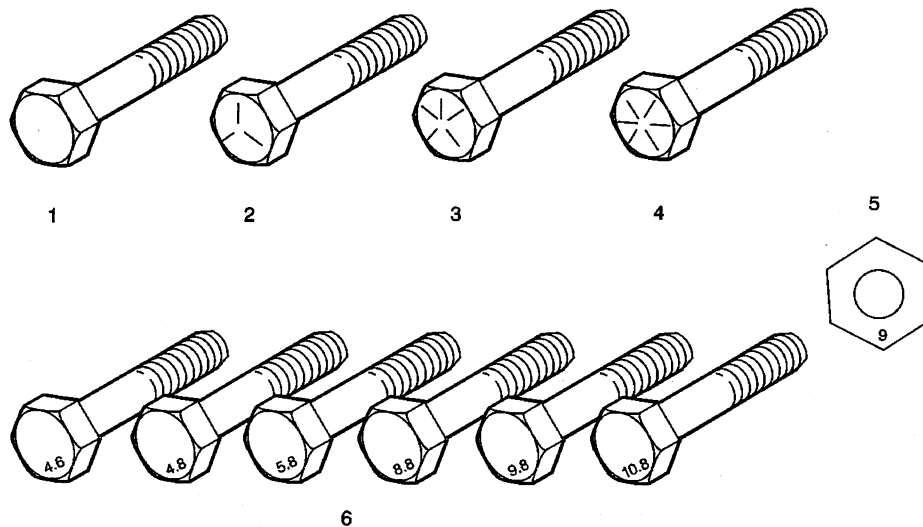

1. English Bolt, Grade 2 (Strength Class)
2. English Bolt, Grade 5 (Strength Class)
3. English Bolt, Grade 7 (Strength Class)
4. English Bolt, Grade 8 (Strength Class)
5. Metric Nut, Strength Class 9
6. Metric Bolts, Strength Class Increases as Numbers Increase

The most commonly used metric fastener strength property classes are 9.8 and 10.9. The class identification is embossed on the head of each bolt. The English, inch strength classes range from grade 2 to grade 8. Radial lines are embossed on the head of each bolt in order to identify the strength class. The number of lines on the head of the bolt is 2 lines less than the actual grade. For example, a grade 8 bolt will have 6 radial lines on the bolt head. Some metric nuts are marked with a single digit strength identification number on the nut face.

The correct fasteners are available through GM SPO. Many metric fasteners available in the aftermarket parts channels are designed to metric standards of countries other than the United States, and may exhibit the following:

- Lower strength
- No numbered head marking system
- Wrong thread pitch

The metric fasteners on GM products are designed to new, international standards. The following are the common sizes and pitches, except for special applications:

- M6.0 X 1
- M8 X 1.25
- M10 X 1.5
- M12 X 1.75
- M14 X 2.00
- M16 X 2.00

### Prevailing Torque Fasteners

Prevailing torque fasteners create a thread interface between the fastener and the fastener counterpart in order to prevent the fastener from loosening.

#### All Metal Prevailing Torque Fasteners


These fasteners accomplish the thread interface by a designed distortion or deformation in the fastener.

#### Nylon Interface Prevailing Torque Fasteners

These fasteners accomplish the thread interface by the presence of a nylon material on the fastener threads.

#### Adhesive Coated Fasteners

These fasteners accomplish the thread interface by the presence of a thread-locking compound on the fastener threads. Refer to the appropriate repair procedure in order to determine if the fastener may be reused and the applicable thread-locking compound to apply to the fastener.

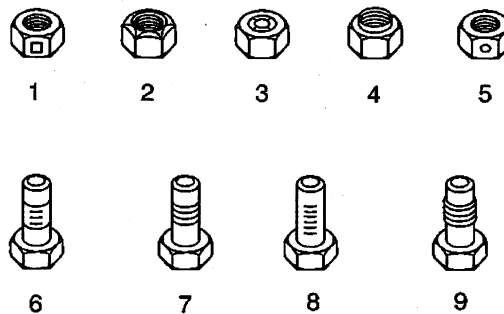

1. Prevailing Torque Nut, Center Lock Type
2. Prevailing Torque Nut, Top Lock Type
3. Prevailing Torque Nut, Nylon Patch Type
4. Prevailing Torque Nut, Nylon Washer Insert Type
5. Prevailing Torque Nut, Nylon Insert Type

6. Prevailing Torque Bolt, Dry Adhesive Coating Type
7. Prevailing Torque Bolt, Thread Profile Deformed Type
8. Prevailing Torque Bolt, Nylon Strip Type
9. Prevailing Torque Bolt, Out-of-Round Thread Area Type

A prevailing torque fastener may be reused ONLY if:

- The fastener and the fastener counterpart are clean and not damaged
- There is no rust on the fastener
- The fastener develops the specified minimum torque against its counterpart prior to the fastener seating

### Metric Prevailing Torque Fastener Minimum Torque Development

| Application  | Specification |          |
|--|---------------|----------|
|  | Metric        | English  |
| <b>All Metal Prevailing Torque Fasteners</b>       |               |          |
| 6 mm   | 0.4 N·m       | 4 lb in  |
| 8 mm   | 0.8 N·m       | 7 lb in  |
| 10 mm  | 1.4 N·m       | 12 lb in |
| 12 mm  | 2.1 N·m       | 19 lb in |
| 14 mm  | 3 N·m         | 27 lb in |
| 16 mm  | 4.2 N·m       | 37 lb in |
| 20 mm  | 7 N·m         | 62 lb in |
| 24 mm  | 10.5 N·m      | 93 lb in |
| <b>Nylon Interface Prevailing Torque Fasteners</b> |               |          |
| 6 mm   | 0.3 N·m       | 3 lb in  |
| 8 mm   | 0.6 N·m       | 5 lb in  |
| 10 mm  | 1.1 N·m       | 10 lb in |
| 12 mm  | 1.5 N·m       | 13 lb in |
| 14 mm  | 2.3 N·m       | 20 lb in |
| 16 mm  | 3.4 N·m       | 30 lb in |
| 20 mm  | 5.5 N·m       | 49 lb in |
| 24 mm  | 8.5 N·m       | 75 lb in |

**English Prevailing Torque Fastener Minimum Torque Development**

| Application  | Specification |            |
|--|---------------|------------|
|  | Metric        | English    |
| <b>All Metal Prevailing Torque Fasteners</b>       |               |            |
| 1/4 in   | 0.5 N·m       | 4.5 lb in  |
| 5/16 in  | 0.8 N·m       | 7.5 lb in  |
| 3/8 in   | 1.3 N·m       | 11.5 lb in |
| 7/16 in  | 1.8 N·m       | 16 lb in   |
| 1/2 in   | 2.3 N·m       | 20 lb in   |
| 9/16 in  | 3.2 N·m       | 28 lb in   |
| 5/8 in   | 4 N·m         | 36 lb in   |
| 3/4 in   | 7 N·m         | 54 lb in   |
| <b>Nylon Interface Prevailing Torque Fasteners</b> |               |            |
| 1/4 in   | 0.3 N·m       | 3 lb in    |
| 5/16 in  | 0.6 N·m       | 5 lb in    |
| 3/8 in   | 1 N·m         | 9 lb in    |
| 7/16 in  | 1.3 N·m       | 12 lb in   |
| 1/2 in   | 1.8 N·m       | 16 lb in   |
| 9/16 in  | 2.5 N·m       | 22 lb in   |
| 5/8 in   | 3.4 N·m       | 30 lb in   |
| 3/4 in   | 5 N·m         | 45 lb in   |